



LED WATCH INSTRUCTION MANUAL

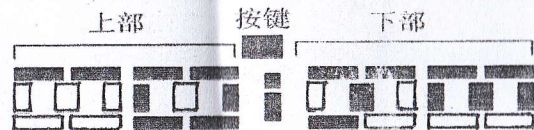

time:10:43

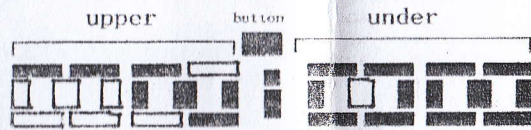

Date:month

看时间和日期:

- 1.手表处于静态时 (没有灯亮), 轻按按键一次,手表灯亮,显示时间,上部两个字符表示小时,下部两个字符表示分钟;
- 2.手表处于静态时 (没有灯亮), 轻按按键两次,手表灯亮,显示日期,上部两个字符表示月,下部两个字符表示日.

设置时间:

- 1.手表处于静态 (没有灯亮) 轻按按键一次手表灯亮显示时间;
- 2.按住按键6秒后松开, 上部两个字符(表示小时)闪烁,此时可以校对小时;
- 3.轻按按键, 调整小时,每按一次增加一小时;
- 4.按住按键6秒后松开,下部两个字符(表示分钟)闪烁,此时可以校对分钟;
- 5.轻按按键,调整分钟,每按一次增加一分钟;

设置日期:

- 1.当时间调校完成后, 可以接着进行日期的设置;
- 2.按住按键6秒后松开, 上部两个字符(表示月)闪烁,此时可以校对月;
- 3.轻按按键,调整月,每按一次增加一月;
- 4.按住按键6秒后松开, 下部两个字符(表示日)闪烁,此时可以校对日;
- 5.轻按按键,调整日,每按一次增加一日;
- 6.当完成调校后, 按住按键3秒, 手表自动退出设置.

Display time and date:

1. The watch is in quiescent state, press the button once and the watch will light. It display time now, the upper two numbers show HOURS, and the lower two numbers show MINUTES.
2. the watch is in quiescent state, press the button twice and the watch will light. It display date now, the upper two numbers show MONTHS, and the lower two numbers show DAYS.

Set time:

1. The watch is in quiescent state, press the button once and the watch will light. It display time now.
2. Hold the button until the upper two numbers (they indicate HOURS) are blinking, then release the button.
3. Press the button to adjust the HOURS. Press the button once and increase one hour.
4. Hold the button until the lower two numbers (they indicate MINUTES) are blinking, then release the button.
5. Press the button to adjust the MINUTES. Press the button once and increase one minute.

Set date:

1. When the time adjustment is completed, you can then set the date when the line.
2. Hold down the button for 6 seconds after the release, the top two characters (that month) flashes, a time to proofread months;
3. the touch buttons, adjust the month, January, each time increasing
4. and then hold down the button for 6 seconds after the release, the lower part of the two characters (that day) flash, a time to proof read
5. the touch buttons, adjusting the day, each time the increase in day.
6. when the completion of adjustment, hold down the button for 3 seconds, the watch automatically exits the setting.