

READING THE TIME

Press Button A once to view the TIME.
 Read the first column.
 The first 12 lights show the HOUR.1-12
 The bottom light shows AM when lit. Example shows 06AM
 Read the second column.
 The first 5 lights show MINUTES in ten min units
 10-20-30-40-50. example shows 20 minutes.
 The following 9 lights show MINUTES
 units. 1-2-3-4-5-(5+1)-(5+2)-(5+3)-(5+4) example shows 8 minutes.
 Add the 2 numbers together for the total minutes
 Example shows 28 minutes

 
 
READING THE DATE

Press Button A twice to view the DATE.
 Read the first column.
 The first 12 lights show the MONTH.1-12
 The bottom light indicates Viewing DATE mode.
 Read the second column.
 The first 3 lights show the DAYS in ten day units.
 10th-20th-30th. example shows 20th day.
 The following 9 lights show days
 1-2-3-4-5-(5+1)-(5+2)-(5+3)-(5+4) example shows 8th day.
 Add the 2 numbers together for the correct day of the month.
 Example shows 28th day in June.

SETTING THE TIME & DATE

Press button A to illuminate the TIME
 Press button B to enter setting mode.
 Press A to advance the HOUR.
 Press B to set HOUR and enter MINUTE mode.
 Note: AM/PM Indicator will light at twelve AM.
 Press A to advance the MINUTE.
 Press B to set MINUTE and enter MONTH mode.
 Press A to advance the MONTH.
 Press B to set MONTH and enter DATE mode.
 Press A to advance the DATE.
 Press B to set DATE and EXIT the setting mode.

DISPLAY

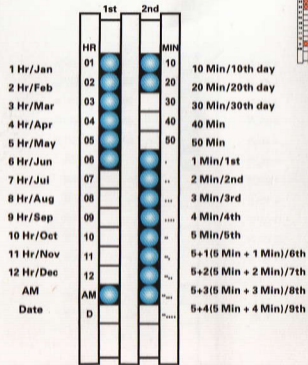

LED brightness adjustment:

1) Normal time mode, press the B button, when the "AM" and "0" lamp is lit at the same time, press the A button at this time can be adjusted LED brightness. At this time press the B button, 01 to 12 of 12 lamps lit at the same time, press the A button, then can adjust the date LED brightness,, is divided into five, general use of Level 3.

LED watch Instruction Manual

時間和日期設置

按 A 鍵顯示時間

按 B 鍵進入時間調制模式

按 A 鍵調制小時

按 B 鍵調制進入分鐘調制模式

注：中午12點 AM/PM 燈會亮

 
 
按 A 鍵調制分鐘

按 B 鍵進入分鐘和月份調制模式

按 A 鍵調制月份

按 B 鍵調制日期及退出調制模式

显示

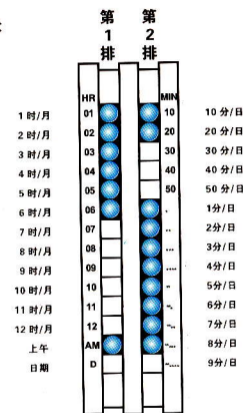

時間

- ★ 按 A 鍵1次顯示時間
- ★ 第1排顯示小時，依次為1-12
- ★ AM表示上午，圖示為“上午6點”
- ★ 第2排表示分鐘，前面5個燈分別表示10、20、30、40、50分
- ★ 圖示顯示為20分
- ★ 接下來的9個燈分別表示1.2.3.4.5.6.7.9.分鐘
- ★ 把兩部分燈表示的數相加得分鐘，圖示為20+8=28分鐘

日期

- 連按 A 鍵顯示日期
- 第1排12個燈分別表示1-12月
- 最後一個燈亮進入日期模式
- 第2排前3個燈分別表示第10.20.30日
- 圖示為第20日
- 接下來9個燈分別表示1.2.3.4.5.6.7.8.9日
- 圖示為6月28日