

Manual necklace pocket watch

FEATURES:

1. Real time display , in Hour:Minute, 12/24 hour format.
2. Calendar display in Month:Date(from 2008 to 2049)
3. Dance mode
4. Happy hour animation

DISPLAY:



Time Mode(23:59)



Calendar mode(Feb 18)



Dance mode

OPERATION:

1. The display is off mode when no button is pressed
2. Flip the picture for over 30 degrees from bottom to top to activate and show Time and Calendar display. Sequences is as below: Off mode—(flip the unit)—Time display(time display will hold for 2 seconds)—Calendar display(Calendar display will hold for 2seconds)—off
3. Press (KEY) once to start/stop the Dance Mode, the display will show an animation for around 2 minutes.
2. Kinds of dance mode can be selected in setting mode:
 - a. Standard dance mode: Five different animation options, user can select in the setting mode. the animation will repeat for 2 minutes when KEY is pressed once.
 - b. Random dance mode: It repeats randomly among 5 animations in 2 minutes when Key is pressed once. This mode is selected when the setting is "Random" in any dance mode, the display will be turned off for around 3 sec after played one of the 5 animation

SETTING:

1. Hold (KEY) for over 3 seconds to enter setting mode
2. Press (KEY) over to increase the value.
3. Hold (KEY) over 3 seconds to confirm and go for the next item setting.
4. Setting sequence : 12/24hr display format—hour—minute—year—month—day—dance Animation
Option(All, DA-01 to DA-05: All for random)—Exit
5. the second will be automatically reset to zero when minute digit is being adjusted
6. when no key has been pressed for 30 seconds, the setting will be saved automatically and exit the setting mode.

HAPPY HOUR ANIMATION:

1. Happy hour Animation will be when the below 2 conditions are both fulfilled
 - 1) the time has reached 9:00pm, 10:00pm, 12:00am, 1:00am, 2:00am
 - 2) the key is pressed in any of the 24 hours time period.

BATTERY REPLACEMENT:

1. When the display becomes dim or with no display, it is time to replace the battery.
2. Pull out the battery drawer, wait for 10 seconds for fully discharge of the remaining energy. then replace a CR2016 or equivalent battery with positive pole facing down.
3. Push the battery drawer back to original position
4. Reset the time and calendar

WARNING:

By using this or any other timepieces, it is fully understood that the timepieces contains small removable and non removable parts that could become a CHOKING HAZARD. it is not intended for children under 6 years of age.