 


## 2.5" HDD Media Player

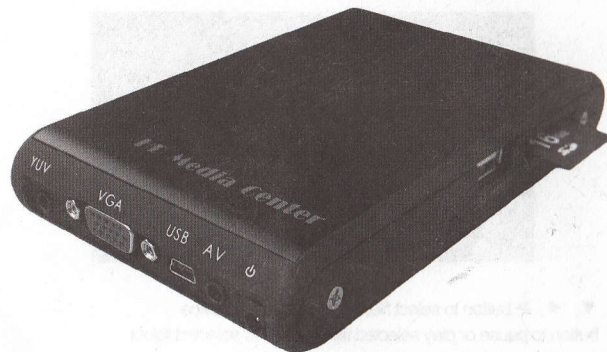 


**HDD Media Center** is a Multi-media player which can read Internal HDD, USB Drive, External HDD and SD/MMC/MS card, decode the content included, and then output with Component (YPbPr), VGA or AV on your TV or monitors.

1

## Part II Installation & Connections

### 2.1 Main Unit

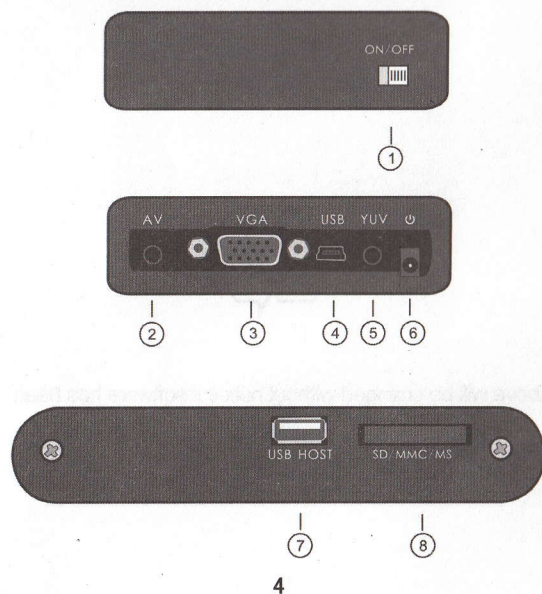

4

## Part I Feature list

### 1.1 Interface

#### SATA

Support internal 2.5 inch HDD, FAT32 & NTFS file system

#### USB Host

USB 2.0 with OTG; High speed (480M bps) & full (12M bps)

Support USB drive, external HDD (FAT32 & NTFS file system)

#### 3 in 1 Card Reader

Support SD, MMC and MS card.

#### USB Device

Support connection with computers.

### 1.2 Format

#### Supported codec:

DivX, Xvid, MPEG1, MPEG2, MPEG4

#### Supported file formats:

DAT, AVI, VOB, MPG, MPEG, MP4, MP3, WMA, JPG

### 1.3 Video Output

Composite (AV)

Component (YPbPr, YUV) and VGA.

2

1) Power ON / OFF switch

2) AV port

3) VGA port

4) USB SLAVE port


5) Component port

6) Power supply jack

7) USB Host port


8) SD / MMC / MS card slot

### 2.2 Installation of Internal HDD

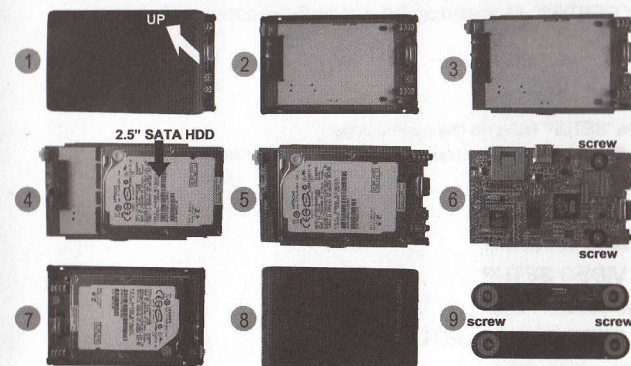


5

### 1.4 Included:

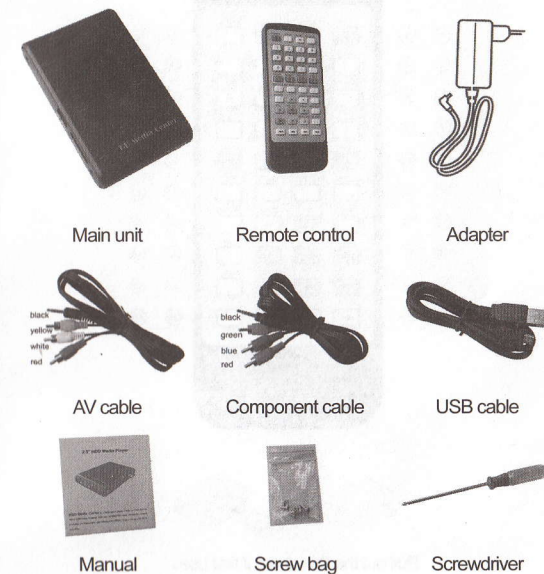

3


### 2.3 Connections of Main Unit

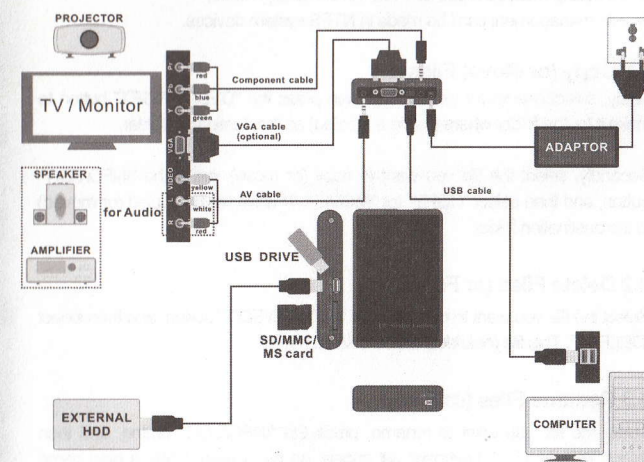 

6



## 2.4 Remote

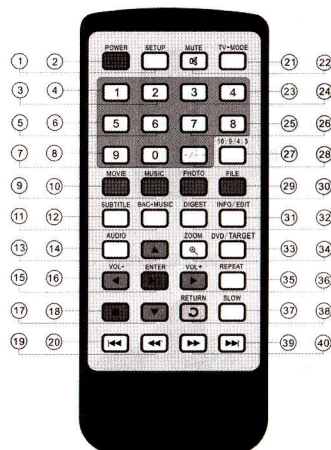

Pull out the thin sheet if first use.

7

## Part IV File Management

### NOTES:

- ◆ All editing must be made at "FILE" (or file library) mode;
- ◆ File management can't be made in NTFS system devices.

### 4.1 Copy (or Move) Files

Firstly, select one folder (or file) and then press the "DVD/TARGET" button to make it (or the folder where the file is located) as the destination folder.

Secondly, select the file you want to copy (or move), press the "INFO/EDIT" button, and then select "COPY" (or "MOVE"). This file will be copied (or moved) to the destination folder.

### 4.2 Delete Files (or Folder)

Select the file you want to delete, press the "INFO/EDIT" button, and then select "DELETE". This file (or folder) will be deleted soon.

### 4.3 Rename Files (or Folder)

Select the file you want to rename, press the "INFO/EDIT" button, and then select "RENAME". A keyboard will appear on the screen. Enter a new name with the direction keys, and then press "STOP" key (marked with "■") on the remote to finish the rename.

10

- 1) Setup
- 2) Power
- 3) Figure Key "2"
- 4) Figure Key "1"
- 5) Figure Key "6"
- 6) Figure Key "5"
- 7) Figure Key "0"
- 8) Figure Key "9"
- 9) Browsing Music
- 10) Browsing Movies
- 11) Background Music
- 12) Subtitle
- 13) Direction Key "UP"
- 14) Audio
- 15) Enter; Player / Pause
- 16) Direction Key "left"; Volume Down
- 17) Direction Key "down"
- 18) Stop
- 19) Fast Forward
- 20) Previous
- 21) Output Resolution: SD, 720p or 1080i
- 22) Mute
- 23) Figure Key "4"
- 24) Figure Key "3"
- 25) Figure Key "8"
- 26) Figure Key "7"
- 27) Aspect Ratio: 4:3 / 16:9
- 28) Timing
- 29) Browsing All Files
- 30) Browsing Photos
- 31) Information; Edit Key
- 32) Photo Digest
- 33) DVD Mode; Copy Target
- 34) Zoom
- 35) Repeat Mode
- 36) Direction Key "right" / Volume Up
- 37) Slow down
- 38) Return
- 39) Next
- 40) Fast Backward

8

## 4.4 Create New Folders

Enter into a folder where you want to create a new folder, press the "INFO/EDIT" button, and then select "NEW FOLDER". A keyboard will appear on the screen. Enter a name for the new folder with the direction keys, and then press "STOP" key (marked with "■") to finish the name. And lastly a new folder will be created.

## 4.5 Check Properties

Select the file you want to check, press the "INFO/EDIT" button, and then select "PROPERTIES". All detailed properties of the file will appear on the screen.

## Part V Setup

Press "SETUP" button to enter Setup page.

▲, ▼, ◀, ▶ and ►| button to select item and confirm the value.

### 5.1 PHOTO SETUP

Transition, Interval time

### 5.2 VIDEO SETUP

Video Output, TV Display, TV Type and Resolution

 
### 5.3 PREFERENCE SETUP

OSD Language, File Sorting, Auto Play and Defaults

11

## Part III Playback


Power on the unit, and then 1) it will auto play (Boot Priority: card, then USB drive, and last internal HDD); or 2) the screen will show following main page:

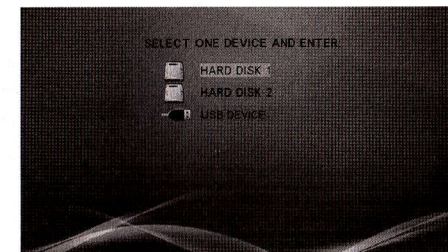

- ▲, ▼, ◀, ▶ button to select file, folder or storage device
- | button to pause or play selected file; to enter to selected folder
- button to stop playing current file
- ◀ button to return to parent directory or the main page
- ◀, ▶ button to decrease / increase volume during movie or music playback

You can enter into "MOVIE", "MUSIC", "PHOTO" or "FILE" mode by the shortcut button with same name on the remote control.

 9

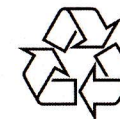

Above will be changed without notice if software has been upgraded.

12