


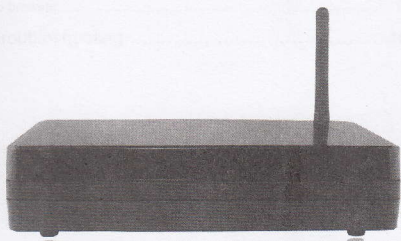

Android Media Box

The best home media center make your life wonderful.
Watch 1920x1080 Full HD quality video and various
image formats on your TV
The most strongest and powerful CPU make
online streaming seamless.





Contents

| | |
|---|----|
| ONE Product introduce..... | 2 |
| 1.1 Interface..... | 2 |
| 1.2 Package contents..... | 2 |
| 1.3 Connection..... | 2 |
| 1.4 Remote Control..... | 3 |
| TWO Main Menu Introduction..... | 4 |
| 2.1 Main Menu..... | 4 |
| 2.2 Main Menu Interface Introduction..... | 5 |
| THREE Application..... | 6 |
| 3.1 Applications..... | 6 |
| 3.2 Setting..... | 6 |
| 3.3 File browser..... | 15 |
| 3.4 Web browser..... | 16 |
| FOUR Troubleshooting..... | 19 |

ONE

Product Introduction

1.1 Interface

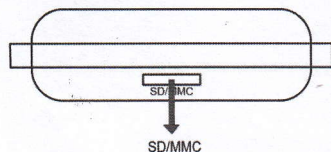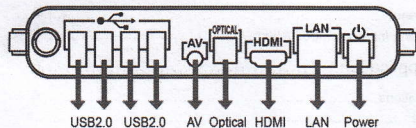

1.2 Package contents

- Android TV Box
- Power adapter
- Remote Control
- AV Cable
- User's Manual

1.3 Remote Control

1.3.1 Netural Remote Control

1.1 Remote Control




| Key | Function | Key | Function |
|--------------------|---|----------------|--|
| [Power] | Turn on / off the player | [Volume Down] | Choose the volume of the player |
| [0-9] | To input the number | [Function] | Choose function menu of corresponding application in video/music/photo/website |
| [Fast Key] | Fast key to Browser page | [Fast Key] | Fast key to go back to the main menu |
| [Back] | Back to previous menu/page | [Fast Key] | Press to navigate left/right/up/down. |
| [Volume Down] | To decrease the volume | [Fast Key] | Press OK to confirm your choice |
| [Fast Key] | In the video/picture/music/file playback, use to switch next file | [Fast Key] | To increase the volume |
| [Play/Pause] | Press to play/pause | [Fast Key] | In the video/picture/music/file playback, use to switch previous file |
| [Repeat] | Press to repeat one file | [Stop] | Press to stop playback |
| [Fast Rewind] | Press to fast rewind the current play | [Fast Forward] | Press to fast forward the current play |
| [Fast Key] | Fast key to Application page | [Web Search] | To access web search page |
| [Fast Key] | Fast key to mouse mode to up/down/left/right | [HDMI/AV] | Fast key to switch to HDMI / AV |
| [Fast Key] | choose subtitles when playing movies | [Audio] | To select an audio track on a media file |
| [Go to movie page] | Go to movie page | [Zoom] | Press to zoom in/out on web page |
| [Go to photo page] | Go to photo page | [Music] | Go to music page |
| | | [System] | Go to system set up |

TWO

Main menu introduction


2.1 Main menu

This media player provides two kinds of main menu for user to choose,. After the media player is powered on, below dialog will popup

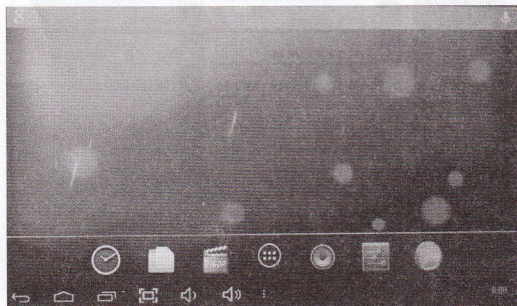

2.2 Main Menu Interface Introduction


Select the icon, system will list the apps and setting on the screen, you can choose anyone what you want to use. For the detailed function description, please refer to Chapter 3

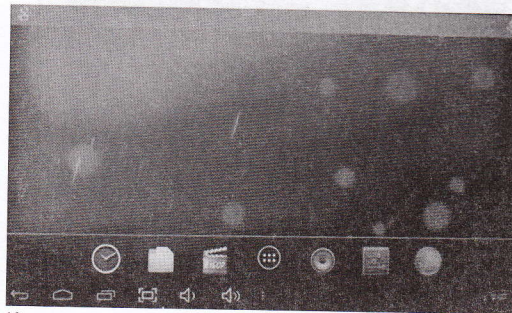

After connecting network, the time will be updated automatically


THREE

Application

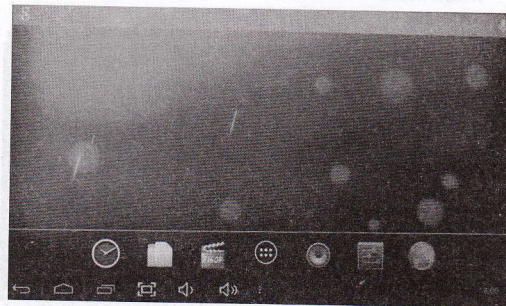


3.1 Applications

Choose application, to enjoy apps that you want to use 以下图片换成最新的

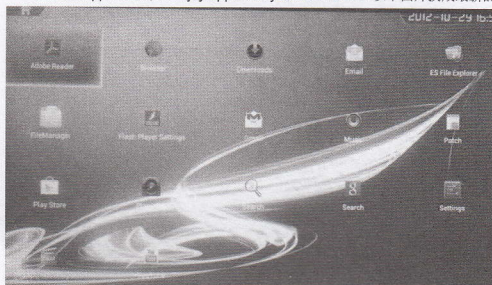

Data Usage

Check the network stream status

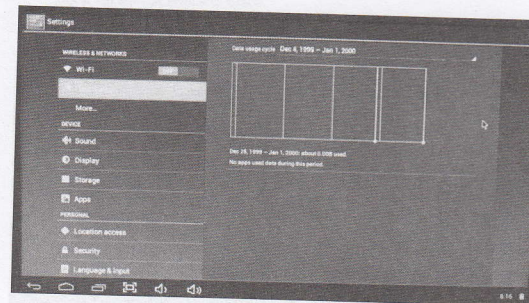


3.2 Setting

3.2.1 Wireless Network


WIFI

Please turn on wifi, option and choose the access point you need

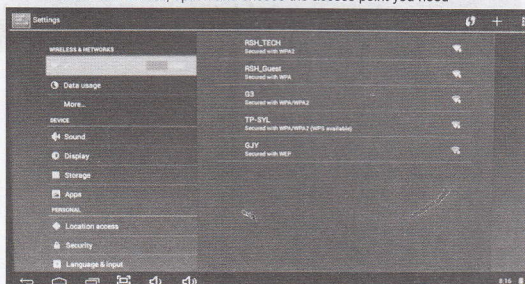

More.....


Setup different network

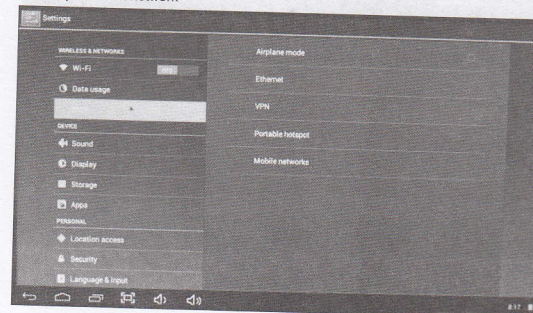

3.2.2 Device


Sound

Adjust operating sound

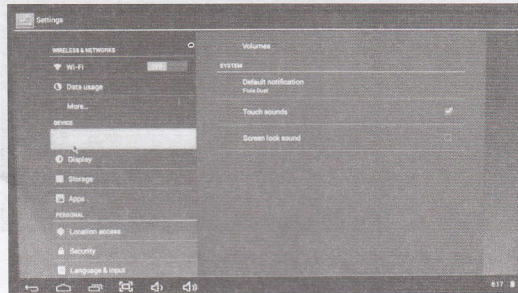


Display

Adjust the display level and output setting 功能描述都不怎么对

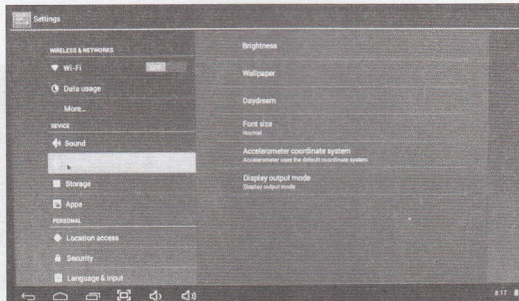


Storage

Show the storage level and space

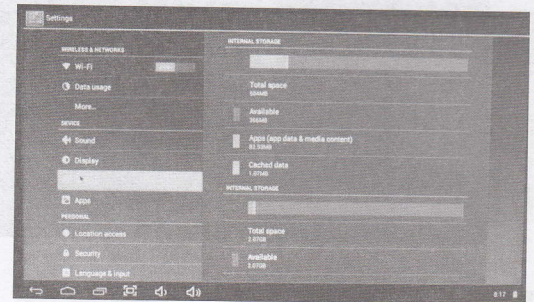


APPS

List the all apps from download or SD Card

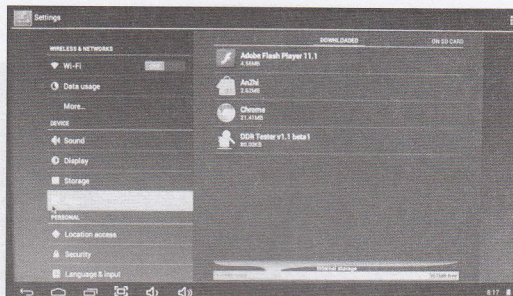


3.2.3 Personal

Location services

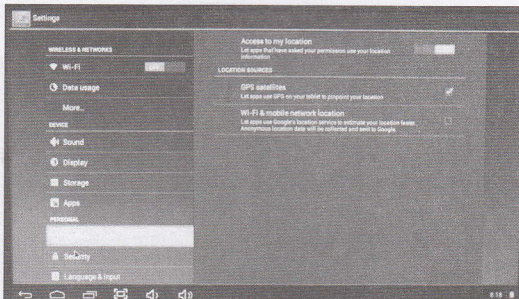


Security

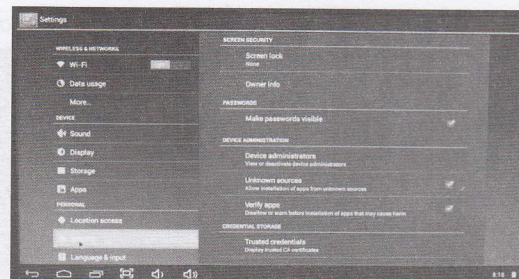



Language & Input

Set language and input method

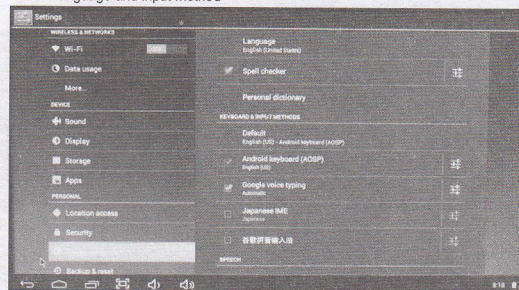


Backup & Reset

Backup or reset your system back to default setting

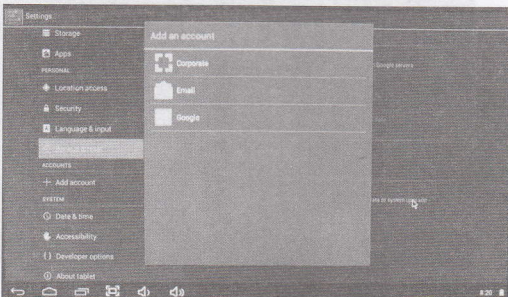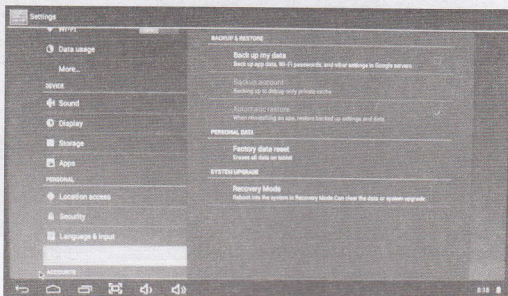


Date & Time

Set the date and time

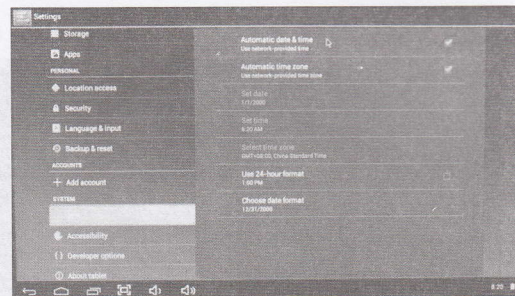


Accessibility

Setup the accessibility

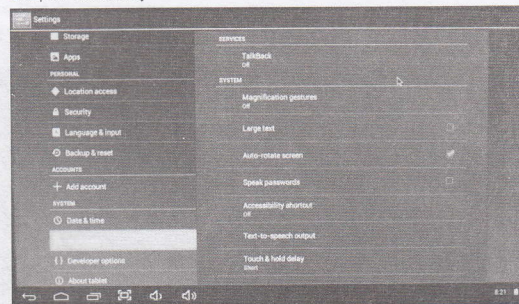



The screenshot shows the Windows Settings application. On the left is a navigation pane with the following items: Storage, Apps, PERSONAL, Location access, Security, Language & Input, Backup & reset, ACCOUNTS, Add account, SYSTEM, Date & time, Accessibility, and a search bar. The main area displays the 'Power' settings. The settings listed are: 'Power menu log reports' (checked), 'Allow mock locations' (checked), 'Select debug app' (None), 'Verify apps over USB' (checked), 'Show touchscreens' (unchecked), 'Pointer location' (unchecked), and 'Show layout bounds' (unchecked). The status bar at the bottom shows navigation icons and the time 9:21.

List the device information

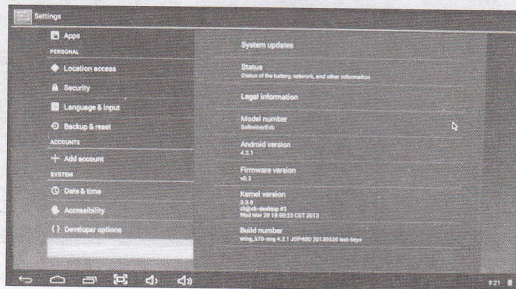


The screenshot shows the Windows 8.1 Start menu. On the left, there is a large icon for the 'Local Memory' app, which depicts a database cylinder with a USB symbol. Below this icon, the text reads: 'Target Local Memory', 'Used size: 48.50 KiB', and 'Avail size: 2.07 GiB'. On the right, there is a 'Local Memory' app tile with a small icon and the text 'Local Memory'. Below the tile, the text 'H:\> C:\>' and 'Network Neighborhood' are visible. The taskbar at the bottom shows the 'Local Memory' app icon, a search icon, and several system tray icons.

3.4 Web browser

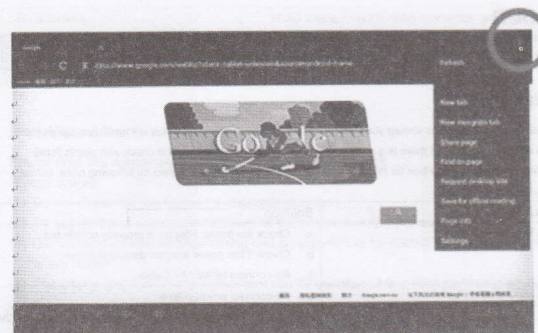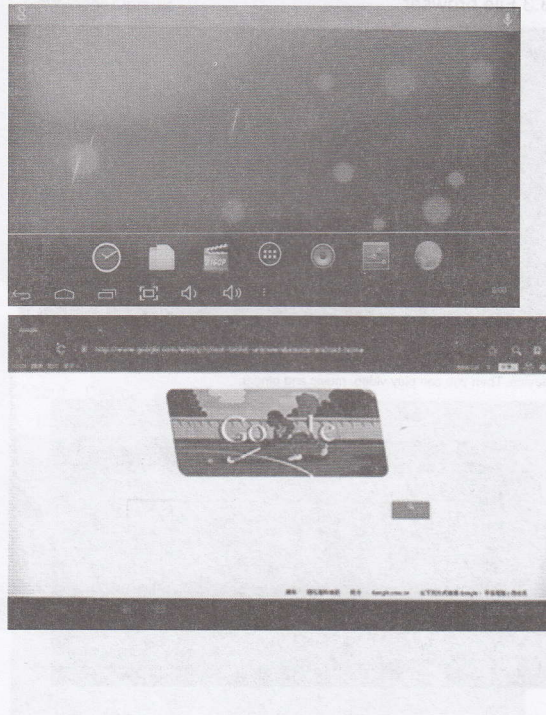

Select the icon, there is a menu bar for you to set

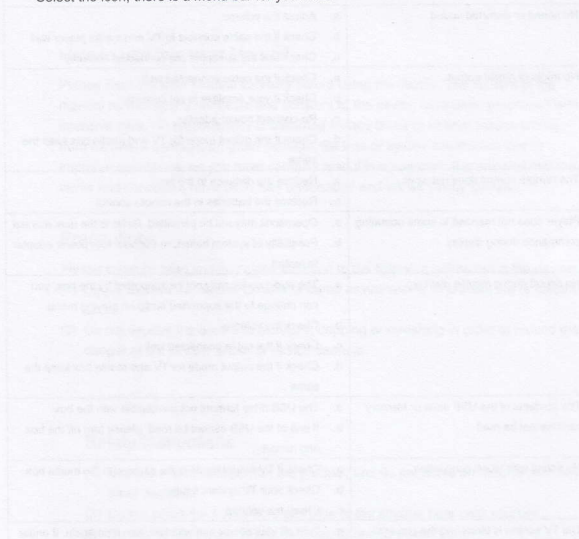

FOUR

Troubleshooting

Warning

Under no circumstances should you try to repair the box by yourself, as this will invalidate the warranty. Do not open the box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

| Problem | Solution |
|---|--|
| No Power | a. Check the power adapter is properly connected b. Check if the power adapter damaged or not c. Re-connect HDMI / AV Cable |
| No show on monitor | a. Re-connect power adapter b. Check if the output mode for TV and media box keep the same c. Check if the TV is switched on |
| No sound or distorted sound | a. Adjust the volume b. Check if the cable connect to TV and media player well c. Check that the speakers are connected correctly |
| No audio or digital output | a. Check if the cable connected well b. Check if your amplifier is set correctly c. Re-connect power adapter d. Check if the output mode for TV and media box keep the same |
| The remote control does not work | a. Reduce the distance to the box b. Replace the batteries in the remote control |
| Player does not respond to some operating commands during display | a. Operations may not be permitted. Refer to the user manual b. Possibility of system halted, re-connect with power adapter to restart |
| No sound during movies display | a. The audio codec may not be supported by the box, you can change to the supported audio on playing menu b. Check the volume c. Check if the cable connected well d. Check if the output mode for TV and media box keep the same |
| The contents of the USB drive or Memory card cannot be read | a. The USB drive formats not compatible with the box b. If one of the USB cannot be read, please turn off the box and restart. |
| No sound with HDMI connection | a. Check if TV output mode is the same with the media box b. Check your TV system setup c. Check the volume |
| The TV screen is black and the player's | a. Turn off your player and wait 30s, turn it on again. If under |

LED is blinking

HDMI status, check if HDMI connection is correct or change another HDMI cable. Set the output solution of the box into 720P

End-User License Agreement

Please read this agreement carefully before using the product.

Please ensure

- (1) Do not dismantle the device for improper purposes
- (2) Do not read and refresh the firmware of the device by improper means.
- (3) Do not conduct inverse engineering and disassembling for related software and codes of the player
- (4) The device and this license agreement can be transferred to a third party who accepts the terms and conditions of the agreement. When you transfer the full or part of the device to a third party, the license agreement for you to use the device terminates automatically.

How to use this user Manual

Please read this user manual carefully before using the device. The content of the manual as well as the hardware and software of the device have been processed with intensive care. No responsibility is assumed for any direct or indirect losses arising from hardware damage, program damage, file loss or system breakdown due to improper operations. As you have carefully read this agreement, it is ensured that the terms and conditions have been fully understood and will be strictly followed.

Precautions

Please carefully read and pay close attention to the following before using the device:

- (1) Do not expose the device to rains or damp environments to prevent fire or electric shock
- (2) Do not expose the device to moisture, dripping or splashing in order to reduce the danger of fire electric shock or device damage.

Safety Instructions

- (1) Use the original adapter for the product, and do not share an adapter with any other devices.
- (2) Do not place the power cord and plug of the adapter near heat sources.
- (3) Do not dismantle and repair the adapter and its power cord.

- (4) Do not open the enclosure of the device to ensure your safety. Please ask trained professionals to conduct maintenance if necessary.

Maintenance Tips

- (1) The device is of complicated and sophisticated structure, so only trained professional are allowed to open the device to prevent damage from happening.
- (2) Do not dismantle components of the device on your own. The warranty mark will be invalid automatically if you dismantle and repair the device on your own.
- (3) Please contact our local warranty department to arrange for maintenance if necessary. To replace devices or accessories, please select the original ones designated by the manufacturer.