 
 


Android TV Box User Manual

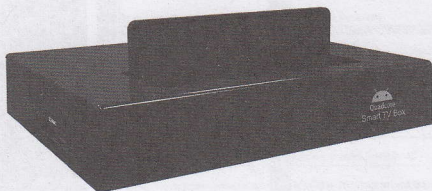

CONTENTS.....	0
WHAT'S IN THE BOX.....	1
ABOUT REMOTE.....	1
CONNECTION GUIDE.....	2
USING YOUR ANDROID TV BOX.....	3
MAIN MENU INTERFACE.....	4
CONNECTING TO THE INTERNET.....	5
ADJUSTING YOUR SETTINGS.....	5
CONNECTING EXTERNAL DEVICES.....	6
PRODUCT SPECIFICATIONS.....	6
SAFETY NOTES.....	7
FREQUENTLY ASKED QUESTIONS.....	8

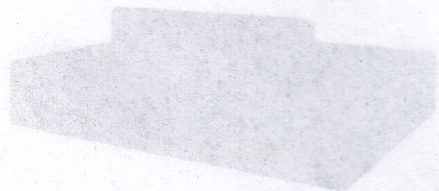

WHAT'S IN THE BOX

Please ensure the product package has all the following contents



- A. Android TV Box
- B. Remote Control
- C. Power adapter
- D. User manual
- E. AV Cable

About Remote Control




Key	Function	Key	Function
	Turn on / off the player		Choose the volume of the player
	To input the number		Choose function menu of corresponding application in video/music/photo/website
	Fast key to Browser page		Fast key to go back to the main menu
	Back to previous menu/page		Press to navigate left/right/up/down. Press OK to confirm your choice
	To decrease the volume		To increase the volume
	In the video/picture/music file playback, use to switch next file		In the video/picture/music file playback, use to switch previous file
	Press to play/pause		Press to stop playback
	Press to repeat one file		Press to fast forward the current play
	Press to fast rewind the current play		To access web search page
	Fast key to Application page		Fast key to switch to HDMI / AV
	Fast key to mouse mode to up/down/left/right		To select an audio track on a media file
	choose subtitles when playing movies		Press to zoom in/out on web page
	Go to movie page		Go to music page
	Go to photo page		Go to system set up

  CONNECTION PORTS INTRODUCTION

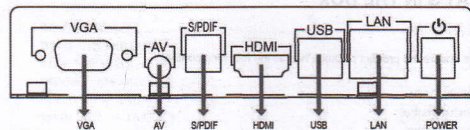

SD/MMC

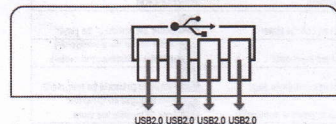 


USB inputs 1&2&3&4
HDMI output
VGA output
SD card input
Power/DC in
AV output
LAN input
S/PDIF, Optical output


CONNECTION GUIDE



 Connecting the Android TV Box with an HDMI cable



 
Connecting the Android TV Box with an AV cable



Optical Audio connection with a S/PDIF cable


USING YOUR ANDROID TV BOX

 The player will boot up once you have connected the power, which will take few minutes. The following main menu will appear after booting up:

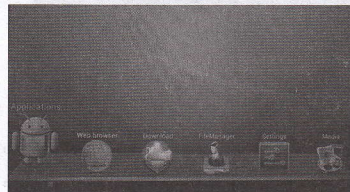

Use the directional buttons on the remote to highlight an option, press OK to select it. You can also press the "Mouse" button to switch to Mouse Mode.

 MAIN MENU INTERFACE

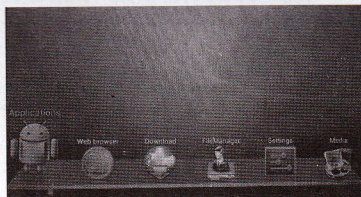

Applications: access the apps screen, where you can browse through apps and use Play Store etc to access more apps or media.

Web browser: go to google browser

Download: check all your download files


FileManager: check all folders

Settings: set up the player

Media: show all videos / photos

MAIN MENU INTERFACE

Below is a screenshot of the Android OS menu bar.

 

Reading in order from left to right are descriptions of the Android OS menu bar icons

Back: to go backwards one step (same function as on Remote)

Home: to return to the Main Interface menu (same function as on Remote)

Task Bar: to view any apps running in the background. Tip: this is useful for closing down apps running in the background

Screen Shot: capture a photo of the screen (Screen Shots are stored in local memory://Pictures/Screenshots)

Volume Down: to adjust volume lower

Volume Up: to adjust volume higher

 
CONNECTING TO THE INTERNET

Connect by LAN Cable

Connect a LAN cable directly from your router to the LAN input on the player, the network will connect automatically

Connect by WIFI


The wifi is built in the player, you just need to go to “setting” choose wifi, switch on, the player will begin to search wifi signal nearby, choose one and input password, click connect, the player will connect to network automatically. Noted: the player can remember the password for the same wifi signal, if you choose the same network next time, the player will connect to network automatically, no need to input password again.

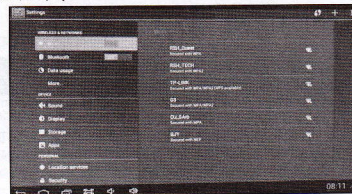

ADJUSTING YOUR SETTINGS

Use the directional buttons on the remote control to highlight an option, press OK to select an option, follow the prompts to make adjustments

 Tip: Switching to “mouse” mode on the remote is useful to select some options.

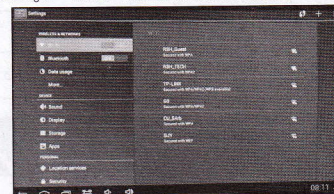

CONNECTING EXTERNAL DEVICES

There are various devices the Player is compatible with. Most USB keyboard, mouse, storage and webcam devices will be detected. To connect an external device, simply plug it into one of the USB ports on the Player. After a few seconds, a window will pop up explaining if it has successfully connected. For some devices you may be able to download an app to make your device compatible with the Player.

PRODUCT SPECIFICATIONS

Hardware		
Video Output	HDMI1.4 / AV	
Audio Output	RCA(R/L) / Optical / HDMI(R/L) / VGA	
Format	FAT16 / FAT32 / NTFS	
CPU	ALLWINNER A31 4 X A7 1G CPU SG*544 GPU*4	
Size	132*104*28 MM	
Memory	DDR III 2GB	
Storage	8GB NAND Flash	
Card Reader	SD / MMC up to 32G	
USB Host	4x USB2.0 support external hard disk up to 4TB	
Power	5V / 2A	
Hard disk slot	Support 2.5 Inch SATA Hard disk up to 2TB	
Audio & Video Decoding		
Video	Video Codecs	MPEG-1/MPEG-2/MPEG-4/H.264/VC-1/DIVX,Xvid/Real Video8/9/10
	Video Formats	WMV/ASF/MP4/H.264/AVI/RM/RMVB/MOV/VOB/MKV/FLV/VC-1/RV10/H.264/H.263
Audio	AAC,AAC+,EAAC+,AMR-NB,AMR-WB,QCP,MP3,WMA,WAV,MIDI, M4A	
Picture	JPG/JPEG,BMP,PNG,GIF	
Subtitle	sub,smi,ssa,ass,rt,idx+sub,pgs	
Software		
Network		
WIFI	150M internal 802.11 b/g/n	
3G	support 3G dongle	

Bluetooth	Optional
Application	
DLNA	DLNA Network media sharing
FireAir	Media sharing via WiFi with your mobile phone&Tablet
MIRACAST	Play your media via Miracast with your mobile phone or Tablet
Google TV remote	Through your mobile phone to control this device
XBMC	Building in latest XBMC, support HD BD Movies, up to 1080p

SAFETY NOTES

Before using the Android TV Box, please ensure you read and understand all the safety precautions below.

1. Do not attempt to open the case or modify it in any way
2. Keep the Player away from water and other liquids. Do not use wet hands
3. Keep the Player away from direct sunlight and heat sources.
4. Do not place heavy objects on the Player, as this may cause it to malfunction.
5. Use the supplied power supply; do not substitute for another power supply

FREQUENTLY ASKED QUESTIONS

Problem	Solution
No Power	<ul style="list-style-type: none"> a. Check the power adapter is properly connected b. Check if the power adapter damaged or not c. Re-connect HDMI / AV Cable
No show on monitor	<ul style="list-style-type: none"> a. Re-connect power adapter b. Check if the output mode for TV and media box keep the same c. Check if the TV is switched on
No sound or distorted sound	<ul style="list-style-type: none"> a. Adjust the volume b. Check if the cable connect to TV and media player well c. Check that the speakers are connected correctly
No audio or digital output	<ul style="list-style-type: none"> a. Check if the cable connected well b. Check if your amplifier is set correctly c. Re-connect power adapter d. Check if the output mode for TV and media box keep the same
The remote control does not work	<ul style="list-style-type: none"> a. Reduce the distance to the box b. Replace the batteries in the remote control
Player does not respond to some operating commands during display	<ul style="list-style-type: none"> a. Operations may not be permitted. Refer to the user manual b. Possibility of system halted, re-connect with power adapter to restart
No sound during movies display	<ul style="list-style-type: none"> a. The audio codec may not be supported by the box, you can change to the supported audio on playing menu b. Check the volume c. Check if the cable connected well d. Check if the output mode for TV and media box keep the same
The contents of the USB drive or Memory card cannot be read	<ul style="list-style-type: none"> a. The USB drive formats not compatible with the box b. If one of the USB cannot be read, please turn off the box and restart.
No sound with HDMI connection	<ul style="list-style-type: none"> a. Check if TV output mode is the same with the media box b. Check your TV system setup c. Check the volume
The TV screen is black and the player's LED is blinking	<ul style="list-style-type: none"> a. Turn off your player and wait 30s, turn it on again. If under HDMI status, check if HDMI connection is correct or change another HDMI cable. Set the output solution of the box into 720P