

User's Manual

Contents

Precautions	1
Function Overview.....	3
Appearance.....	4
Turn on/off	5
Record Mode	6
Voice Mode	8
Music Mode.....	9
FM Radio	10
Time setting	11
Connect to PC.....	12
Technical Specifications	13

Precautions

In order to avoid accidents, please read the User's manual carefully before operations.

 
1. Please charge the recorder frequently even when you do not use it for a long time.
2. Please keep it away from the high temperature, moisture or dusty places.
3. The recorder should be handled with great care. Do not drop or crash it.
4. Please do not turn off the power during recording and playing. Otherwise it may cause file corruption or information loss.
5. Please backup data regularly on your computer to avoid information loss which may be caused by wrong operations or machine breakdown.
6. We're not responsible for the failures of recording which caused by wrong operations or machine breakdown.
7. Please do not disassemble and repair the recorder by yourself. Please backup your data before sending it for repair service. We're not responsible for the data loss which caused by maintenance or other reasons.

8. We have nothing to do with the dispute over the misbehavior such as record voice without permission . We're not responsible for that.
9. We will endeavor to ensure the integrity of the User's manual. But if the contents of the User's manual do not match for the product itself completely due to technique or production batches, please take the product as standard.

Function Overview

1. Super long time continuous recording
2. One button recording& playing
3. three recording modes:
 - LP: Long-time recording
 - SP: Standard recording
 - HP: High quality recording
4. Voice Activated Recording (VOR/VAR)
5. Time setting
6. FM radio: Frequency 87.0-108MHz
7. Automatic section-break
8. Intelligent power control
9. Built-in high power loudspeaker
10. Built-in large capacity polymer battery

Appearance

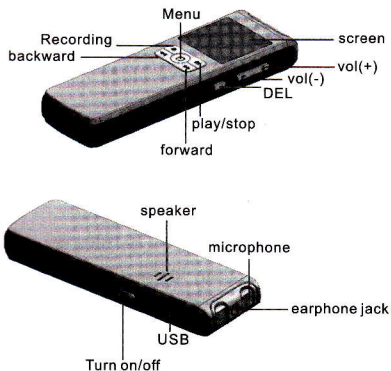

Turn on/off

● Turn on:

Push the power switch button down, the screen will lighten up as soon as the recorder is turned on.





In a soft shutdown condition, press the “play” button for several seconds to turn it on.

● Turn off :

Push the power switch button up ,the screen will turn dark as soon as the recorder is turned off. In any standby condition, press the “play” button for several seconds to turn it off.

 
The recorder will turn off automatically if there is no further operation in two minutes

● Battery power

-  Power is full
-  Half power left
-  Almost no power
-  No power

Record Mode

Selecting the record mode by pressing the “◀▶” button on the main menu. Then press the “⊙” button to enter into Record Mode.

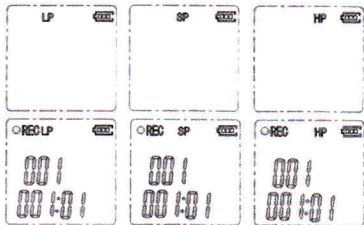

LP: long-time recording , wav format, 32Kbps

SP :standard recording ,wav format, 128Kbps

HP:high quality recording ,wav format, 192Kbps

● One button recording

Press “⊙” button in any pause or stop condition could start recording

● Recording Pause /Save/Exit

Press “play/stop” button to pause the recording under the state of recording voice. press the “play/stop” button again to continue .Press the “⊙” button to stop and save the recording data. Then press “Menu” button to get back to main menu.

Record Mode

● Voice Activated Recording (VOR/VAR)

After the recording stopped , press the “◀▶” to choose the proper level of voice activated recording (from 0-10, default 0). Press the “⊙” button again to move on to the next recording.

When it starts working, the VOS icon will flash and the time will stop. On the other hand, when it stops, the VOS icon will disappear and the recorder will return to the normal state.

● Recording monitor

Press the button “VOL+” or “VOL-” to adjust the proper volume. At the same time, you have to prepare earphones.

● Record folder

The recording files will be saved automatically in the folder which corresponding to the name.

● Automatic section break

The recorder will save 4 hours of continuous recording voice automatically and move on to the next recording

● Auto save in low power

When the power is not enough to keep working , the recorder will save files and turn off automatically.

Voice mode

Selecting the Voice mode by pressing the “◀▶” button on the main menu. Then press the “play/stop” button to enter into Voice mode.



● One button playing

In a stopped state, press “play/stop” button to play recording voice.

● PLAY / PAUSE

Press the “play/stop” button to begin ,press it again to pause .Press the “Menu” to enter into the main menu.

● Selection, Fast forward /Rewind

Press the “◀▶” button one second to select the files.

Press the “◀▶” button several second to fast forward or rewind.

● Volume adjustment

Press “VOL+” or “VOL-” to adjust the volume.

● A-B repeat

When the record is playing, press “⊙” to

Voice mode

determine the starting point “A”, press it again to determine the finishing point”B”.the recorder will start to repeat from A to B.

 
The recorder will automatically stop repeating after the third time.You can press “⊙” button to cancel it too.

● Delete

When the playing stops or pauses, press “DEL” for three seconds and then press the “play/stop” button to confirm it.

Music mode

Selecting the Music mode by pressing the “◀▶” button on the main menu. Then press the “play/stop” button to enter into Music mode.



Other operations are the same as Voice mode.

FM Radio:Frequency 87.0-108MHz

Selecting the Radio mode by pressing the “◀▶” button on the main menu. Then press the “play/stop” button to enter into Radio mode.



● Scan/Save channel:

Short time press the “◀▶” button for manual scanning and press the “⊙” button to save the channel .

Long time press the the “◀▶” button for automatic scanning ,the recorder will automatically save the channel.

You can change the channel by pressing the “play/stop” button.

 
● Delete the saved channels

Press the “DEL” button for three seconds ,you can delete the current channel .


Attention:Please use earphone or an aerial accompanying with the recorder when you listen to FM Radio.Press the “DEL” button for a long time to open the loudspeaker to listen to FM radio.

Time setting

Selecting the Time setting mode by pressing the “◀▶” button on the main menu. Then press the “play/stop” button to enter into Time setting mode as below.



 Then press “◀▶” to select the part you want to adjust which will be flashing .Next,press “VOL+” or “VOL-” button to adjust it to the current time as below.



After the adjustments,press “play/stop” button to save and return to the main menu.

Connect to PC

With an included USB cable to connect it to computer, it can be used as an USB flash disk and charge

automatically. After finish it, Right click on the pop-up icon appeared on the bottom right of desktop. After disconnecting the computer, you can unplug the recorder.

You can charge the recorder immediately when connect it to a charger with an included USB cable.

Hint: please turn on the recorder first and then charge it, in that case, it's clear to know how much the power left. Battery ICON flash in pattern during charging, But Battery ICON stop flashing when it's fully charged. It will take 5.5 hours to charge a recorder by connecting to computer, and it will stop charging automatically when it is fully charged.

Technical Specifications

Size: 110*35*13.5mm
Weight: 57g
Power supply: polymer battery 3.7V 1500mAh, super long time continuous recording
Memory capacity: 4GB~16GB
Recording bit rate: WAV, 32Kbps/128Kbps/192Kbps
4GB recording time: LP about 283 hours/SP about 70 hours/ HP about 47 hours
8GB recording time: LP about 555 hours/SP about 138 hours/ HP about 92 hours
16GB recording time: LP about 1110 hours/SP about 277 hours/ HP about 185 hours
Support system: Windows 2000/XP/Vista/7/8
Music format: MP3/WMA