


User's Manual

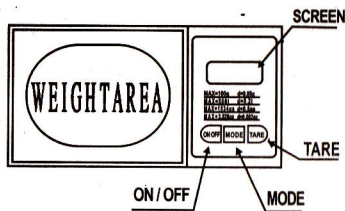

1. Supply powered 4.5v(3X LI batteries)
2. Accuracy: \pm (0.2%+LSD)
3. 12mm(0.42") LCD display
4. Dimensions:156mmX76mmX17mm
5. Weight: 165g

THANK YOU FOR
PURCHASING OUR PRODUCTS!

SPECIFICATION

Capacity	500	350	300	200	200	200	120	100	100	g
Accuracy	0.1	0.1	0.1	0.05	0.02	0.01	0.1	0.05	0.01	g
Capacity	2500	1750	1500	1000	1000	1000	600	500	500	ct
Accuracy	0.5	0.5	0.5	0.5	0.1	0.002	0.2	0.2	0.1	ct
Capacity	17.635	12.345	10.584	7.055	7.055	7.055	4.23	3.528	3.528	oz
Accuracy	0.005	0.005	0.005	0.005	0.002	0.001	0.002	0.002	0.001	oz
Capacity	7716	5402	4629	3086	3086	3086	1851.6	1543	1543	gs
Accuracy	2	2	2	1	0.5	0.5	0.5	0.5	0.2	(gn)
Capacity	321.4	225.1	192.9	128.6	128.6	128.6	77.16	64.3	64.3	dwt
Accuracy	0.1	0.05	0.05	0.05	0.02	0.02	0.02	0.02	0.01	dwt
Capacity	16.1	10.948	9.66	6.42	6.42	6.42	3.864	3.21	3.21	ozl
Accuracy	0.005	0.005	0.002	0.002	0.001	0.001	0.001	0.001	0.001	ozl

INSTRUCTION

1. ON/OFF

- (1). Press "ON/OFF" button after placing the scale on a flat table. It will display all characters. Then you can weigh the object after it displays "0".
- (2). Repress "NO/OFF" button, The scale would be turned off.
- (3). Automatic power off after one minute without use.

2. ZERO AND TARE

- (1). If it does not display "0" after turned on, Press "TARE" button and it will be ok. Then you can weigh the object on the pan.
 - (2). When weigh the object with a container you would place a container on the pan first. It will display the weight of the container. If you press "TARE" button and it will display "0" which means default value.
- The weigh of the object. After taking off the container, Please press "TARE" button and it will return to normal working status.

3. SETTING THE MODE

The normal mode is unit "GRAM". When you press "MODE" button, It will be changed to next unit.

NOTES

- (1). When it displays "EEEE" or "OL-d". It means overweight.

- (2). When it displays "LO-" or "LO-", it means battery power is low. And the batteries should be replaced immediately.
- (3). Do not move the scale when it is under working condition.
- (4). After turning on the machine, you should wait about 30 seconds before using it for needing to be preheated.
- (5). The pocket is a precise machine. Do not press the pans with extreme force when place the object onto the it.
- (6). Wipe off the entire exterior of the scale when it is dirty. But do not use the chemical cleaner to clean it.
- (7). Do not leave the scales exposed to direct sunlight, Heat source and excessive heat.
- (8). The scale is precise machine. So be careful not to drop the scales down to the ground.
- (9). Never attempt to disassemble and repair the scale. In case of malfunction, Please consult your supplier.

REPAIR'S GUARANTEE

The product is guaranteed half year from the buying date.
If there are some wrong within the guaranteed date, please contact the agent, never try to repair it yourself.