

2、FUNCTIONS:

(1) Under Video Mode

Press "Power Button" to turn on the machine. It defaults to enter the video mode (Red LED will flash one time and then Blue LED light will be on.) Press "Rec Button" to start recording (Blue and Red LED lights will be on at the same time) Press "Rec Button" to stop recording. (Red LED lights will be off and only Blue LED is on.)

(2) Under Camera Mode

Press "Mode Button" one time to enter camera mode (Blue LED will flash). Press "Rec Button" to take a picture. (Red LED will be on one time once a photo has been taken)

Noted: The Red LED will flash once the memory is full.

(3) Under Playback Mode

Connect the machine and HD TV with the HDMI cable. Press "Mode Button" two times from video mode to playback mode (Red LED lights on). Press "Direction Button" to select the files. Press "Rec Button" to play the video file. Press "Rec Button" again to stop playing the file.

(4) Menu Setting

Connect the machine and HD TV with the HDMI cable. Under any mode to press "Mode Button" until menu setting diagram shows up on the TV screen (Red LED lights on). Press "Direction Button" to select the item and press "Mode Button" to change the value then press "Rec Button" to set.

(5) Battery Charging

Connect the machine and PC with the USB cable. The Red LED will flash while charging and it will be on when the battery is full. Noted: The Red LED will flash faster when the battery is low.

3、SPECIFICATIONS:

(1) 5.0 CMOS sensor

(2) Max 8 Mega pixels by interpolation

(3) H.264 1280*720P 30 fps MOV video file format



(4) HDMI video output

(5) Support Micro-SD or TF card up to 32GB

(6) Power source: Rechargeable battery

高清數碼筆使用說明

1、結構描述

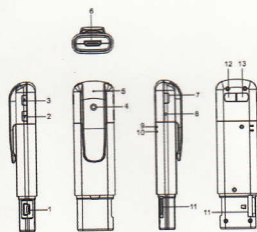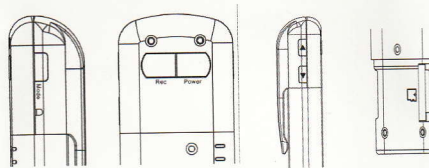

- 1、USB端口
- 2、方向鍵
- 3、方向鍵
- 4、鏡頭
- 5、麥克風
- 6、HDMI端口
- 7、模式按鈕 (視頻/攝像頭/回放)
- 8、復位按鈕
- 9、藍色LED指示燈
- 10、紅色指示燈
- 11、Micro-SD插槽
- 12、REC按鈕
- 13、電源按鈕

2、產品應用

(1) 視頻模式

按“電源按鈕”開機，機器默認進入視頻模式。紅色LED會閃爍一次，然後藍色LED燈就會亮。按“REC按鈕”機器開始拍攝。(注意，此時藍色和紅色LED燈將在同一時間亮)。按“REC按鈕”停止錄製。(注意：此時紅色LED燈將關閉，只有藍燈亮)。

(2) 拍照模式

按“模式按鈕”一次，直接進入相機模式。此時，藍燈閃爍。按“REC按鈕”拍照(注意：紅色LED亮一下，代表拍照一張)。

注意：當內存滿後，紅色LED燈將會不停閃爍。

(3) 回放模式

用HDMI線將機器與高清電視進行連接。按“模式按鈕”兩次，從視頻模式轉換到回放模式，此時紅色LED燈將亮。按“方向鍵”進行文件選擇，按“REC按鈕”來播放視頻文件，再按“REC按鈕”將停止文件播放。

(4) 系統設置

用HDMI線將機器與高清電視進行連接。在任何模式下按“模式按鈕”，電視屏幕將出現菜單設置(注意：此時紅色LED燈將亮。)按“方向鍵”進行項目選擇，按“模式按鈕”來改變設置，按“REC按鈕”確定設置。

(5) 充電模式

用USB線將機器與電腦進行連接。充電過程中，紅色LED將會閃爍。電充滿後，紅色LED將長亮。指出：當電池電量低時，紅色LED將快速閃爍。

3、產品規格

(1) 500萬的CMOS傳感器

(2) 最高800萬像素插值拍照效果

(3) 1280 * 720P視頻像素，H.264 / 30fps的MOV視頻文件格式

(4) HDMI高清視頻輸出

(5) 最大支援32GB的Micro-SD或TF卡 (6) 內置可充電鋰電池