 
 


# MULTIFUNCTION CLOCK USER'S MANUAL

(MOTION DETECTION)  
(TABLE CLOCK + POCKET CLOCK)  
(RECORD DURING CHARGING + RECORD RECYCLING)

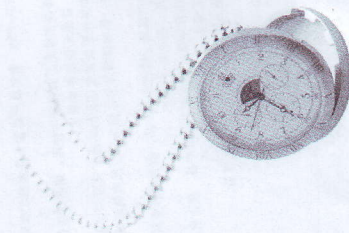

## 1. PROFILE

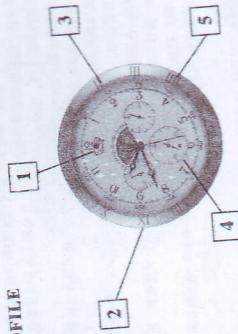

- 1. CAMERA
- 2. ON/OFF/PAUSE / OPERATION
- 3. USB INTERFACE
- 4. INDICATOR
- 5. MODE SWITCH / MOTION DETECTION

**2. INSTRUCTION**  
This product is a portable appliance which looks like a table clock and also can be used as pocket clock, with the following functions: digital video, camera, sound record, motion detection, U disc, pc camera and record recycling. You also can operate it during charging.

### 3. Operation

- 1) On/Off: Press the Key, No. 2 for 2 seconds to turn on the equipment. After the blue light flash three times, it enters into the condition of video. When you press the Key, No. 2 again, it stops taking video and keeps the files. The blue light is burning to enter the status of standby. If you press the Key, No. 2 for 4 seconds, the red light will flash three times to turn off.

## 2) Video

After you turn on the equipment, it is in the status of video. If you press the key, No. 2 again, it stops taking video to save a file. In the other status, if you press the key, No. 2 for 4 seconds, it can enter into the video status.

## 3) Status Switch

Press the Key, No. 4 to switch the status between Picture/Video/Sound Record. When the red light is burning, you can press the Key, No. 2 to take picture. When the blue light is burning, you can press the Key, No. 2 to take video. When the red light and blue light are light together, you can press the Key, No. 2 to record sound.

## 4) Motion Detection

In any status after you press the Key, No. 4, the blue light and red light will flash together one time and be off, it means the equipment is at the status of motion detection. If there is not any objection moving in the working area of equipment within three minutes. The equipment status will stop to standby of motion detection. At the same time, the blue light is burning. If there is any object moving in the working area of equipment, the blue light will be off, and the red light will flash one time to enter into the motion detection status. If the objection is moving more than 30 minutes, the equipment will save a file every 30 minutes and enter into the motion detection status again.

## 5) Recycle Record

If the memory is full, the equipment still can record, but the newest file will cover the first file.

**6) Operation during charging**  
When you connect the equipment and PC or any other power source and you press the Key, No. 4 for 4 seconds, the blue light will be burning to enter into the standby status. At this time, you can operate the equipment for the other function of the equipment.

## 7) U-Disc

When the equipment is off, you'd better to connect the original USB and equipment first, and then connect the equipment and the PC. You

- 6. Notice**
- Place of using: It can not be used in the leagl place.
  - Battery: With the using, the time of battery working will be getting shorter and shorter. You must recharge it if you do not use it for long time.
  - File Safety: This product is not the professional storage equipment, you need backup your file in the other storage equipment.
  - Video Quality: This equipment is not the professional storage video equipment, we can not promise that the video quality can meet the requirement.
  - Working: Please use it in the luminous plac, please do not let the lence face to the high-light.
  - Cleanace: Please do not use it in the dust place. You can clean the lence with professional paper or glasses cloth.
  - Others: Please do not let it impact, quick. Please do not use it magnetic field or electric field.

The equipment can not record sound or take video, please inspect if the memory is full.  
 The equipment can not be connect and the PC, please inspect if the OS, drive programme, USB slot, connect cable is no proble.  
 You are told there is no place in the disc, please inspect if there is something wrong with your TF card

**5. Parameter**

Item	Parameter
Video Mode	AVI
Video Code	M-JPEG
Video Resolution	640*480/1280*960
fps	30fps
Support Software	Operating system bringing or mainstream video and music broadcast software
Picture Mode	JPG1 600*1200
Ratio	4:3
Support System	Windows me/2000 xp 2003/viste.M
Battery Capacity	200mAh
Working Time	約80分钟
Recharge Vol	DC-5V
Interface	MINI 4pin USB
Mini SD	Micro SD Card
Battery	High-capacity polymer Li-ion Battery

Can find there is the disc sign on the screen of PC. Some times, it need a few seconds to wait for the mobile disc sign.  
**8) PC Camera**  
 You need to install the programme in the original CD. After you install the programme, you need to turn on the equipment and connect it and the PC. Now, it is a PC camera.

**9) Recharging**  
 When you connect this equipment and PC or charger in power source with the original USB cable, it can recharge the equipment. During charging, the red light is burning, and blue light is flashing. When the battery is full, the red light is burning, and the blue light is off.

**10) Time Reset:**  
 If you need to reset the time in the AVI file, you can reset the time according to the following steps:  
 First, Connect the equipment and PC;  
 Second, Set a text file in the U disc named time.txt (the letters must be in small writing style). You also can set up this file in the other disc of PC and copy it to the U disc.  
 Third, Open the file, write the time, it must be like: YYYY.MMM.  
 DDDD HH.MM.SS and stail it in the U disc.  
 Forth, Get out from the file and PC, the time reset finishes.  
 You also can reset the time according to the original time resetting programme after you connect the PC and the equipment to start the equipment, the time will be same as the time on the PC.

**4. FAQ**  
 If it is low power, the red light will flash for 3 seconds and save the present file, then the equipment will be off.  
 If there is no any answer from the equipment, please press the Key, No. 2 and No. 4 together to restart the equipment.  
 The equipment can not turn on, please recharge it or press the Key, No. 2 and No. 4 together to restart it.