

Mini camera

The Smallest Camera in the world

世界最小クラス




User Manual

全球最小迷你攝像機

一、產品簡介

產品採用照相機原版造型設計，打破常規思維，實現超小，超高清，超便捷使用的特點。是全球首款具有高清數碼攝像，拍照功能之迷你數碼產品。為商務，教育，安防，媒體，司法，旅遊，醫療，生活等多領域的實用工具。

二、產品結構

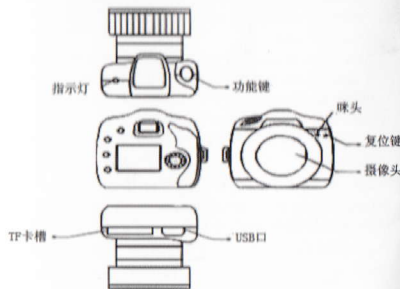

三、操作說明

- 1、開關機：長按操作鍵開機2秒，指示燈以及攝像機狀態變化方式為：紅燈長亮，進入默認的待機模式；長按操作鍵4秒，紅燈熄滅，攝像機將自動保存當前攝錄文件並關機。
- 2、拍照：當攝像機處於拍照模式的待機狀態，點按操作鍵1次，紅燈閃一下，拍照一張並保存；拍照完成後，紅燈長亮並返回待機狀態。
- 3、錄製視頻：當攝像機處於攝像模式的待機狀態，長按開操作鍵2秒，紅燈閃爍，開始錄像，再次點按操作鍵，紅燈長亮，錄像文件保存並返回待機狀態。
- 4、低電：使用時若檢測到電池電量低，紅燈快閃5次後關機，開機前會對文件進行保存。
- 5、充電：將設備連接電腦或電源適配器時均可充電，充電時紅燈閃爍，充滿後紅燈長亮。
- 6、移動磁盤：在關機狀態或者待機狀態時，可以連接電腦，此時，電腦將會彈出可移動磁盤標識，影像文件保存目錄為：*盤 _REC \ 100MEDIA；當攝像機與電腦交換數據時，藍燈會快速閃爍；需要卸載攝像機時，請點擊任務欄右下角的可移動設備管理圖標，在裡面卸載該可移動存儲設備，待系統確認可以安全拔出硬件後，再斷開攝像機與電腦的連接。注意：當設備處於拍照或錄像狀態時不可連接電腦。
- 7、復位：當設備因使用不當或不明原因無法工作或停止工作時，需要對設備進行復位。用長而細的工具按壓重置孔即可復位。注意：復位後，設備會自動關機，文件將無法保存。
- 8、時間更改：確認電腦時間正常，將設備連接到電腦，確認找到移動硬盤，運行光盤裡的“時間修改工具”，即可將設備時間改為與電腦時間同步。
- 9、電腦網絡攝像頭：產品插入TF卡後，用數據線連接電腦，出現“可移動磁盤”後，長按開機鍵2秒後松手，可移動磁盤標識消失，5秒後進入機器進入網絡攝像頭模式。（如果出現網絡攝像頭標識卻無法顯示畫面，請在“設備管理器”的“圖象處理設備處”更新USB視頻設備的驅動程序，更新完成后重新按照以上方法進入網絡攝像頭。

10、異常處理：

- ①問題：紅燈閃爍五次後，相機關機是什麼原因？
答：檢查內存是否已滿，或者電池處於低電狀態。如果內存已滿，請刪除或者備份內存裡面的文件後或者插入另外一張存儲卡。如果處於低電狀態，請充電。
- ②問題：無應答
回答：由於錯誤操作或者不明原因，可導致設備不能夠工作。需要重置設備。用長細的工具按壓重置孔。

四、相關參數


項目	機器參數
視頻格式1	AVI
視頻編碼	M-JPEG
視頻分辨率	640*480
播放軟體	操作系統自帶或主流影音播放軟體
圖片格式	JPG
圖片像素	1600*1200
支持系統	Windows me/2000/xp/2003/vista; Mac os 10.4; Linux;
充電電壓	DC-5V
接口類型	Mini 8 Pin USB
存儲支持	MICRO SD卡，最大支援32GB
電池類型	大容量聚合物鋰電

The Smallest Mini Camera

1.Profile

So Mini Camer! The Smallest! But it can take video, audio, and photo. So lovely design just for lady or girls as gifts.

2.Construction

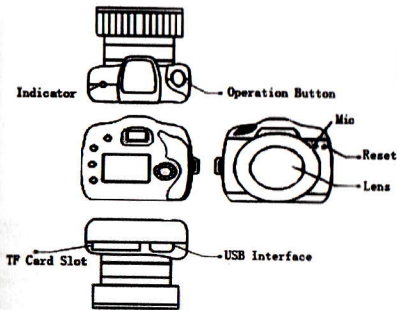

3.Operation

1).On/Off

①Turn On

Press the operation button for two seconds to turn on the equipment,The red indicator is burning.The equipment is in the standby mode now.

②Turn Off

Press the operation button for four seconds,the red indicator is off.

2)Take a Picture

①The canera turns on in standby mode(If it is in the different mode,press the operation button to change it to standby mode)

②Compose the picture.

③Press the operation button completely down,the red indicator will flash one time.

3)Take a Video

①The canera turns on in standby mode(If it is in the different mode,press the operation button to change it to standby mode)

②Press the operation button for two seconds,then release it.The red indicator will flash regularly.

③To stop recording,press and release the operation button again(Press one seconds at this moment)

4)Low Battery

If the equipment tests the voltage is too low to work.The equipment will be off after it saves the file and red indicator flashes five times.

5) Recharge

①Turn off the camera.

②Connect Camera USB Cable and charger.

③During Charging,the red indicator is blinking.When it is full,the red indicator is burning.

6)Removable Disc

①The camera turns off or turns on in the standby mode.

②Connect camera USB Cable and Computure.The sign of removable disc will appear in my computure.

7)Reset

①Because of the wrong operation or unknown reason,the equipment can not work.Need to reset the equipment.

②Press the reset hole with a slime tool.

8)Change Time

①The camera turns off.Put the CD into CD-ROM of PC.Make Sure that the time on PC is the one you need to show on Camera.

②Connect camera and computure.

③Run the Time Changing Tool in the CD.

9)Webcam

Input the TF Card Inside ,Connet the Camera to PC, Please Press the On/Off Button for 2 senconds when there is "Movable disc" sign onthe display of PC.Release the On/Off Button when the "Movable Disc"Sign disappear There is Webcam Sign on display of PC after 5 seconds. Notice:If there is Webcam Sign,but you can not see the movie,please turn on "Equipment Management" then,

in the menu of ImageEquipment to renew the Progame of USB Vision Equipment.After you renew the program,please Operate the camera as the above again.

10)Solve Camera Problems

①Question: The red indicator flashes for five seconds,the equipment is off.

Answer:

Make sure the memory is enough or power is not in low battery.

If memory is full.Transfer pictures or videos to PC or insert another card.

If Low Battery,please recharge it.

②Question:No answer from Camera

Answer:

Because of the wrong operation or unknown reason,the equipment can not work.Need to reset the equipment. Press the reset hole with a slime tool.

4.Specifications

Item	Parameter
Video Format	AVI
Video Code	M-JPEG
Video Resolution	640*480
Software	Operation system or the mainstream audio and video playback software
Picture Mode	JPG
Picture Resolution	1600*1200
System	Windows me/2000/xp/2003/vista; Mac os 10.4; Linux;
Recharge Voltage	DC-5V
Data Transfer Interface	Mini 8 Pin USB
Memory Card	TF, Micro SD, Up to 32GB
Battery	High capacity lithium polymer battery