


Rechargeable
battery
included

Digital Pet's Camera

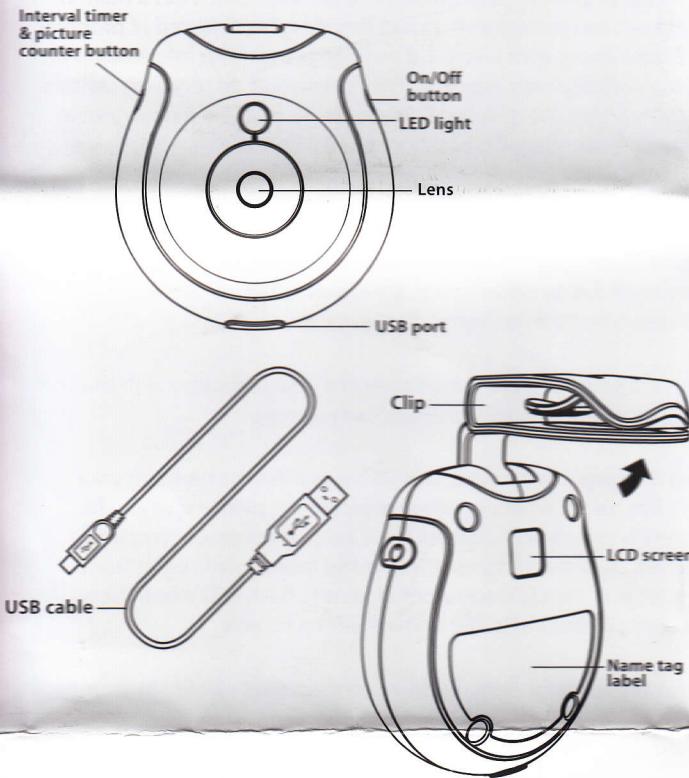

Charging and Recharging Your Pet's Eye View Camera

To charge (or recharge) the battery, connect the camera to a computer using the USB cable. Plug the small end of the USB cable into the USB port [↔] on the bottom of your Pet's Eye View Camera. Plug the large end into a USB port on your computer.

Computer must be ON during charge. The LED indicator will light up RED while the camera is charging and will light up GREEN when the camera is fully charged and ready to take pictures.

After the first charge, only 1 to 2 hours of charge time is needed to fully recharge the battery.

Turning Your Pet's Eye View Camera On and Off

To turn the camera on, press and hold the on/off button for two seconds. The LED indicator will flash GREEN every two seconds while the camera is on and working.

To turn the camera off, press and hold the on/off button for two seconds. The LED indicator will go off.

Note: To ensure safety of the animal and to prevent loss of the camera, supervision by an adult is recommended.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

BATTERY SAFETY INFORMATION

- Do not dispose the battery in fire or heat.
- Do not use or leave the battery near a heat source such as fire or heater.
- Do not strike or throw the battery against hard surface.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- When recharging, only use the battery charger specifically for that purpose.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not transport or store the battery together with metal objects such as necklaces, hairpins etc.
- Do not disassemble or alter the battery.
- Charge the battery every 6 months.
- Turn off your equipment power switch after covering the battery terminals with insulation tape or inserting it to an individual poly-bag.

Battery Level

When the battery level falls below a certain point, the LED indicator will start flashing RED and your camera will no longer take pictures.

Download your pictures to a computer as soon as possible and recharge your camera. (You have 5 hours to do this, from the moment the LED indicator starts flashing RED.)

IMPORTANT: If the battery is completely drained, any pictures stored in the camera's memory will be deleted.

The interval timer button is used to set the period of time the camera waits between taking pictures. You can set interval times of 1 minute, 5 minutes or 15 minutes.

To view the current interval time, press and hold the interval timer button for 2 seconds. The current interval time is displayed on the LCD screen.

Press the button again to change the interval time. The interval time will flash on the LCD screen.

When the desired interval time is displayed, set it by pressing and releasing the on/off button. The interval time will stop flashing on the LCD screen, confirming that it is set. The picture count will then return to the LCD screen.

Sleep Mode

Your Pet's Eye View Camera goes into sleep mode during picture-taking intervals in order to conserve battery power. When you turn your camera off, the camera also goes into sleep mode.

IMPORTANT: To avoid losing your pictures, make sure you download your pictures within 20 hours of a full battery charge, whether your camera is on or off.

Picture Counter

The camera can hold a maximum of 40 pictures, at 640x480, in its memory. The LED indicator will flash RED when the memory is full.

At any time, you can see the number of pictures currently stored in memory by pressing and releasing the interval timer button. The number of pictures stored will be displayed on the LCD screen for a moment.

When the memory is full, be sure to download the pictures as soon as possible to avoid losing them due to loss of battery power.

Downloading Your Pictures

Your Pet's Eye View Camera is compatible with PC and Mac computers. The following minimum requirements are recommended for optimum picture transfer:

- PC: Microsoft Windows® 2000 operating system or higher.
- Mac: OS X® operating system or higher.

Plug the small end of the USB cable into the USB port [] on the bottom of your Pet's Eye View Camera. Plug the large end into a USB port on your computer. Your computer will recognize the new hardware (camera) as a separate drive.

To download your pictures, open the drive and copy the pictures to your computer. Alternatively, you can use any existing photo editing software you may already have on your computer.

From your computer, you can now delete the images that are in your camera's memory.

Specifications

Memory: 8MB SDRAM internal memory

Image resolution: 640 X 480 dpi

Maximum number of images stored: 40

File format: JPEG

Battery: Lithium-ion rechargeable battery
(rechargeable approximately 400 times)

Product Size: 53x57x31mm

Safety and Maintenance

- NEVER immerse any part of the camera or USB cable into liquid.
- NEVER place hot items near or on the camera.
- NEVER attempt to open or disassemble the camera.
- To clean, make sure to disconnect the camera from your computer and remove dirt or dust with a soft damp cloth.
- Never dispose of your camera in a garbage can. It has a built-in lithium-ion battery and should therefore be disposed of properly. Please check with your local recycling centers for information on drop off locations near you. For information on recycling centers throughout the USA and Canada please visit The Rechargeable Battery Recycling Corporation at www.rbrc.org.

Troubleshooting

Flashing Red Light - Indicates that the battery is running low or the memory is full. In either case, your camera will not take any more pictures when the red light is flashing.

Connect your Pet's Eye View Camera to your computer with the USB cable to recharge it and/or download pictures.

Lost Pictures - You have about 20 hours from the moment your Pet's Eye View Camera is fully charged to the moment when the battery is completely drained. If the battery becomes completely drained, all of the pictures stored in the memory will be deleted. To alert you, the LED indicator will start to flash RED when there are about 5 hours of battery power left on reserve.

When the red light starts flashing, connect your camera to your computer for a battery recharge as soon as possible.

Foggy or dirty images - Lens may be dusty or dirty. Blow dust off the lens, then wipe it clean with a soft, damp cloth. Do not use tissue paper to clean lens.

Problems Downloading Pictures

- Make sure all cable connections are secure.
- Consult your photo editing software help section.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE — DO NOT DISCARD