

# **Multimedia Cell Phone Watch**

**User's Manual**

The Mobile Phone Watch's functions and menus are intuitive and will be simple to use for anyone that is familiar with general cellphone operation.

Its features include a camera, music and video player (MP3 & MP4) and touch-sensitive screen for navigation that also allows handwritten input via a stylus that is stored in the watch strap.

The following information will help you to get the best from your mobile phone watch and provides information on security features and network settings, so please keep it for reference.

## INDEX

1. Getting Started:
2. SIM installation:
3. Charging the battery:
4. Connecting to a network:
5. General Use
  - a. Switching on
  - b. Buttons
  - c. Menus
  - d. Making a call.
6. Phone Book

7. Messages
8. Call History
9. Settings
10. Multimedia
  - a. Camera
  - b. Video Recording
  - c. Audio Player
11. File Manager
12. Games
13. User Profiles
14. Organiser
15. Services
16. Extras
17. Shortcuts
18. Icons
19. Connecting to a PC via USB
  - a. Data storage.
  - b. Webcam
  - c. COM Port

20. Battery life indicator
21. Using a Headset (non-Bluetooth)
22. Connecting to the Bluetooth headset
23. Text Input
24. Troubleshooting
25. Safety Notice
26. Care of your mobile phone watch
27. Security
  - a. Passwords
  - b. PIN
  - c. PIN 2

## 1. Getting Started:

First, you need to install a SIM card and battery.

Your Mobile phone watch supports 1.8V and 3V SIM cards. It does not support 5V SIM cards. It is **Quad-band**, operating on **GSM850**, GSM900, GSM1800, PCS1900.

## 2. SIM installation:

- If your mobile phone watch is switched on, press the lower right hand-side button for a few seconds to power off then remove the battery
- Position the SIM card in the SIM card seat. Carefully slide it into position.
- Replace the battery. Make sure that this is installed correctly before powering on again.

## 3. Charging the battery:

- Connect the USB cable to a computer's USB port or a USB power adaptor and the other end to the USB slot on the right hand side of the mobile phone watch.

- To get the best performance from your battery, please drain it completely and then recharge fully for the first three charges, without making any 'top-up' charges. This will ensure the best performance is obtained. It is recommended that you completely drain and then fully recharge the battery every month.

## 4. Connecting to a network:

- After inserting your SIM card and switching on, the phone will automatically search for the network. You can then dial or receive calls and access the phone's other functions.

## 5. General Use

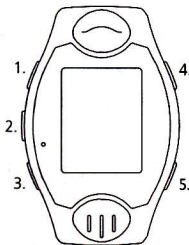 
### 5.1 Switching on

- Press and hold down the lower-right button to power on or off.
- The mobile phone watch will then start in watch mode.
- To go into phone mode, press the screen either with your finger or the stylus.

## 5.2 Buttons

From the main screen the button functions are as follows:

- (1) Messages Inbox
- (2) Alarms
- (3) Menu
- (4) Recent Calls
- (5) Phone Book

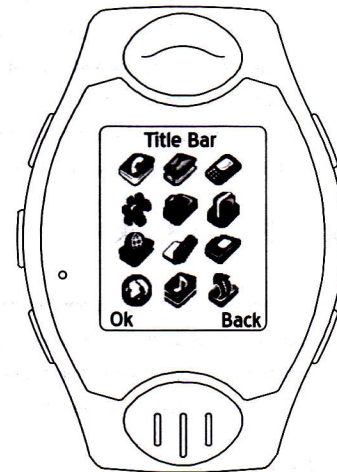 


The functions of these buttons will change, depending on the menu that you are in on the function that you are using. This will be indicated by text next to the bottom left and right buttons. The top and middle buttons are typically used for navigation, if you do not wish to use the stylus or touch screen facility.

## 5.3 Menus

Use the stylus or touch the screen with your finger to navigate the main function menu. Features are listed as follows, from top-left to bottom-right:

- Phone Book
- Messages
- Call History
- Settings
- Multimedia
- File Manager
- Games
- User Profiles
- Organiser
- Services
- Extras
- Shortcuts



## 5.4 Making a Call

You can make calls in three ways.

1. Click on the telephone icon in the bottom centre of the display to bring up a keypad screen and directly input the number you wish to call.
2. Open the phonebook and select a contact. Then click on the telephone icon to call this person.
3. Press the top right hand side button to view your recent call logs. From this list you can select and call these numbers again.

## 6. Phone Book

The phonebook can store 500 phone numbers and each entry can have up to three telephone numbers. From this menu you can add or edit new entries, search your phone book, copy phone book entries between your phone and SIM card's memory and assign custom pictures or ringtones to different people.

## 7. Messages

From this menu, you can send text messages, multimedia messages, email or check your voicemail. Please see the separate section on inputting text for instructions on how to write and edit text in messages.

## 8. Call History

From this menu, you can choose whether you want to view recent calls, missed calls, received calls and also see how long your calls have been.

## 9. Settings

This menu contains the options for setting up your mobile phone watch, including stylus calibration, time and date, speed dialling, languages, caller id and caller barring, network and security settings.

You can also set up and use Bluetooth accessories, including the handset from here. Please see the separate section for information on how to pair and use these devices.

## 10. Multimedia

From here you can use the built in camera to take still or video images or use the media player functions to play MP3 music files or MP4 video files.

- 10.1. Camera - The top and middle left buttons control the zoom function. Press and hold the bottom left button to take a picture. See menu for other options.
- 10.2. Video – click on the red circle to start recording video. See the options menu in the function to adjust other settings.
- 10.3. Audio Player – The audio player will play files that are stored in your mobile phone watch's internal memory in the 'my music' folder. The controls for play/pause are displayed visually onscreen and can be adjusted using the stylus. Alternatively, the top left button can toggle play/pause.

## 11. File Manager

Use this function to organise images, music, video, other media or data files that are stored in your mobile phone watch's memory.

## 12. Games

Your mobile phone watch comes with games and other fun applications that can be found here.

## 13. User Profiles

Select and edit the different settings for each profile here. Then you can easily

change to the most appropriate setting for where you are or what you are doing. You can adjust ringtones, volume, and alerts.

## 14. Organiser

From this menu you can select the calendar, to do list, alarm and world clock functions.

## 15. Services

WAP Internet access is available from this menu. You may need to contact your network provider for information on the correct network settings to use.

## 16. Extras











 
 
 
 
This menu contains several useful applications, including a calculator, unit converter, currency converter and e-Book reader that can read text files saved in the mobile phone watch's memory.








## 17. Shortcuts

Set up shortcuts to favourite and most commonly used features or applications from this menu.

## 18. Icons

icon	content
	signal
	lock
L1	line 1
	MMS
	connect to network
	alarm clock
	transfer
	missed call
	Text message
	headphones mode
	battery status
	ring
	vibrate
	ring after vibrate
	ring after and vibrate

icons	function
	call record function
	project hall file
	MSM
	music player
	standby mode

## 19. Connecting to a PC via USB

When you connect your mobile phone watch to a PC's USB port, a menu will open that gives you three options:

- 19.1 Mass Storage – this enables you to transfer data to and from your mobile phone watch, including images, videos and music or other audio files. When you select this option, the mobile phone watch's internal memory will appear in 'My Computer' as a remote drive. You can cut, copy and paste files to this.
- 19.2 Webcam – this enables your PC to use the camera function as a webcam.
- 19.3 COM Port – this enables your mobile phone watch to be used as a modem. Please follow the instructions that appear on your PC's screen to set up and use this function.



## 20. Battery life indicator

Your mobile watch displays its battery status on the top right of the screen. When the battery is low, the screen will show "electricity low" and you can choose an alarm to sound to let you know when charging is required.

- When charging, the screen will show an animation to let you know how charging is progressing. When the battery is full it will say 'finish charging'.

From a full charge:

Standby time: approximately 72 hours

Talk time: approximately 120-240 minutes

- Note: the actual standby and talk time are affected by whether you are using the other functions too, the local network and SIM card and the settings you choose.

## 21. Using a Headset (non-Bluetooth)

When you insert a headset directly into the slot on the right hand side of mobile, it will enter earphone mode automatically.

## 22. Connecting to the Bluetooth headset



- From the '**Setting**' menu, select 'Bluetooth'.

- Activate Bluetooth on your mobile phone watch from this menu.
- Select '**Search** Audio Device'. It will now begin searching for the Bluetooth headset.
- Hold down the 'Function' button on the Bluetooth headset's control unit until the red and blue indicator lights flash. When they are flashing, release the button.
- The mobile phone watch will then display the headset **name**. Select this to start pairing.
- When you are prompted for a pass code, enter 0000.
- When the pairing is successful, the blue light will flash at two second intervals.
- You can now make and receive calls using the Bluetooth headset.


## 23. Text Input


This mobile supports direct stylus input. This can be used in editing the phonebook, text messages, memos, file management and in other functions.


When you are inputting letters, click  to switch to capitals

Click  or  to show or hide the virtual keypad

Click  to switch between normal input mode and symbols mode.

Click  to input a space

Click  to delete the character before

Click  to go to the next line

## 24. Troubleshooting

Problem	Cause	Solution
SIM card problem reported	SIM card is damaged	Contact network for replacement
	SIM card installed incorrectly	Check SIM card installation
	SIM card dirty	Clean SIM card with dry cloth
No reception	Weak signal area, such as high building or basement	Try a different location
Does not power on	Battery drained	Charge battery
Battery does not charge	Incorrect charger used	Use the correct charger
	Bad contact	Check cables are inserted firmly

## 25. Safety Notice

Please do not use your phone when driving. Please use hand-free accessories if it is absolutely necessary to make a call.

Remember it is illegal in some countries to make any calls when driving.

When flying, please make sure that you obey the airline's policy on mobile phones and switch it off if requested.

Please ensure that your phone is switched off at petrol stations, especially when refueling your vehicle.

Please check and abide by local policies regarding phone use in places such as hospitals where use may cause interference or danger.

This mobile phone watch can be only be maintained by professionals. Attempting to repair or modify it will void the guarantee.

Only use the accessories and battery supplied, or replacements approved by the supplier.

Note: As with any mobile phone, your network supplier may not support all of the functions featured. Certain networks may even not support the 112 International Emergency Call number.

Please contact your network supplier for more information.

## 26. Care of your mobile phone watch

- Only use the original battery or a supplier approved replacement.
- Power off before removing the battery
- Avoid putting the battery near anything made of metal (such as keys) as these may cause it to short circuit.
- Do not dispose of the battery in fire.
- Do not disassemble or attempt to repair the mobile phone watch, its battery or accessories. If damaged or if faults occur these should be taken to a professional repair centre.
- When not in use, store the battery in cool and dry places only, away from sources of heat (over 55°)
- Stop using at once if you notice the battery emitting any unusual odours.
- Stop using it when there are any cracks, distortion, leakage or any other visible damage to the battery.
- Do not clean mobile phone watch, battery or accessories with water or any liquid cleanser or immerse them in water. If cleaning is necessary, wipe with a dry soft cloth only.
- Charge the battery fully before storage if it is not going to be used for a long time.

- When the battery reaches the end of its life recycle it in an appropriate recycling scheme.
- Keep the mobile phone and accessories out of the reach of children.
- Keep away from rain, moisture and all other liquids.
- If the mobile phone watch does get wet, take out battery, and only reinstall it when completely dry.
- Do not use or store in dusty or sandy conditions.
- High temperatures will shorten the life of the electronic components and also damage the battery and certain plastic parts.
- Do not throw, hit or shake your mobile phone watch.

## 27. Security:

- If your phone watch is lost or stolen, please notify your service provider as soon as possible to block the use of the phone and SIM card to avoid excessive unauthorized call costs.
- To prevent unauthorized use of your phone, please take safety measure, such as :
  - Setting the SIM card PIN number.

- Setting the phone PIN

## 27.1 Passwords

Your mobile and SIM card have password functions which can protect your mobile and SIM card from unauthorized use. These can be changed by selecting: 'settings – safety settings - change keywords'. The default passcode (referred to as 'keyword') is 1234.

## 27.2 PIN

This can protect your SIM card from unauthorized use.

The PIN is supplied with the SIM card by the network supplier. Please see this for more information.

NOTE: If the PIN is input incorrectly 3 times , the SIM card will be locked. It will then be necessary to use a PUK code to unlock it. The PUK is stored by your network supplier and you will need to contact them to obtain this.

## 27.3 PIN 2

PIN 2 – this is a 4—8 digit number supplied with SIM card . It is required to set up the call cost and fixed dial functions. Please contact your supplier to confirm if your SIM card supports these functions. If you input the PIN2 incorrectly twice , PIN2 will be locked. If this occurs, please contact your network for details on how to unlock it.

# 28. How to set T-flash card ?

## 28.1 Open T-Flash card holder plate



## 28.2 Inset T-Flash card into the plate



## 28.3 Put the plate down and lock it





## 29. How to set SIM card ?

29.1 Open the SIM card holder plate



29.2 Inset SIM card into the plate



29.2 Push the plate down and lock it

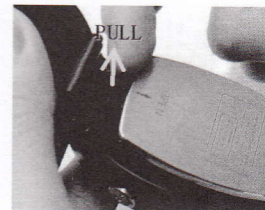 


## 30. How to change the battery ?

30.1 Press the lock



30.2 Pull up the battery



30.3 Put the new battery in the battery compartment, press it until locked.

