Statement: We reserve the right to amend the data without any prior notification.

1. Safety Measure

1.1 Safety Precaution

- When this watch is prohibited from being used or its use can cause interference or danger, do not turn it on. Please keep it turned off.
- Please read the following rules carefully and obey them to prevent danger and violation of laws.

1.2 Operating Environment

- ♦ This watch should be turned off on a plane as wireless device will interfere with the plane.
- ♦ This watch should be turned off in a hospital as it might affect some medical equipment such as pacemaker and hearing aid.
- This watch should not be used in gas station, oil depot, chemical plant, place where blasting operation is performed or place near combustible or chemical.

1.3 Use

- ♦ Use this product only in normal positions.
- ♦ During connection of it to other mobile devices, please read relevant instructions for detailed safety guidance. Do not connect it to incompatible products.
- ♦ Only qualified maintenance personnel may install and repair the watch.

2. Use

2.1 How to charge the battery

- ❖ Insert one end of the charger into the charge jack of the watch and the other end into the power socket. Note: This watch can be charged when connected to the USB interface of a computer.
- ♦ When this watch is being charged, the indicator of battery level on its screen keeps moving. It does not stop moving until the watch becomes fully

charged.

- ♦ After this watch is fully charged, please disconnect the power supply before pulling out the charger.
- 2.2 How to turn on/off the watch
- Press and hold On/off when the watch is power or off. Do not release until its screen lights up.
- 2.3 How to operate the menus and functions
- ♦ For the operation of shortcut keys and other buttons on the home screen, please see "Key Description".
- 2.4 How to reset the watch
- ♦ Thiswatch is furnished with RESET key which is below the small hole in the back cover of the watch. When the watch crashes, use an object with pointed end to press the RESET key of the watch and the watch can be turned off. Then restart the watch manually.

3. Key Description

The keys of this watch includes On/Off, Function, ↑, ↓, and Reset. See the description blow for the main operation of these five keys:

Brief Description of Operation of the Watch Keys

	3 .		
Module	Function	Key	Opera tion
Off mode	Turn on the watch	On/Off	Press and hold
Idle	Turn off the watch	On/Off	Press and hold
	Enter the function menu	Function	Press

	Quickly start the Bluetooth music player	1	Press
	Quickly disconnect the Bluetooth dialer	<u></u>	Press
	Play and stop playing Bluetooth music	Function	Press and hold
	Start telephone directory speech recognition	On/Off	Press
Main menu	Function switch	↑↓	Press
	Enter the function item	Dial key	Press
Pedometer	Start/Pause	Function	Press
	Exit (under the state of pause)	On/Off	Press

Bluetooth music player	Play/Pause	Function	Press
	Switch song	↑↓	Press
	Adjust volume	↑↓	Press and hold
	Answer a call	Function	Press
	Decline a call	On/Off	Press
	Hang up	Function	Press
Conversation	Adjust volume	↑↓	Press
	Hands free/Normal switch	On/Off	Press
	Stop the ring tone by one key	↑↓	Press
	Switch input position	1	Press and hold
Fime editing	Switch input character	1	Press and hold
	Save	Function	Press

Reset	Turn off	Reset	Press
	and reset	1	
	the watch.		

4. Pedometer

4.1 Main Interface of Pedometer

- ♦ Enter the menu of pedometer. Press the Function key from the interface of the pedometer to enter its running interface. The default state of the pedometer is pause.
- ♦ Start/Pause the pedometer: On the running interface of the pedometer, press Function and the pedometer can be paused or started. After it is started, it works. Under the pause state, it stops working
- ♦ Run the pedometer in the background: When the pedometer is started, press On/Off to exit out of the pedometer interface and the pedometer will work in the background, recording data. A "P" shaped icon will flicker in the idle status bar.
- ♦ Exit the pedometer: When the pedometer is under the state of pause, press On/off and the pedometer interface can be completed exited out of.

4.2 Step Setting ♦ Set corresponding step data according to the actual exercise conditions of customers, to make it

actual exercise conditions of customers, to make it easy to figure out the amount of exercise. The highlighted items in the menu are just the set data.

4.3 Weight Setting

♦ Set corresponding weight data according to the actual exercise conditions of customers, to make it easy to figure out the amount of exercise. The highlighted items in the menu are just the set data.

4.4 Last Record

♦ Record the exercise data on the customer's last use of pedometer.

5. Bluetooth

This watch is equipped with Bluetooth functions. Through Bluetooth, the watch can be connected to remote Bluetooth device. In addition, through Bluetooth notice, it can obtain the information about remote device and operate remote devices.

5.1 Bluetooth Connection

- ♦ The Bluetooth of this watch is active by default.
- Remote watch can realize search, matching and connection operation on this watch. Besides, search, matching and connection operation can be realized on remote devices through this watch.
- ♦ Bluetooth notice: Bluetooth notice apk file needs to be installed at the far end. After the file is installed and Bluetooth is connected, the watch will prompt synchronization of time and date and other operation.

5.2 Bluetooth Disconnection

♦ Enter the Bluetooth connection list and select the connected device, to realize disconnection, deletion and other operation.

6 Phonebook

With telephone directory, the owner of this watch can view the information about the contacts in the remote watch as well as make a call through Bluetooth, after it is normally connected to the Bluetooth of the remote watch.

6.1 Bluetooth Phone Book

- ♦ Phone book can be obtained successfully when
- Bluetooth is connected normally.

 The phone book displays the information about the contacts in the remote watch.

6.2 Contact Operation

- ♦ View: Press Function and the information about the selected contact can be viewed
- ♦ Call: Press Function on the information window of contacts and Bluetooth call can be made.

7 Call list

With call records, the owner of this watch can view the call records in the remote watch as well as perform corresponding operation, after it is normally connected to the Bluetooth of the remote watch

7.1 List of Call Records

- Call records can be obtained successfully when Bluetooth is connected normally.
- ♦ The list of call records displays the call records in the remote watch.

7.2 Operation of Call Records

- View: Press Function and the information about the selected records can be viewed.
- ♦ Call: Press Function to select the menu Call, and Bluetooth call function can be executed.

8. Remote Notifier

8 1 Remote Notice

- ♦ Remote notice is the function to transmit data in the watch such as message, information and prompt to the watch through Bluetooth so that the watch can receive and view data such as message and information of effects, including charge prompt, low battery indication, QQ message, SMS and music information.
- ♦ Use of remote notice: First install APK file of Bluetooth notice in the Android smartphone. The download link is:

www.myuwatch.com/BTNotification v3.0.1.ap



Or it can be directly downloaded or installed by

using Android phone to scan the following QR

After Bluetooth notice is noticed, enable Bluetooth notice on the mobile phone and click "Application Push". Click OK after auxiliary function window pops up. Then click "Bluetooth Notice". After "Bluetooth Notice" is activated, connect the mobile phone and the watch. After Bluetooth is connected to the watch, a prompt will given for operation such as synchronization of time. After time is synchronized, the watch can receive remote notice.

- Cancel remote notice: Check the required option in the "Notice Application" menu under "Application Push" in the Bluetooth notice of the mobile phone. For example, check QQ and the watch can receive QQ messages. Otherwise, it is not able to receive any QO message.
- ♦ Notification method: After the watch receives a remote notice, a prompt dialog box will pop up to indicate the notification message. Enter it and detailed information can be viewed.

9. Remote capture

9.1 Remote capture

- ♦ Remote capture is photographing through Bluetooth and the camera of the mobile phone.
- Use of remote notice: First install APK file of Bluetooth notice in the mobile phone. After installing it, enter the menu of remote capture and the camera of the mobile phone can be turned on and photographing can be controlled.
- Note: During remote capture, make sure the screen of the mobile phone is not locked. If its screen is locked, the camera might not be able to be turned on. Besides, the function of remote capture of mobile phones of different manufactures varies.

10. Multimedia

10.1 Bluetooth Music Player

♦ Bluetooth music player can play the music stored in the remote mobile phone.

♦ Start/Pause: On the interface of Bluetooth music player, press Function and play of Bluetooth music can be started/paused. On the Idle interface, the Function key can be pressed and held to play and pause the Bluetooth music.

♦ Song switch: On the interface of the player, press ↑ or ↓ and the player of the mobile phone can begin to play the previous or next song.

♦ Volume adjustment: On the interface of the player, press and hold ↑ or ↓ and the volume of the Bluetooth music played by the watch can be adjusted. Press ↑ to increase the volume. Press ↓ to decrease the volume.

Prompt: Since different third party music players support Bluetooth to different extents, very few music players may show different responses to the remote control of the watch. This is normal.

11. Anti lost

11.1 Anti lost

♦ Anti lost serves to judge the distance through the intensity of the Bluetooth signals received by the Bluetooth watch and

mobile phone and then decides whether to give an alarm. This can effectively prevent loss of mobile phone, loss of watch and other problems.

♦ The function of anti lost is normally not activated

Anti lost activation/cancellation: The first option on the interface of anti lost is the option serving to set activation/cancellation of anti lost. The function of anti lost can be activated or cancelled according to actual needs.

♦ Anti lost alarm prompt: At present, there are three types of anti lost, i.e. vibration and ringtone, ring tone 4, mute, vibration, ring tone and vibration

15. Call Making & Answering 15.1 Call Making through the Phone Menu

Connect the Bluetooth. During its connection, the mobile phone will prompt the user to choose whether to access the phone book. Click yes and the phone book will be synced to the watch.

♦ Select the contact person to be called in the phone book option. Press Function for Bluetooth call.

15.2 Call Making through the Call Lists Menu

♦ After the Bluetooth is connected, recent call records of the mobile phone can be viewed.

♦ Select the call lists to be called in the call list option. Press Function for Bluetooth call.

15.3 Call Making through Message Menu

♦ Ensure the Bluetooth is connected normally. After the remote notice is connected, the short messages in the Android Phone can be synced to the watch.

 \diamondsuit Select the message sender to be called in the message menu. Press Function for Bluetooth call.

15.4 Operation during Call

♦ When there is any incoming call, press Function to answer it or press On/off to reject it.

After the call is answered, press Function to end the call.

♦ After the call is put through, press On/Off to switch between HF/Normal mode.

15.5 Volume Adjustment

 \Leftrightarrow During the call, the volume can be adjusted by pressing \uparrow or \downarrow .

15.6 Hands-free

♦ The default state during call is Hands-free. On/Off key can be pressed to change the state.

15.7 Mute by One Key during Call

♦ When the phone rings, before it is answered, ↑ or ↓ can be pressed directly to stop the phone from ringing in case others might be disturbed.

16. Schematic Diagram of Product Charging

16.1 there have a spigot when the rubber sheet at the left side of the watch is push aside



16.2 Plug a data line to charging



Warm prompt: The battery of this product can not be disassembled. The product might not be able to be turned on when its battery has no power over one month after it is left unused. Its user is expected to charge it on its own.