

USER INSTRUCTION

Dimensions : 13.8 in x 1.4 in.


Weight : 1.5 lbs.

Features Touch Sensitive Tip that creates drum sound.

- 1 Switch ON/OFF button to ON.
- 2 Beat the tip of the Drum Stick on any surface to create drum sound.
- 3 Tip of the Drum Stick will light up with each beat.

- 4 For Crash Cymbal sound, hold Crash button while beating tip of the Drum Stick.
- 5 For Snare sound, hold Snare button while beating tip of the Drum Stick.
- 6 Press melody button for background music. (Please note: This feature is only included on Drum Stick that has the melody symbol inscribed above button.)

BATTERY INSTALLATION

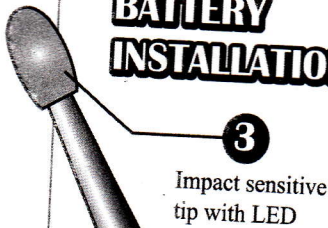

3 Impact sensitive tip with LED

- ★ Use a screwdriver to open battery cover door. (Middle screw on back of Drumstick)
- ★ Use 2 "AA" 1.5V Batteries for each Drum Stick (not included).
- ★ Batteries are to be inserted with the correct polarity (+/-).
- ★ Do not mix old and new batteries.
- ★ Do not mix alkaline standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- ★ Replace batteries if the drum sounds become erratic, as this may be an indication that batteries are becoming worn out.
- ★ To avoid leakage or explosion, do not put batteries in fire.

※ Ages 3 to adult.

