 


1

QUICK START GUIDE

3D DLP PICO PROJECTOR

 
A. Product Overview

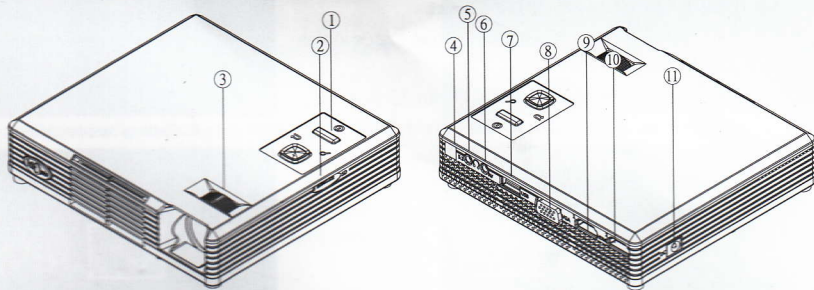

- ① Power Switch ② Micro SD ③ Focus Ring ④ IR Sensor ⑤ 5.1 Surround Sound/Earphone
⑥ AV in ⑦ USB ⑧ VGA ⑨ HDMI - 1 ⑩ HDMI - 2 ⑪ DC in

2

B. Remote Control

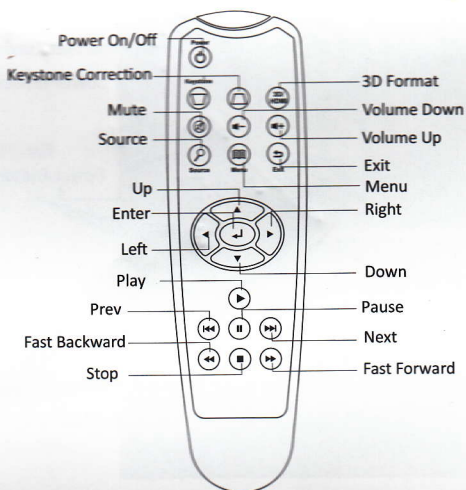


3

C. Device Connectivity

Connect

 - Micro SD Card

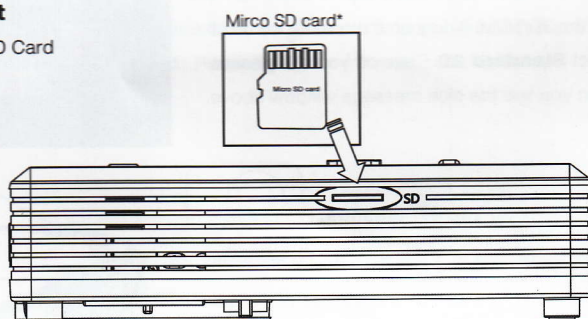





Note: Insert your Micro SD card while the side with flash contacts facing **upward**.

4


Connect

- 5.1 Surround Sound Device/Earphone
- DVD Player and Other AV Interface Device
- USB Drive • Personal Computer
- Blu-ray Player and Other HDMI Interface Multimedia Device

    5.1 Surround Sound Device
/Earphone



 
Blu-ray Player and
other HDMI Interface
Multimedia Device
(HBD400 WiFi Android Dongle)

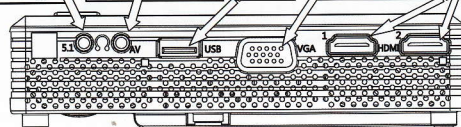

5

D. Operation Instruction

 1. Connection

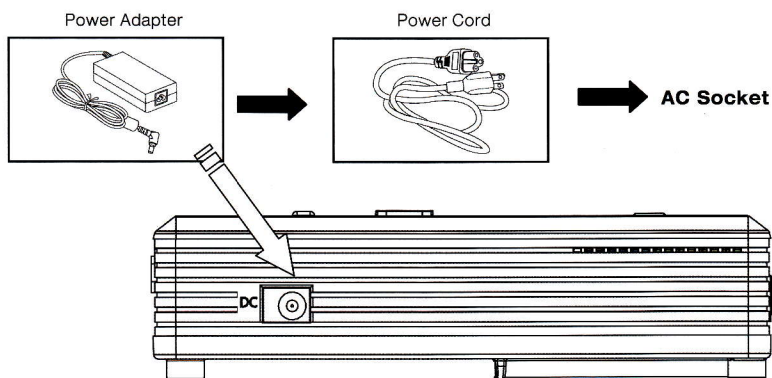


6

2. Power On/Off

Press the power switch to turn on the projector. Press it again to turn off the projector.


3. Adjust Focus

 Rotate the focus ring to to focus the image.

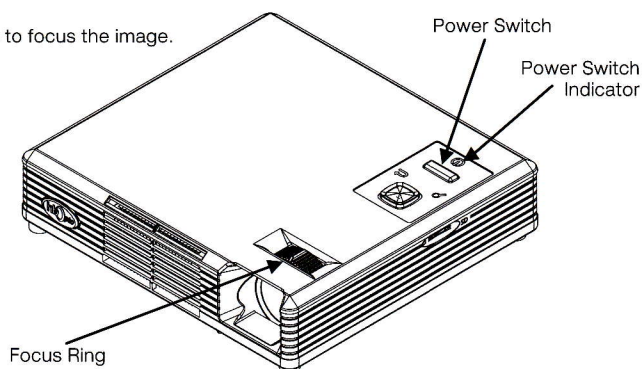

7

 4. Function Keys

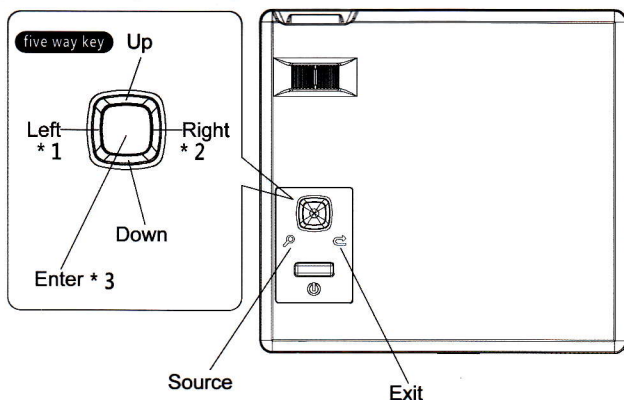

* 1 : Move the cursor left; Press it for 3 seconds: Volume Down

 
* 2 : Move the cursor right; Press it for 3 seconds: Volume Up

* 3 : Confirm your choice; Press it for 3 seconds: enter the OSD menu.

8

5. Using the Tripod

The projector can be used with the tripod by connecting the tripod to the bottom of the projector. Many typical tripods are compatible.

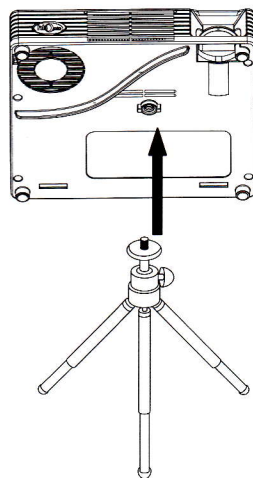

*If you have purchased the Battery Pack, HBB086, it is connected between the Pico Projector and the Tripod.

9

6. OSD Menu 1 / OSD Menu 2

Press **Five Way key** to confirm your choice for 3 seconds (or **menu** key on the remote control) to enter the OSD menu. You will see OSD Menu 1 or OSD Menu 2.

 
• OSD Menu 1

You will see OSD Menu 1 when your source is USB, Micro SD card, VGA, HDMI #1. Use **Five Way key Up** and **Down** to select the section you want; **Left** and **Right** to choose the item you want to adjust. See more details in User Guide.


• OSD Menu 2

You will see OSD menu 2 when your source is HDMI 2. Use **Five Way key Up** and **Down** to select the section you want; **Left** and **Right** to choose the item you want to adjust. See more details in User Guide.

* The following steps use OSD menu 1 for example.

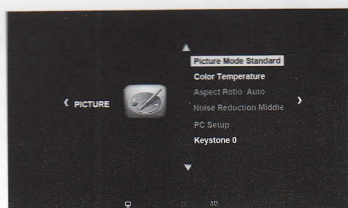

OSD Menu 1

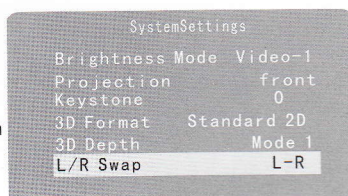 

OSD Menu 2

10

E. Using Your Projector: 3D Projection

You can display 3D images by:


- Playing Blu-ray 3D files.
- Creating 3D image from Half Side by Side or Top and Bottom video/image files.
- Creating 3D image from 2D files. See the corresponding page for further information.

File Format	Accepted Input Source	Page
Blu-ray 3D	HDMI – 1/ HDMI-2	p. 11
Half Side by Side or Top and Bottom video/image files	USB Drive/Micro SD Card/VGA/HDMI – 1/ HDMI-2/AV	p. 14
2D file	USB Drive/Micro SD Card/VGA/HDMI – 1/ HDMI-2/AV	p. 19


11

1. Playing Blu-ray 3D from HDMI Interface Device

 (1) **Choose input source:** Press **Source** key and select your input source as “HDMI – 1” or “HDMI-2”.

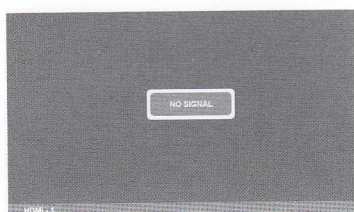

Source—HDMI-1

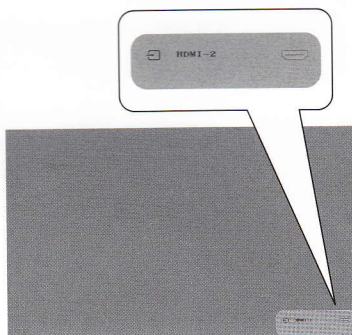 

Source—HDMI-2

12

- (2) **Play your Blu-ray disc. Put on your 3D glasses** when you see the blue message window.
- (3) **Press the power button of the 3D glasses.**



(4) When you stop playing the disc, you will see the blue message window and you can take off 3D glasses.



13

(5) **To turn off the 3D glasses:** Press the power button of the 3D glasses for 1.5 seconds to turn them off. You will see the glasses flashing 3 times before they turn off. Or, they will be automatically turn off in 5 minutes if they do not receive a 3D signal.

 
 


14

2. Creating 3D Image from Half Side by Side or Top and Bottom Video/Image Files

(1) **Choose input source:**

- **VGA/HDMI/AV Device:** Press **Source** key to select your input source.
- **USB drive/Micro SD card:** Please switch to the main menu below.

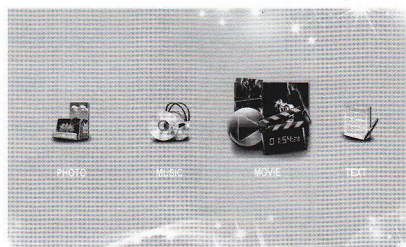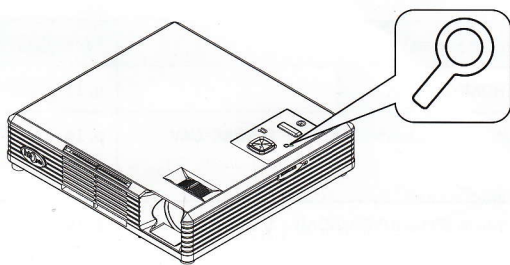


Main Menu

15

(2) **Play your file:**

 
- **VGA/HDMI/AV Device:** Follow the instruction of your device to play your file.
- **USB drive/Micro SD card:** On the main menu, choose your file type as **"Photo/Movie"** and select your source as USB drive/Micro SD card. Enter your folder and choose your file.

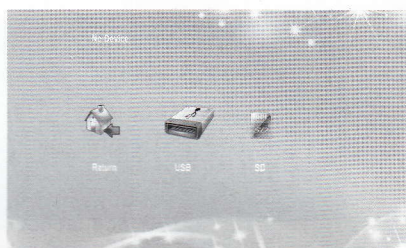


USB/Micro SD Card Select Menu

16

 - **Preview:** Keep the cursor on the file for 5 seconds, a **Preview** window will pop out to show the format of the 3D file that you will choose is "Half Side by Side" or "Top and Bottom". Press **Five Way** key to **confirm** to play the file.

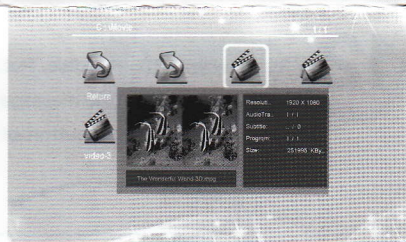

Preview-Half Side by Side

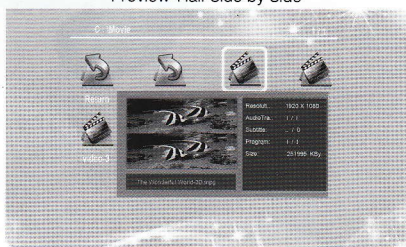 


Preview-Top and Bottom


17

(3) Select 3D Format:

 - Enter OSD menu. Go to **3D Setting (or System Setting) >> 3D Format**.
- The video/image will be in pause status .
- Press **Five Way key** confirm to go into 3D Format Submenu. **Use Five way key Left and Right** to select the corresponding image (Half Side by Side or Top and Bottom) based on the **Preview** images. Press **Five Way key** to confirm you choice.
- The 3D/HDMI key on the remote is depressed for 2 Seconds to select the sync with your glasses with the 3D image on the screen.

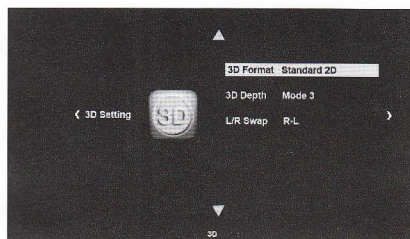

3D Setting/System Setting

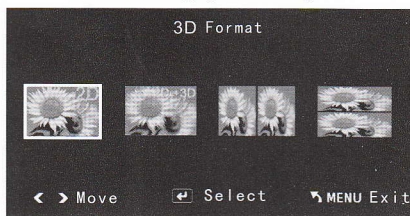 



3D Format Submenu

18

(4) **Put on your 3D glasses** when you see the blue message window. Press the power button on the 3D glasses.

(5) **To Return to 2D mode:** Choose **3D Format** again and select **Standard 2D**, or users can also use the 3D/HDMI key on the remote control to select Standard 2D. Take off your 3D glasses when you see the blue message window below.

  (6) **To turn off the 3D glasses:** Press the power button of the 3D glasses for 1.5 seconds to turn them off. You will see the glasses flashing for 3 times before they turn off. Or, they will be automatically off in 5 minutes if they do not receive a 3D signal.

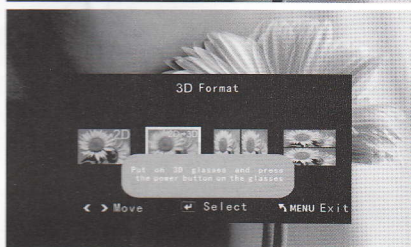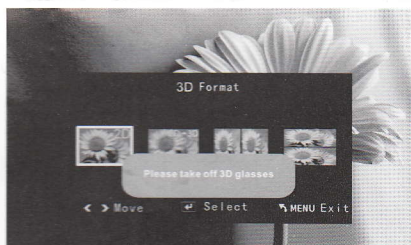


19

3. Creating 3D Image from 2D Files

(1) Choose input source:

 - **VGA/HDMI/AV Device:** Press **Source** key to select your input source.
- **USB drive/Micro SD card:** Please switch to the main menu as below.

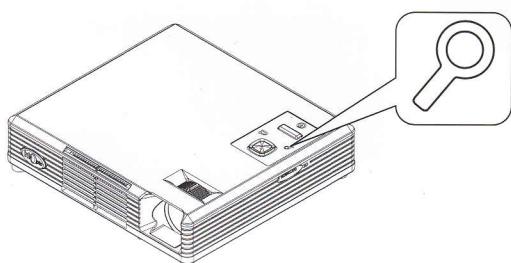

Main Menu

 
20

(2) Play your file:

- **VGA/HDMI/AV Device:** Follow the instruction to play your file.
- **USB drive/Micro SD card:** On the main menu, choose your file type (Photo/Movie/Text) first and select your source as USB drive/Micro SD card. Enter your folder and choose your file.
- **Preview:** Keep the cursor on the file for 5 seconds, a **Preview** window will pop out to show the 2D file that you will choose. Press **Five Way Key** to confirm to play the file.




USB/Micro SD Card Select Menu

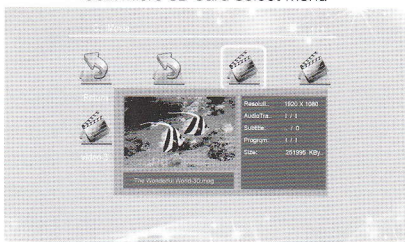


Preview


21

(3) Select 3D Format:

 - Enter OSD menu. Use **Five way key Left and Right** to switch to **3D Setting(or System Setting)**, and select **3D Format**.
- The video/image will be in pause status in this stage.
- Press **Five Way Key** to go into 3D Format Submenu. Select "**2D to 3D**." Press **Five Way Key** to confirm.
- Users can also use the 3D/HDMI  key on the remote control to select "**2D to 3D**."

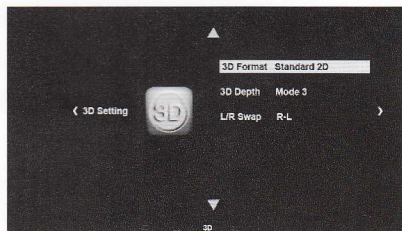

3D Setting/System Setting – 3D Format


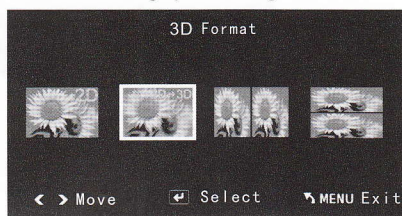 


22

  - (4) Put on your 3D glasses** when you see the blue message window. Press the power button on the 3D glasses.




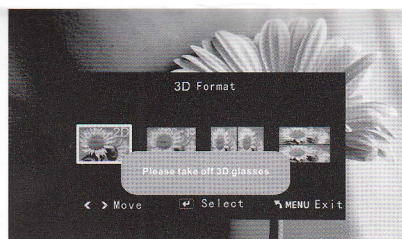 
- (5) Adjust 3D depth effect:** Enter OSD menu. Go to **3D Setting(or System Settings) >> 3D Depth** to adjust the intensity of your 3D depth effect.

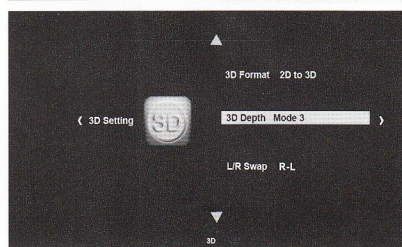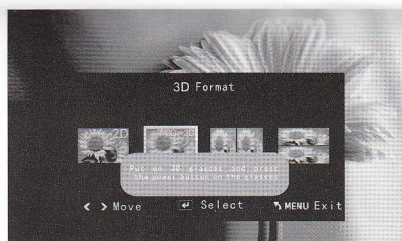

3D Setting/System Setting – 3D Depth

23

- (6) Return to 2D mode:** Choose **3D Format** again and select **Standard 2D**; or users can also use the 3D/HDMI  key on the remote control to select **Standard 2D**. Take off your 3D glasses when you see the blue message window above.




- (7) To turn off the 3D glasses:** Press the power button of the 3D glasses for 1.5 seconds to turn it off. You will see the glasses flashing 3 times before they turn off. Or, they will be automatically off in 5 minutes if they do not receive a 3D signal.



24

F. Using Your Projector: 2D Projection**1. Play from AV/HDMI/VGA Device**

- After you connect your multimedia device and the projector, turn on the projector. Press **Source**  key to select your source.
- Follow the instructions of your device to play your files.

2. Play from USB Drive/Micro SD Card

- On the main menu, choose the type of the files you are going to play: Photo/Music/Movie/Text.
- Press **Five Way Key** to confirm and choose your source as USB Drive or Micro SD card on the screen. Enter your folder and choose your file.

