

# H<sup>5</sup> Box



# User Manual

# Precautions

When you open the packing, please don't forget to check whether the accessories are complete. For safe and effective use of this product, please read the notes carefully before use.

- Precautions before operating this machine, please be sure to read the instructions for use.
- Pay attention to all warning messages.
- Please do not use this machine near water.
- Do not water or chemical cleaning surface of the fuselage (such as thinner, benzene, alcohol), as required, wipe with a dry cloth.
- Do not place the unit in temperature is too high or too low, very dusty or damp environment.
- You placed the machine in order to avoid unnecessary damage, do not place heavy objects on the product.
- Do not leave the machine fell from a great height or a hard object hit, otherwise it will cause surface damage, power loss or other damage to hardware, a slight vibration will not affect the normal operation of the product.
- Please Protect the power cord and related appliances, especially the power plug, simple power outlet, and power lines and connections of this product, do not trample, crush these devices.
- This machine during use of mobile phones may be subject to radio interference. If such interference is obvious, ask you to use the mobile phone away from the unit.
- Follow our matching power adapter, do not use the power adapter does not match the other specifications.
- If your machine is not working properly, please contact your dealer, please do not attempt to repair.
- Please keep the block clean, when if foreign objects or liquids accidentally get inside the product, immediately disconnect the product, your computer's connections to prevent short circuit cause harm to the human body.
- In order to prevent product damage caused by lightning or power, in the case of thunderstorms or voltage instability moratorium on the use of this product.

<b>Chapter One.....</b>	<b>3</b>
Features.....	3
Technical Specifications.....	4
<b>Chapter Two.....</b>	<b>5</b>
Host physical connection diagram.....	5
Exterior view of the remote control and instructions.....	6
<b>Chapter Three.....</b>	<b>7</b>
Getting Started.....	7
<b>Chapter Four.....</b>	<b>8</b>
Description.....	8
4.1 Select starter.....	8
4.2 Setting.....	8
4.3 Browser.....	16
<b>Chapter Five.....</b>	<b>17</b>
Common Troubleshooting.....	17

 
 
## Features










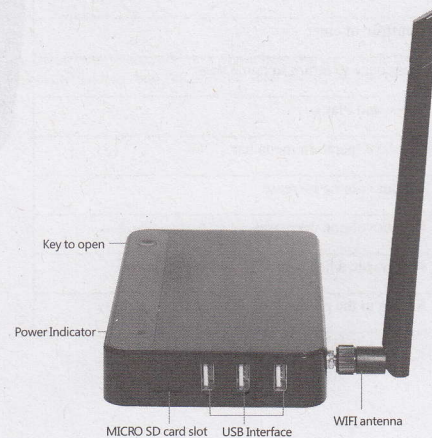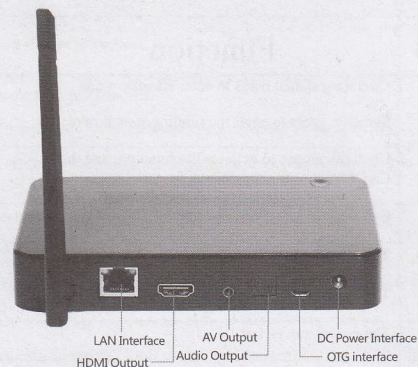





- The main chip used a Quad-Core CortexA9, highest frequency 1.6GHz .
- 2G DDR3,16G Bytes of memory Nand Flash .
- Using Android smart development system.
- Can be installed mass-compatible application software itself APK Android.
- Built-in browser, support for direct browsing.
- Built-in rich video platform Vioxx can be found by searching or you want to install the software video.
- The machine plug 360 high sense of wireless Wi-Fi antenna, sensitivity is better than the built-in antenna.
- Using the latest generation of the fifth-generation 802.11ac protocol Wi-Fi, Bluetooth version 4.0
- Support 720P, 1080I, 1080P (1920x1080) resolution, high-definition video decoding.
- Supports multiple video formats, such as RM/RMVB-HD/FLV/MP4...
- Supports multiple audio formats, such as MP3/WMA/ACC/OGG/WAV ...
- Supports a variety of image formats, such as JPEG/PNG ...
- Support Dolby Surround Digital audio decoding, direct output left and right channels.
- Support for coaxial digital audio output, connect a digital amplifier to enjoy the perfect sound.
- Support for Wi-Fi, infrared remote control, wireless/USB keyboard, mouse.
- Support U disk, mobile hard disk, micro SD / MMC cards and other storage devices
- Built-in USB (host) port, direct mounting external USB interface device, capable of supporting a variety of drive USB device, such as a camera, a keyboard, a mouse.
- Support for multiple languages (Chinese Simplified, Chinese traditional, English, European languages, Japanese, Korean, etc)
- Support various types of input

 

Extended Interface	Network interface x1
	HDMI Output x1
	Audio Output x1
	Memory card slot x1
	HOST interface x3
HDD format support	NTFS/FAT32
Video decoding	H.264, Real Video, MPEG-1/2/4, Div X, etc.
Audio decoding	MP3,WMA,AMR,ACC,OGG Vorbis PCM/ADPCM etc.
Support subtitle formats	SRT、SUB、SMT、SSA
Network interface	10Mbps/100Mbps Ethernet LAN
	Supports USB external WIFI wireless network card that supports specification: 802.11b/g/n
Power supply	Input voltage: AC 100-240V, 50/60Hz access
	Output voltage: DC 5V 2A
Host Power Requirements	5V
Export	(TV) AV output port
	(HD) HDMI HD output window
Dimensions	Standalone: 155 * 96 * 30mm
	Packing: 196 * 165 * 92mm
Standard Accessories	Power Adapter
	Wi-Fi Antenna
	Remote Control
	HDMI Cable
	User Manual
Note: This product specifications and design are subject to change without notice.	

## Host physical connection diagram



Button	Function
	Operating status: press to enter standby mode Standby: press to enter the running state power
	Click the mouse to activate the function, and then click Cancel mouse function
	Exit the current screen and return to the previous step
	The cursor moves up
	The cursor moves down
	The cursor moves left
	The cursor moves right
	Confirm or enter
	Press once to return to home page
	Pause and Play
	Display Operation menu bar
	Output volume increase
	Output volume decreases
	Play music when switching to the next song
	Switch to the previous track when playing music



## Getting Started

## 3.1 Power and Remote Control Practices

Turn off the power before, be sure to make the machine is in "standby" status, in order to avoid irreparable damage to the hard disk generate.

If long-term use of this product, we recommend that you unplug the power socket.

Operating range of the remote control is: not far from the front panel of the machine at 7 m, angle of 60 degrees or less.

Remote control distance will vary with the environment.

## 3.2 Connecting a display device

The HDMI cable connected to the TV HDMI interface and native HDMI interface. When unplugged HDMI interface, the user of the product and show you the power device is turned off, otherwise, it may cause damage to the device that shows you some of the electronic components.

The product automatically identifies HDMI output, note the source of the TV should switch to the HDMI port you are connected to the signal source.

## 3.3 Reset function

Reset function is: Restart the product. There is a reset button at the bottom shell, for operation of the reset function requires only a short time you press the reset button, the product will be restarted.

 


# Chapter Four

## Description

### 4.1 Select starter

Power, short press the key to open the machine power turns blue from red light indicates normal power operation of the machine, the system starts, go launcher selection page, select H5Launcher instantly start of your journey HD network. Use the mouse to click on the screen below the "H5Launcher" icon to switch starters .

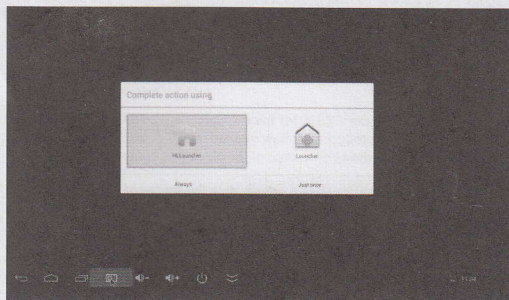


### 4.2 Setting

#### 4.2.1 Language and Input



Open the "Settings" menu "Language and Input Method", select the language you want to set, and then check your preferred input method, if not the input method you prefer, you can download and install your desired input method then set up when you click on the notification bar when entering text

 in the bottom right of the "H5Launcher" key to switch input methods.

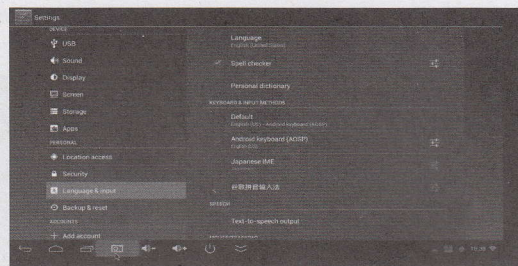


### 4.2.2 Wireless and Network

  The machine has two ways to connect the network, the first one is by connecting a wireless Wi-Fi network, simply enter the appropriate password or wireless router directly connected to the nearby wireless networks can be connected.

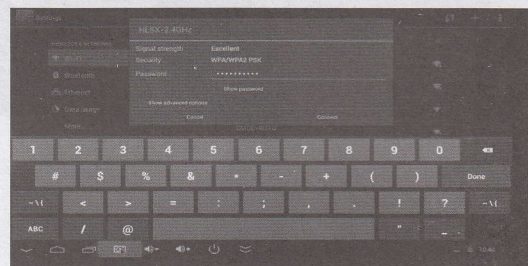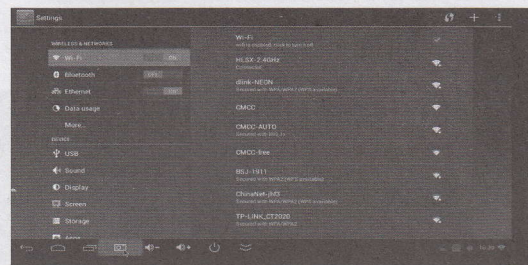


 The second is connected to the network by connecting a network cable, the connection is successful notification bar bottom right corner of the screen there is the "Ethernet" icon appears.

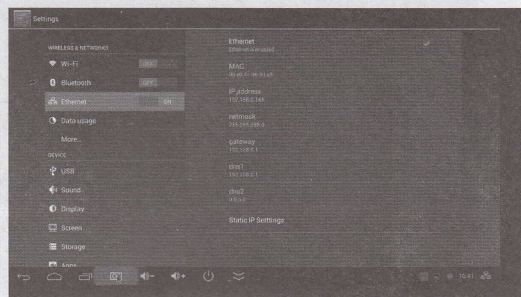


#### 4.2.3 Date and Time

 You can set the date and time in the Settings menu of the "Date and Time" menu bar settings, you can manually set, you can also check automatically obtain the network time.

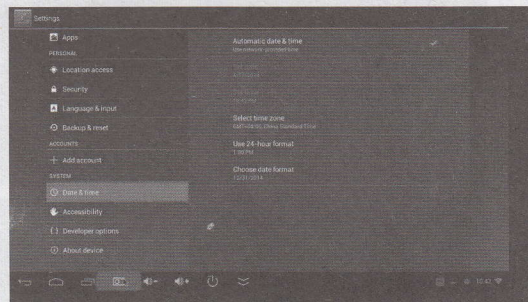


#### 4.2.4 Display and Screen

 Settings menu in the "Display" can change the wallpaper, adjust the font size; "Screen" menu, you can adjust the width of the screen and the output resolution.

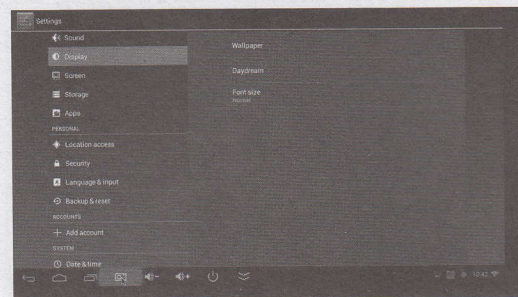

 
Settings menu "screen" option can adjust the width of the screen and the output resolution.

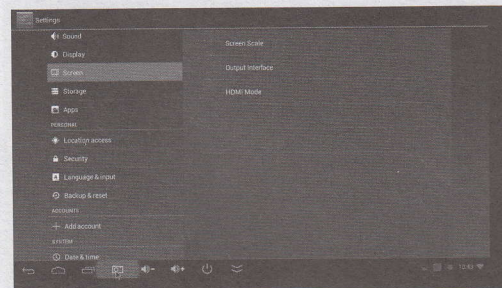





#### 4.2.5 Installing and uninstalling applications

 This machine is the Android smartphone operating system, the application must be installed. apk format, you can download online you need to install the software for installation through the browser, can also be installed via Micro SD card U disk or installation must be in the "Settings" in the "Security" menu, check "unknown sources" in order to install the software before.

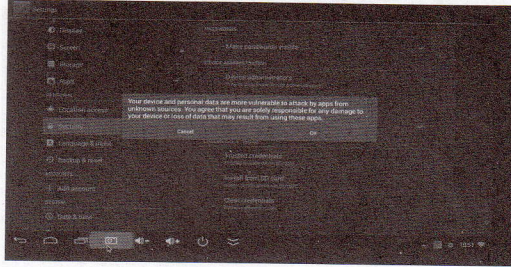


Installation "QQ" Software

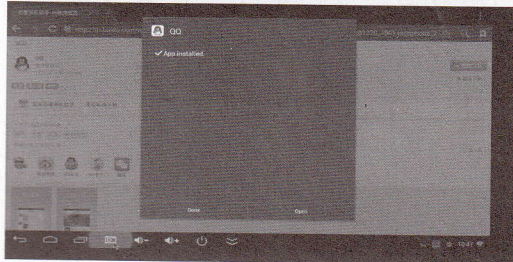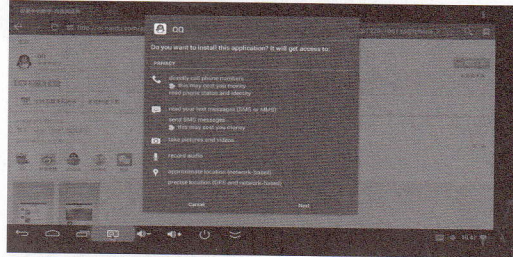  


If you need to uninstall the software can find the software you need to delete the "apk installer" inside, and then select Uninstall, suggested redundant idle uninstall software recommended to avoid affecting the speed of your machine.

 Open the "apk installer"

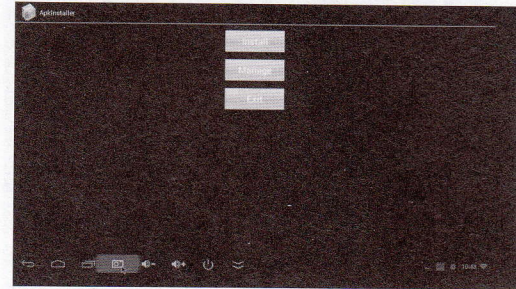

Select uninstall software

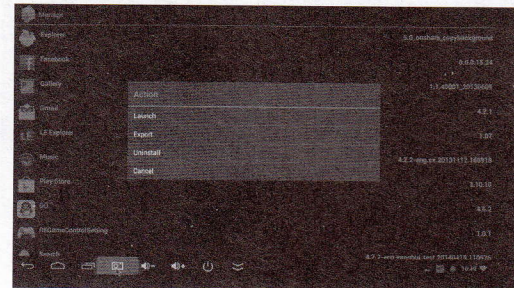 




## Uninstall Software




 You can also uninstall the software in the "Settings" in the "Applications"

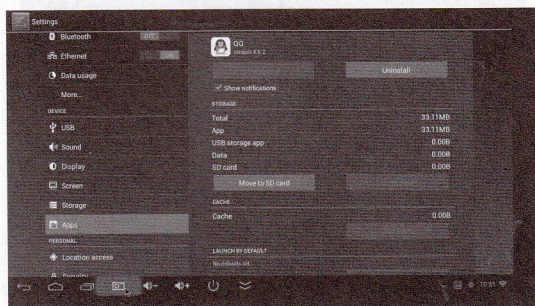


## 4.2.6 Reset the device and shut down

 If you need to restore factory settings, restore factory settings can be operated in the "Settings" menu in the "Backup and Reset" option bar inside.

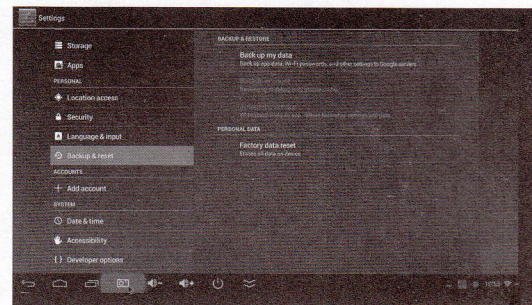

 If you need to turn off your device, please click shutdown shortcut buttons below the screen, wait for the device turned off, not directly off the power.

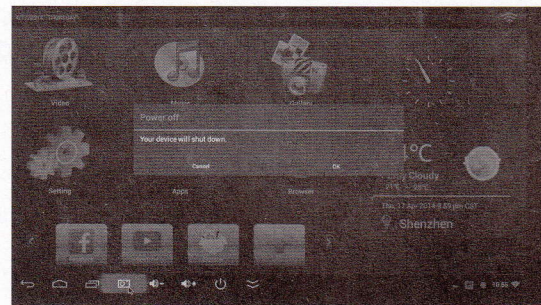


### 4.3 Browser

Press the arrow keys on the remote control, select the "Browser" option, press the "OK" button to open the browser, The browser connects to the home page, default Google search.



 Enter the address you want to visit the site in the address bar, you can start your journey on the internet.

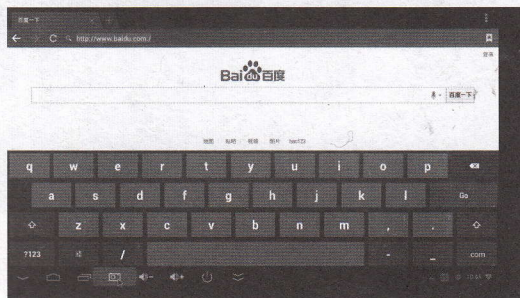

## Chapter Five

### Common Troubleshooting

After connecting the cable, why is no display on the TV screen?

First; please confirm whether the boot: The product is plugged in, press the power key, Until the power indicator light changes from red to blue as compared to the normal boot state; Second; output state confirm whether the product is consistent with the TV input status (whether the TV signal source and the output signal corresponding to the product); Third; confirm HDMI cable is good contact.

Why online playing a video will appear cushion?

First; whether there is time for the regular buffer; If so, that is your speed instability. Second; partially or HD sources too bad seed, there is a normal buffer, then the need to consider the application Hou network speed.

Why can not install software full screen?

Because part of the software in the preparation of cured display resolution, and this display resolution and machine output resolution is inconsistent, resulting in not full screen.



## Warranty Card

### Warranty Terms

1. Thank you for purchasing and using our products. This card is the three guarantees certificate of this product, please complete the information stamped by the dealer before they take effect.

2. Warranty service is limited under normal circumstances, the product quality problems caused by the failure of artificial damage. With this card and valid invoice, you will enjoy the following services:

- Users within 7 days of the date of purchase, hardware failure, you can choose to return, replacement or repair free of charge; From the date of purchase within one month, you can choose a replacement or repair free of charge; From the date of purchase within one year of the effective warranty period, will be covered by a limited warranty.
- 1 year limited warranty from the enjoyment of the service date of purchase of the box.
- External power supply, telecontroller from the date of purchase and enjoy 30 days limited warranty, warranty service within one year; By the maintenance of the Company's products continue to enjoy the original warranty period, warranty service provided by the Company; From the original deadline of less than three months of the warranty, the replacement parts, enjoy three-month warranty from the date of replacement.
- After the repair of defective parts down for the benefit of the Company.
- Users need to keep maintenance card, lost not be reissued.
- This card may not be altered, otherwise, invalid certificate.
- The card does not bear any responsibility, including without limitation incidental or consequential damages or lost profits resulting in expected interest will be due to the use of or inability to use the product resulting from the work stopped or damaged products within the data maintenance, any responsibility for damage to the procedures, such as losing situation.

### Non-warranty

1. Content on the warranty card identifies discrepancies and kind of goods or altered.
2. Failure to use the proper way to use the product, maintenance, custody and cause damage.
3. Lightning or other causes of damage to the power system.
4. Force majeure accidents, disasters, wars and other damage caused.
5. Obvious abuse, damage and damage caused by human transport.
6. Use self or non-public issuance software products can not cause damage to normal use.
7. Make alterations, repairs or a non-authorized third party dismantled, installation, maintenance.
8. Three packs do not meet or exceed the relevant provisions of the warranty period.

## Warranty Card

Body No. \_\_\_\_\_

Date of purchase \_\_\_\_\_ Warranty Date \_\_\_\_\_

Basic information (in order to safeguard your rights, please fill out and keep it as evidence when repairs)

Product Name		Dealer Name	
Model		Tealer Telephone Number	
User Name		User Telephone Number	
Mailing Address			
E-mail			
Sales Unit (stamp):		Dear users! Thank you for purchasing our products. To enable you to use the company's products can get the best service, please be sure to read the instructions carefully foregoing warranty and fully understand our responsibility to the scope and content of warranty products. Also, please remember to fill out your warranty card when you buy this and ask the sellers keep sealed.	

### Warranty Record

Date	Fault Description	Reason	Treatment	Remark