 
 
 


1 Contents:







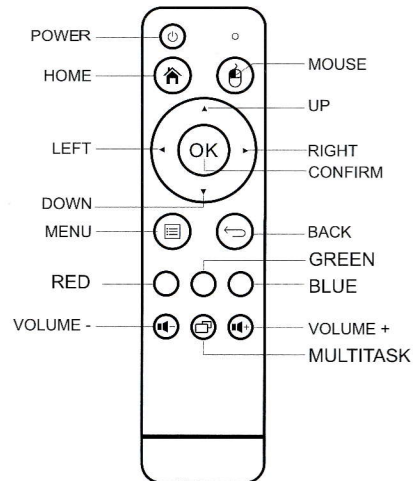

- Media player
- Power supply
- User manual
- Remote control
- AV cables
- HDMI Cable



2 GET TO KNOW




3 INTERFACE DESCRIPTION

	External Power Supply 5V / 2A, Switching Power from here
	HDMI 2.0 digital output port, HDMI cable
	Wired network input interface, RJ45 network cable; After network connects, green light will be always on, yellow light will flash
	One in Three AV Video Adapter Interface
	USB Host port
	Micro SD port
	Optical port
	Micro USB port for firmware upgrade


As product's hardware upgrades or improvements, there may be some interfaces difference, please received prevail in kind.

 4 Peripheral device for BOX

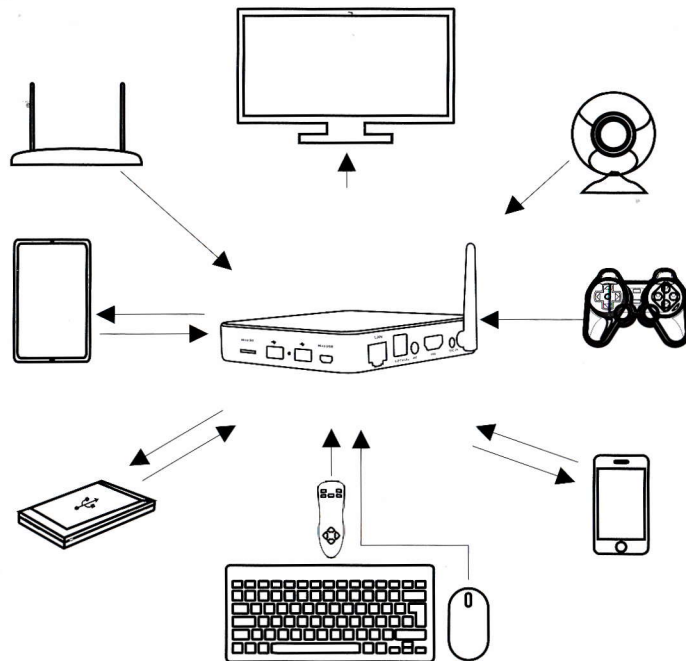

5 CONNECTING Box TO YOUR TV

 - 1 Connect one end of HD cable into the HD port on **Box**.
Connect the other end into the HD port on your TV.
 - 2 Plug the power cable into **Box**
 - 3 Turn on your TV and select appropriate source of input.
 - 4 Power up your remote control.
- **Box** is now connected to your TV.

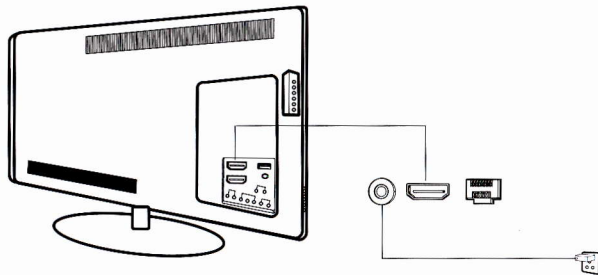

6 CONNECTING BOX TO YOUR HOME NETWORK

You can connect **Box** to your home network with below two methods:

1 LAN Network

- Connect one end of an Ethernet cable (not included) to your router. Connect the other end of the Ethernet port on the back of **Box**.
- **Box** will automatically detect your network and continue the set up process.

2 WiFi Network

- Go to setup menu and locate your WiFi network
- Enter the password with remote control. **Box** will be automatically connected next time.

TIP

- For better streaming performance, LAN cable for internet service is preferable.
- If it is in WiFi mode, please make sure **Box** is placed in an open space and closed to your router.

can be deleted by holding down "OK" key when highlight on it

er name can be changed by holding down "OK" key when highlight on

stall apps by holding down "OK" key in apps list menu

up the options of "Force stop", "Clean data" and "Uninstall" by press
u key in apps list menu

ct and enter different launcher by press home key when more than
launcher been installed

d down "Menu" key in main menu can remove "Always" setting of
cher selected

d down the "Home" key on main menu can restore the firmware to
ory default.(All data will be cleaned after restore to factory default.)

8 TAKE CARE OF BOX



NOT TOO COLD
Above -15°Celsius

NOT TOO DUSTY

KEEP ME DRY



DON'T OVERCHARGE ME

DON'T DROP ME



9 Remote control for Android smart phone

1.Connect your phone with same network as the box

2.Scan the QRCode and download the apps from link

3.Control the box by installed apps

