


# Card Headset User Manual (machine stereogram)



Thank you for your purchasing the head-worn insert MP3 headphone, which is all-in-one high-fidelity headphone supporting playing, storing, card reading, FM Radioing and headsets. You'll get more pleasure and enjoyment, as its original, unique, CD-functional design. Browse headsets' manual earnestly, so that handle it well.

## LCD Display:

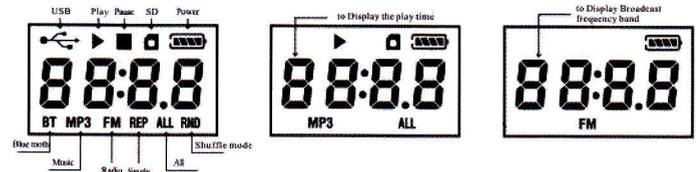

## Repeater Operation:

### Realplayer

1. Put the MMC/SD card with music files into card slot, then turn the displayed switch to "ON" position to play the first song and display Playback time, Audio format, play status and power.
2. Press the "+" to adjust volume up and press "-" to adjust volume down while playing music.
3. Press to selecting PREV or NEXT song. Press and hold the key "◀/▶" to fast forward or Backward while playing music.
4. When playing music, press "⏸" to pause and display "■".
5. Press "M" to select different modes. (optional modes REP, ALL, RND.)
6. Connected to other audio devices (like home theater, amplifier speakers) to play music via 3.5mm audio cable.
7. Push the button to "Off" position and turn off the headphone

## Specification

Memory Card	:MMC Card 、 SD Card
Audio Format	:MP3
Size of Memory	:up to 32GB
Sampling Rate	:8-48kHz(MP3 : 8-448kbps)
Display	:LCD Display
Frequency response	:20Hz to 20,000Hz
Audio output	:Hi-Fi Stereo Sound
FM Frequency	:76MHz-108MHz
Battery type	:detachable rechargeable lithium-ion battery
Power input	:DC5V/500 mA
USB port	:high speed USB2.0
Battery Duration	:10-12 hours
Charging Period	:3-4 hours
Operating System	:Windows 98/2000/XP/Win7/Vista
Working Temperature	:10°C-45°C
Humidity	:15-85RH
Net Weight	:190g
Size	:20*15*90cm

## Features

1. Playing music from the storage card like MMC, SD.
2. Read card when the headphone works with PC via USB cable.
3. FM Radio covers Campus Radio.
4. Play music from other audio devices (like speaker, home theater) which connected to your headphone with 3.5mm mini jack via audio cable.
5. It can be used as PC headphone when the headphone turns off.
6. High quality Sound Horn and cavity design to ensure that the high fidelity, CD sound quality.
7. Rechargeable polymer battery, convenient and practical. Up to 12 hours after full power.

## Accessories

1. Headphone
2. USB cable
3. 3.5mm audio cable
4. User Manual

## Charging or recharging the battery

1. Turn on your headphone by push the power switch to the "OFF" position.
2. Power source: DC 5V 500mA. When charging the battery, the red LED stays on and LCD screen displays the word "USB". When the red LED dims and disappear, charging is complete.
3. Reminded you to turn off the headphone and charging the battery in time when the voltage is lower than 3.3V.
4. Charging the battery when the headphone connected to PC via USB cable

**Remark:** All operational keys do not work when charging the battery or connected to PC to transfer data.

8. The headphone will shutdown if the idle time is 60 seconds after pressing "pause". It is better to switch off (push th key to "off") as long idle.
9. Switch off the headphone, it can work with PC via audio cable.

## FM Radio

1. In the boot state, Press twice "mode" switch to MP3 or FM.
2. Automatically search for radio stations and storage stations by pressing "M" shortly. Then the first radio program will be shown after finished search. Selecting favorite program by "◀/▶", "+/-" for increasing or decreasing the volume.

## Troubleshooting

1. Do not play music and display "NO SD".  
Check if there are music files in the storage card and insert the storage card correctly.
2. Check if the card inserted correctly or in place after the red indicate light flicked.  
Check the battery if there is enough power and charging the battery in time.
3. When playing music, the headphone has noise and no sound  
Check if the storage card inserted in place and audio sources in good quality.

## CAUTION

1. Not waterproof, keep it dry. Do not place it under the conditions of Humidity and rain.
2. Avoid dropping or strong impact, otherwise, it may damage the product or not display correctly.
3. Do not leave the unit in the sun exposure or at high temperature near. Do not put it in a fire in order to avoid accidents.
4. Take headphone away from strong magnetic objects, like surround sound speaker and kinescope of TV
5. Use the recommended accessories only.
6. Don't remove the headset cover by non-professionals.