

# Hi-Fi Mp3 Headphone

## Instruction Manual

 


Thanks for choosing SD/MMC card Mp3 player headphone, With flexible folding design comfortable and stylish MP3 Player, Hi-Fi sound, It is not responsible to the causes: man-made damage; be weighted or beaten

Caution: Please read and observe all warning and instructions given in this manual and those marked on the unit, retain this booklet for reference.

Warning: Inserting way of card gold finger outward, Do not insert oppositely; If anti-inserting to cause the card slot damage. It is not responsibility for our company

— .Button definition

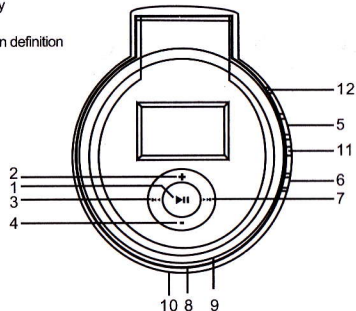

1. short Press Power on/Play/Pause, Long Press Power Off
2. short Press Volume+Long Press Fast Increase
3. short Press Last, Long Press Fast Reverse
4. short Press Volume-Long Press Fast Reduction
5. short Press A-B Key Repeat Read
6. short Press EQ Key Choice Six Sound Mode
7. short Press Next, Long Press Fast Forward
8. USB Interface
9. Line In
10. Line Out
11. Power Light
12. FM And Music Switching

### 二. Instruction

#### A. Play music

Insert SD/MMC cards; Press PLAY key Power on; Press PLAY button to start play; Press again PLAY key to pause; Long press PLAY key 3S for Power off. (Power off automatically 30 seconds in the stop or pause mode)

#### B. Adjust Sound mode

When playing music, Press EQ button for POP. Rock. Classic. Jazz. Standard. Ultra bass

#### C. A-B repeat mode

When playing music, Short press A-B key to enter start point, The A-B icon shining, Press again A-B key to enter the end point of repeat, The A-B icon static, then began to repeatedly read the contents of A to point B. Again press A-B button to cancel the repeatedly read the contents of A to point B. Again press A-B button to cancel the repeat, resume normal playback

#### D. Line in

Line in function as the Hi-Fi headphone, and chat online & listen music

#### E. Line out

Line out connect audio equipment to listen music

#### F. FM radio function

In music status, Shift switch to FM terminus to enter radio mode. Short press A-B key to search radio channel and save automatically;

Long press Last Key to enter semi-automatic search mode. Long press Next Key to enter semi-automatic search. short press PLAY key to save the channel orderly, Shift switch to SD terminus to enter FM mode.

Notes: Local radio frequency band 87.0-108.0 MHz

#### G. USB

Headphone USB port can read and write the files of MMC/SD card when connect PC, Also download files from PC to SD/MMC card.

#### H. Recharge

Headphone connect with USB port and PC or adapter to direct recharge. The LED indicator light bright, battery symbol on the display when full of recharge. LED power indicator light to burn out, while the battery symbol displayed on the screen full grid.

Note: If not used for long time, please recharge for the machine after a time.

### 三. Tech-parameter

 
Support format:	MP3/WMA
Support Bit rate:	MP3: 8-384 kbps WMA: 32-384 kbps
Support capacity:	128MB-8GB
SNR:	> 85db
Speakers:	2x10mW
Power voltage:	3.7v 500MA (rechargeable lithium battery)
Working time:	Full of power 15 hours
USB port:	USB2.0
Support system:	Windows98/win2000/win XP/win Vista

# 高保真耳机MP3使用说明书



感谢您选择本产品,本产品为插卡耳机MP3播放器,柔韧折叠设计,使用舒适美观。本机既是一款精美时尚的MP3播放器,也是一副高保真的耳机,本机不能重压或者摔打,当人为造成损坏,本公司概不负责!(注:存储卡金手指向外方正正确插卡方式,请勿反插,如反插造成卡座损坏本公司概不负责!)

## 一.机器按键定义图:

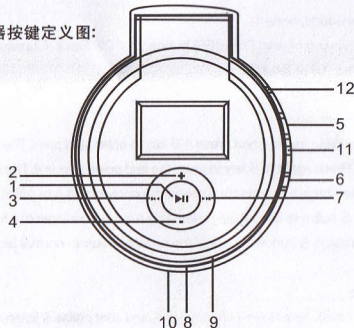

- |                   |              |
|-------------------|--------------|
| 1.短按开机/播放/暂停,长按关机 | 2.短按音量加,长按快加 |
| 3.短按上一曲,长按快退      | 4.短按音量减,长按快减 |
| 5.短按A-B复读         | 6.短按EQ切换     |
| 7.短按下一曲,长按快进      | 8.USB接口      |
| 9.线路输入接口          | 10.线路输出接口    |
| 11.电源指示灯          | 12.FM和音乐切换开关 |

## 二.功能介绍

### A.音乐播放

将带有音乐文件的SD/MMC卡插入机器,短按PLAY键开始播放,再次短按PLAY键暂停,再次长按PLAY键约3秒左右关机。(在停止或暂停播放状态下,无任何操作30秒左右将自动关机)

### B.音效模式调节

在音乐播放状态,短按EQ键便会顺序切换不同的音效模式,本机提供流行 摇滚 古典 爵士 柔和 重低音,共6种音效供您选择。

### C.A-B复读模式

在音乐播放状态,短按A-B键便进入复读起始点,此时A-B图标闪动,再次短按A-B键进入复读结束点,A-B图标静止,此时便开始复读A到B点的内容,再次短按A-B键取消复读,恢复正常播放。

### D.LINE IN功能

通过音频对录接到LINE IN接口,可将本机当成一副高保真的耳机来欣赏外部音源。(当本机正在播放时,此时插入对录线,本机将自动停止播放并关机,优先欣赏外部音源)。

### E.LINE OUT功能

通过音频对录线接到LINE OUT接口,可将本机播放的音乐接到外部的音响设备。

### F.收音功能(此功能可选)

在开机状态下,将开关拨到FM端自动切换进入到收音模式,短按A-B键为自动搜索模式并将搜到的电台自动保存,长按上一曲为向上半自动搜索模式,长按下一曲为向下半自动搜索模式,短按播放键为顺序循环向下选择保存的电台,把开关拨到SD端自动退出收音模式。

备注:本机收音频段为:87.0-108.0MHZ

### G.连接USB

通过USB线连接PC与本机,就可以将电脑上的文件下载到本机SD/MMC卡,也可将SD/MMC卡内的内容上传到电脑。

### H.充电

本机可以通过电脑USB端口或配备的充电器为本机充电,充电过程中,本机LED电源指示灯亮,同时显示屏上的电池符号脉动,充满电后,LED电源指示灯灭掉,同时显示屏上的电池符号显示满路。

备注:当机器长时间不用请取出电池或过一段时间为电池充一次电。

## 三.规格参数

支持格式:	MP3/WMA音频格式
支持音频采样率:	(MP3比特率:8-384kbs,WMA比特率:32-384kbs)
支持卡容量:	128M-8GB
信噪比:	> 85db
喇叭:	2X10mW
电池电压:	3.7V 500MA可拆卸充电锂电池
工作时间:	最大播放时间可以达到15小时左右
USB速度:	USB2.0
支持系统:	Windows98/win2000/winXP/winVista