 
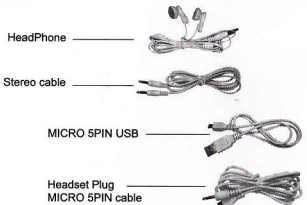 


● Structural Profile

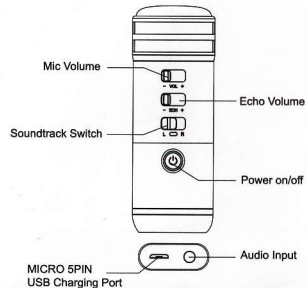

2 3

一、Main Function:

KTV effect

Stereoeffect with left and right soundtrack makes the environment in public KTV a difference. Can describe candence and intonation.

Echo Reverb

Strong Reboant effect, adjust the degree of Reboant.

Channel Switching

Kara OK to support left and right channels of stereo audio switch, singing lead vocals to the song or accompaniment patterns.

Mai sound Adjustment

Can adjust the mic volume what you want.

Charging

Can adjust the mic volume what you want.

Together with demolition

iSing i9 including Mic, stereoeffect earphone, USB charged cable and audio cable. Used flexibly.

Easily improve your singing level

PRACTICE

In this musical city, music is like vital note, mood is like cadence. They could be changed at anytime. Describe your personality well by singing a song makes others jealous. Keep a iSing i9 player, just connect it to audio player, and you can Karaoke at anytime anywhere.Help your musical dream come true.

SINGING

Not afraid of forgetting lyrics in talents show anytime
There're always lots of opportunities to show your talent when attending parties or on vacation. When you do want to sing but without familiar songs and lyrics. Don't worry, iSing i9 Mini Player can help you to make it come true. Only connect it to audio player, you can sing anything.

RECORDING

With the sound recording, the music will be more perfect.
You're usually attracted by sweet songs. Of course you enjoy collecting and sharing again and again. Then you will become more and more interested in music. Sometimes, you'd like to sing your favourite songs when you're happy or sad. iSing i9 player is not only Karaoke but Mini Smart Microphone. Sing with it will give you perfect effect and be fantaistic with record soft ware. You absolutely can make a difference.

二、Instructions:



- ① To be connected before using the audio playback device (such as computers, mobile phones, MP3, MP4, MP5) into the required three-dimensional audio karaoke OK song accompaniment format music files or pure.




- ⚠ Understanding and uplaod the supported video file format ,Such as 3GP format music that many mobile phone all support .The user need change the format of music that download at computer or PC into 3gp format and store them into mobile phone .but the music format played at MP3 or MP4 and music power if have the three-dimensional audio that karaoke OK support .

4 5



- ② I9 3.5mm audio cable plugs into the audio playback device input port, the other side of the microphone charging port access.

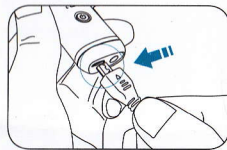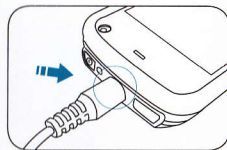


- ③ 3.5MM headphone plug into the microphone's audio output port.

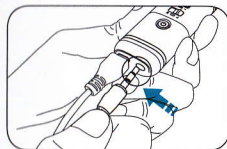

- ④ Turn on the microphone power switch, blue light, adjust the sound and echo reverb sound wheat.

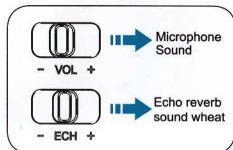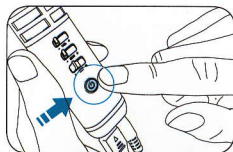

- ⑤ Open the player can switch the music channel K song.

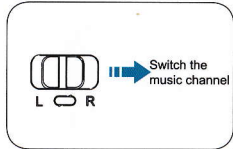


6




MADE IN CHINA

● Overview Sketch

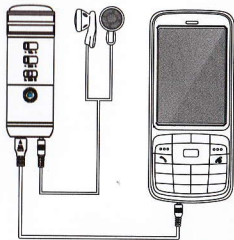

Used with cellphone

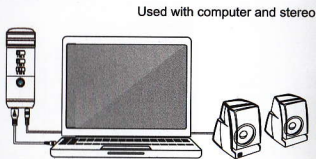

Used with computer and stereo

Charging Instructions:

⊙ A computer turned on, the USB interface to connect to a computer will be able to charge for the microphone until the red battery indicator light turns off by the state, charging the end.



A computer charging for the microphone

 


Red light on — being charged



the red light put out means the charging is completed

⊙ Can be equipped with a microphone DC5V cable charger to charge.



⊙ For the first time use, charge 8 hours.

⊙ When used properly, can be 2-3 hours per charge.

三、Technical Parameters:

Audiohead: Capacitive Sound Output: +1db—+25db Gain Adjustable

Output power: 15mW Frequency: 30Hz—20Hz

Weight: 30g Reverb Mode: Echo Sound Effects Reverb

Power Supply: Built-in lithium battery-powered 3.7V 400mAh

Maximum Sound Pressure Level: >=130db (at 1KHz THD<=1%)

Size: 75.8mm×28mm×15.5mm (L×W×H)

四、Attentions

1. Make sure there is stereoeffect audio which Karaoke requires.
2. Check the power cable if matches the stereoeffect cellphone, or you can't switch the soundtrack.
3. To protect the player, please avoid to be wet and damp.
4. Avoid being hit.
5. Once be found that it doesn't work, please contact the repairing center.

五、Fault Treatment:

Item NO.	Fault	The reason of fault	The way of excluding
1	Indicator lamp of power is not light	the battery is out of power or the wire of power is not plugged well	1. charging for the microphone 2. checking the wire of the power
2	Microphone haven't sound	the power not open or the volume of microphone not made well	1. checking if the blue lamp is light 2. turn the volume of microphone well.
3	NO musical accompaniment	if music is the format of three-dimensional audio karaoke	1. upload the music that karaoke format support. 2. switch the channel