

Features:

- Wedge-shape design to fit any hinged door.
- Adjustable High-Medium-Low sensitivity.
- No installation required, easy for travelers to carry.
- 120 dB high-pitched continuous siren when activated.
- Can be used as a doorstop when power switch is turned off.
- Special design for use at home, office, and hotel rooms.
- Powered by one 9V battery; no wiring.

Operation:

1. This alarm is operated by a 9V battery
2. Open the battery door on the back side of the alarm unit, and place a 9V battery in the battery compartment. Make sure the battery is installed correctly before use. See Fig. 1.
3. After installing 9V battery, place the doorstop alarm behind a closed door to secure the room.
4. If the secured door is opened, the edge of the door will press down on the wedge plate of doorstop alarm and set off the alarm, which will sound at 120 dB siren continuously.
5. The sensitivity of the vibration sensor can be adjusted from low to high as indicated in order to meet your needs. See Fig. 2.
6. When the siren starts to sound weak, it is time to change the 9V battery as described in Step 2.
7. Turn the power switch off when the doorstop alarm is not in use. The alarm unit can be used as a doorstop to prevent the doorknob from hitting the wall if the hinged door is opened too roughly.

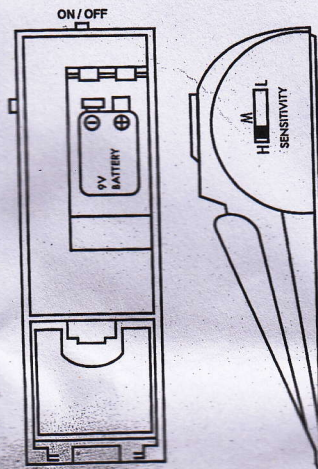


Fig. 1

Fig. 2

Required one
9V Battery
(Not Included)