


Power off

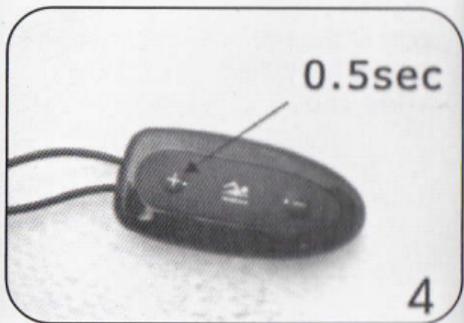

Short press for  
song select

## 6. Additional Beach bag and Head mount earphone illustration



Buckle the beach bag



Handle with care of taking in  
or out of your Head mount  
earphone



Easy for carrying in water  
sport




Hang the head mount  
earphone around the ear  
side of your head



Manually adjust the head mount  
earphone arm until properly and  
comfortably fit into your ears


# WATERPROOF MP3 PLAYER

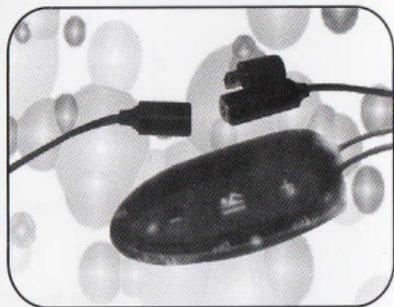


## User Manual

Music Format:MP3/WMA  
USB interface:USB 2.0

### 1..Key Definition

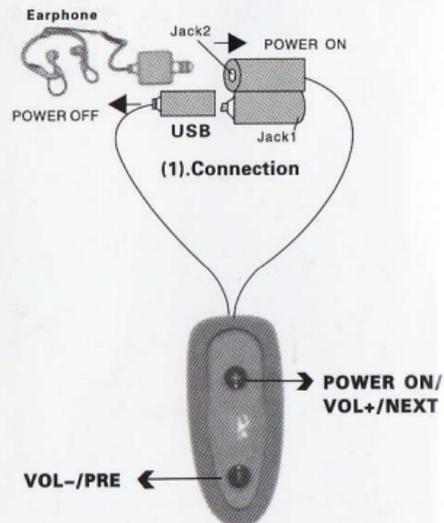

(2).Mainframe

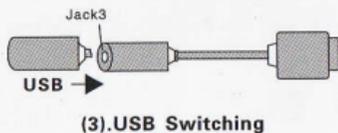

### 2. Operation

- 1) Power on: insert earphone to jack 2, press ⊕ for 3 seconds until the LED lights on.(try again if first attempt failed).
- 2) Power off: pull out earphone from jack 2 press ⊖ for 5 seconds, it will be automatically power off in 1 Min.(System will not be shut down if user dose not follow the instruction).
- 3) Next/pre: when playing music, short press ⊕/⊖ to adjust next/previous song.
- 4) Volume up/down: Long press ⊕/⊖ to adjust volume up/down.

### 3. Charging the battery

- 1) Please use USB cable connect computer to charge the player.
- 2) Please keep charging at least 2 hours.

### 4. Download music

- 1) Insert USB jack into jack 3,


and connect the Mp3 player to computer

- 2) Connection-oriented by download music from computer to the MP3 player.
- 3) In case if MP3 drive is not found by PC, make sure it stay in USB jack for charging up to an hour.


### Notice:

- 1) After shut down, you must wait at least 5 seconds to reconnect the earphone, or the unit would fail to operate.
- 2) Water from swimming pool or sea are very corrosive to the jack,please rinse and dry after use.

### 5. Operation Illustration

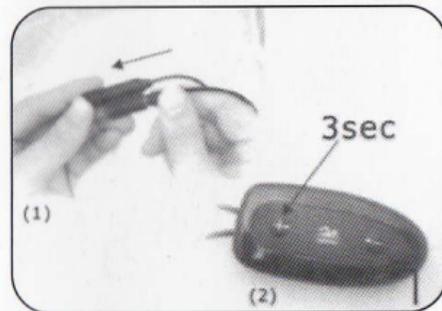

Power on

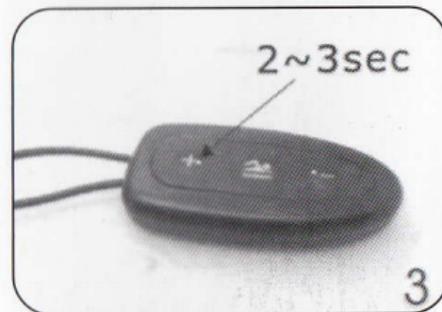

Long press for volume adjusment