

 
# Touch screen monitor

with DVD/USB/SD/IR/FM

## Main parts of the Multimedia:




POWER ON/OFF  
MODE SHIFT

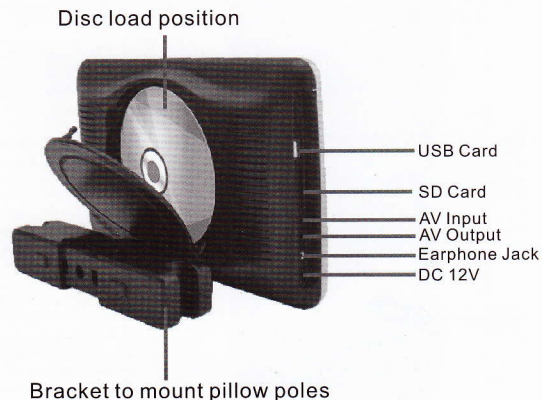

# Touch screen monitor

## with DVD/USB/SD/IR/FM
 
### Description for the pressing-keys of remote control

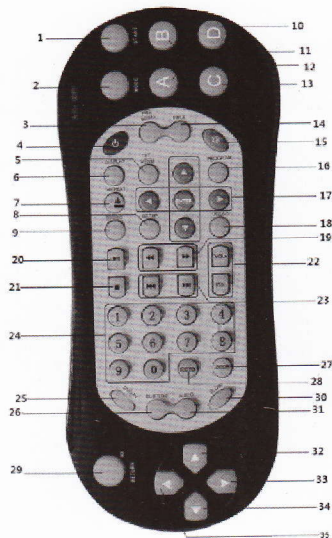

1	START	Load GAMES Disc, then press this START key to start playing games
2	MODE	Return to the Submenu
3	PBC/MENU	Press this key to return to the root menu in playing.
4	POWER	Power for ON/OFF
5	TFT MENU	Menu for different functions: Brightness, contrast, I.R etc.
6	DISPLAY	Display the disc information and playing time.
7	REPEAT	Press this button to return last chapter or Menu
8	SETUP	Open/close DVD setup menu
9	ANGLE	Angle switching key, used for SVCD, DVD and Mp4 discs with multiple angles.
10	A	Games key for shoot and attack (available in some kinds of games only)
11	B	Games key for shoot and attack (available in some kinds of games only)
12	C	Games key for shoot and attack (available in some kinds of games only)
13	D	Games key for shoot and attack (available in some kinds of games only)
14	TITLE	Return the beginning of the playing
15	MUTE	Press MUTE to make the speakers off
16	PROGRAM	Track programming play (songs playing sequence)
17	DIRECTION KEY	Direction key for RIGHT/LEFT/UP/DOWN, TV Channel selections.
18	USB/SD	Press this button to choose to play audio or video from USB or SD card
19	PREVIOUS/NEXT	Select to play the previous or next chapter
20	PLAY/PAUSE	Press this button to start or pause for playing
21	STOP	Stop to play
22	VOLUME +/-	Press this button to adjust the Volume higher or lower
23	FAST/BACK FORWARD	FAST OR BACK FORWARD BY 4, 8, 16 +/-
24	NUMBER KEY	NUMBER KEY: To choose different chapters and songs by the serial No.
25	DVD/AV	Switch from DVD mode to AV mode
26	SUBTITLE	Display the subtitles.
27	ZOOM	Zoom in/out multiple modes
28	GOTO	Press this button goto desire numbered song and goto desire page in reading e-books
29	RETURN	Back to previous chapter
30	SLOW	Playing slowly by 1/2, 1/3, 1/4, 1/5, 1/6, 1/7, 1/8
31	AUDIO	AUDIO select for Left/RIGHT/STEREO
32	RIGHT	Games direction key for Right side
33	DOWN	Games direction key for down side
34	LEFT	Games direction key for Left side
35	UP	Games direction key for Up side

# Touch screen monitor

with DVD/USB/SD/IR/FM

## Accessories

Please check the following accessories after opening the package.

**Remote controller**



2 in 1

**Native game disk**



**Joystick (Optional)**



**USER'S MANUAL**



**Bracket**



**IR Headphone (Optional)**



**Pole Adaptors**



 
**Power connection line**



# Touch screen monitor

with DVD/USB/SD/IR/FM

## Master DVD player connect to monitor:

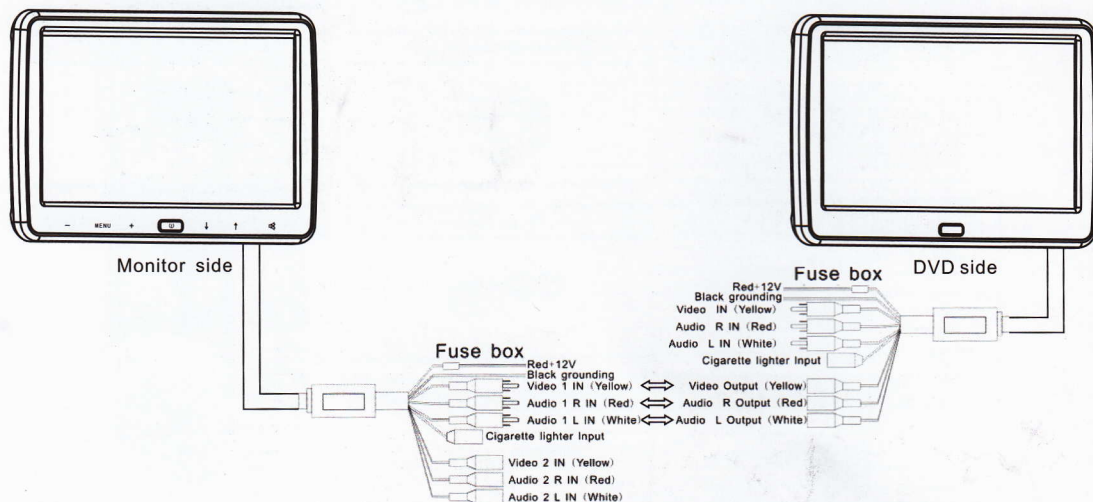




# Touch buttons monitor

## with DVD/USB/SD/IR/FM/HDMI
 
### Main parts of the Multimedia:

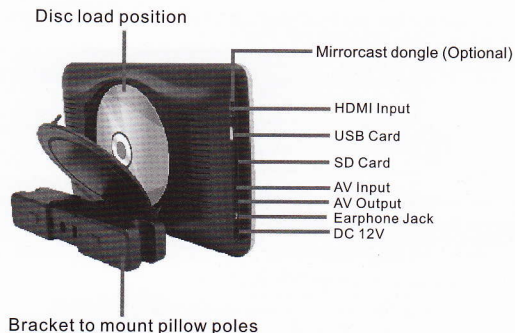

KEY	Function
⏮	Last
⏸	Play/Pause
⏭	Next
⏻	Power ON/OFF mode select
⏮	Volume down
MENU	Adjust Contrast/Brightness etc
⏭	Volume up

# Touch buttons monitor

with DVD/USB/SD/IR/FM/HDMI

## Accessories

Please check the following accessories after opening the package.

**Remote controller**



2 in 1

**Native game disk**



**Joystick (Optional)**



**USER'S MANUAL**



**Bracket**



**IR Headphone (Optional)**



**Pole Adaptors**



**Power connection line**



 
**Mirrorcast dongle (Optional)**



# Touch buttons monitor

## with DVD/USB/SD/IR/FM/HDMI

### Description for the pressing-keys of remote control

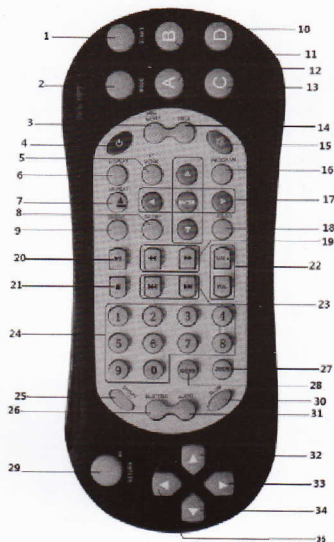


1	START	Load GAMES Disc, then press this START key to start playing games.
2	MODE	Return to the Submenu
3	PBC/MENU	Press this key to return to the root menu in playing.
4	POWER	Power for ON/OFF
5	TFT MENU	Menu for different functions: Brightness, contrast, IR etc.
6	DISPLAY	Display the disc information and playing time.
7	REPEAT	Press this button to return last chapter or Menu
8	SETUP	Open/close DVD setup menu
9	ANGLE	Angle switching key, used for SVCD, DVD and Mp4 discs with multiple angles.
10	A	Games key for shoot and attack (available in some kinds of games only)
11	B	Games key for shoot and attack (available in some kinds of games only)
12	C	Games key for shoot and attack (available in some kinds of games only)
13	D	Games key for shoot and attack (available in some kinds of games only)
14	TITLE	Return the beginning of the playing
15	MUTE	Press MUTE to make the speakers off
16	PROGRAM	Track programming plays songs playing sequence)
17	DIRECTION KEY	Direction key for RIGHT/LEFT/UP/DOWN, TV Channel selections.
18	USB/SD	Press this button to choose to play audio or video from USB or SD card
19	PREVIOUS/NEXT	Select to play the previous or next chapter
20	PLAY/PAUSE	Press this button to start or pause for playing
21	STOP	Stop to play
22	VOLUME +/-	Press this button to adjust the Volume higher or lower
23	FAST/BACK FORWARD	FAST OR BACK FORWARD BY 4.8, 18 +/-
24	NUMBER KEY	NUMBER KEY: To choose different chapters and songs by the serial No.
25	DVD/AV	Swift from DVD mode to AV mode
26	SUBTITLE	Display the subtitles.
27	ZOOM	Zoom in/out, multiple modes
28	GOTO	Press this button goto desire numbered song and goto desire page in reading e-books.
29	RETURN	Back to previous chapter
30	SLOW	Playing slow by 1/2, 1/3, 1/4, 1/5, 1/6, 1/7, 1/8
31	AUDIO	AUDIO select for Left/RIGHT/STEREO
32	RIGHT	Games direction key for Right side
33	DOWN	Games direction key for down side
34	LEFT	Games direction key for Left side
35	UP	Games direction key for Up side

# Touch buttons monitor

## with DVD/USB/SD/IR/FM/HDMI

**Master DVD player connect to monitor:**

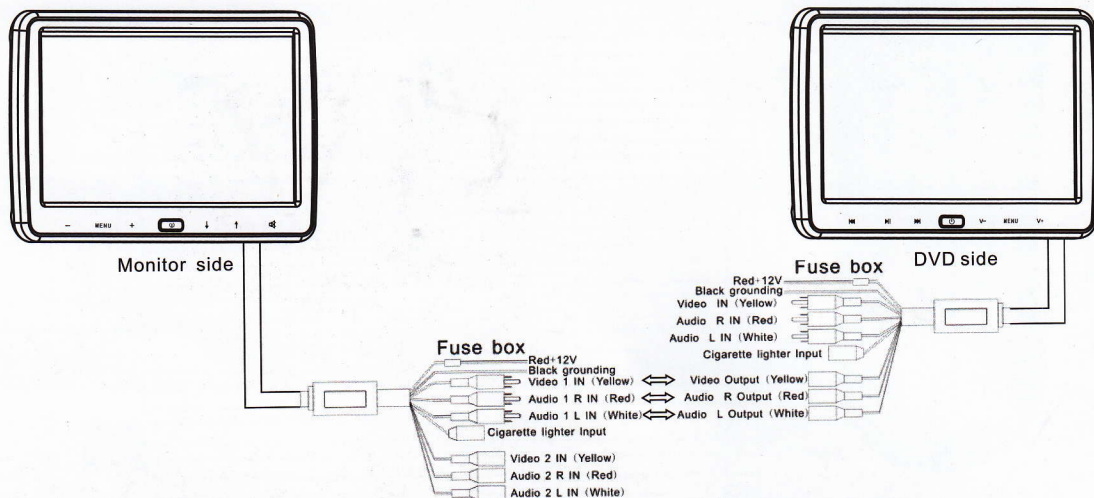




# Touch buttons monitor

with DVD/USB/SD/IR/FM/HDMI

## Mirrorcast compatiability

 Audio/Video/TV from mobile phone to the player

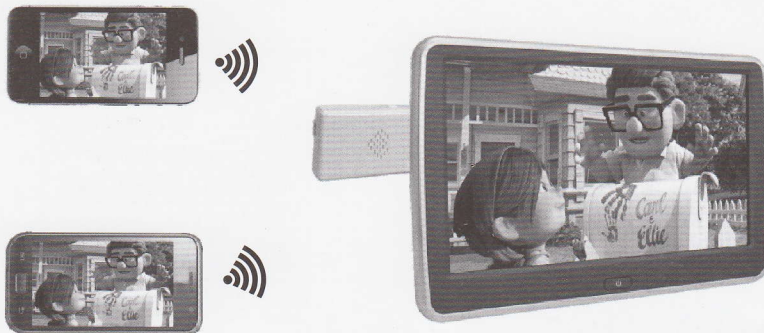

### Instructions:

- 1.shift to HDMI mode
- 2.select wifi display on player
- 3.start airplay from mobile phone to the player

# Monitor

with 2AV input



KEY	Function
-	Volume down
MENU	Adjust Contrast/Brightness etc
+	Volume up
⏻	Power ON/OFF mode select
↓	Direction choose key for down
↑	Direction choose key for up
🔊	Mute

# Monitor

 
with 2AV input

## Accessories

Please check the following accessories after opening the package.

### Remote control

1. Power On/Off
2. AV1, AV2 Switch
3. Adjustment +, right
4. Adjustment -, left
5. Menu
6. Video Select

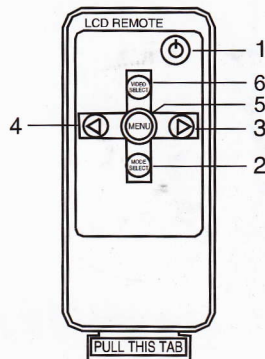

### USER'S MANUAL



### Bracket



### Pole Adaptors



 
### Power connection line



# Monitor

with 2AV input

**Master DVD player connect to monitor:**

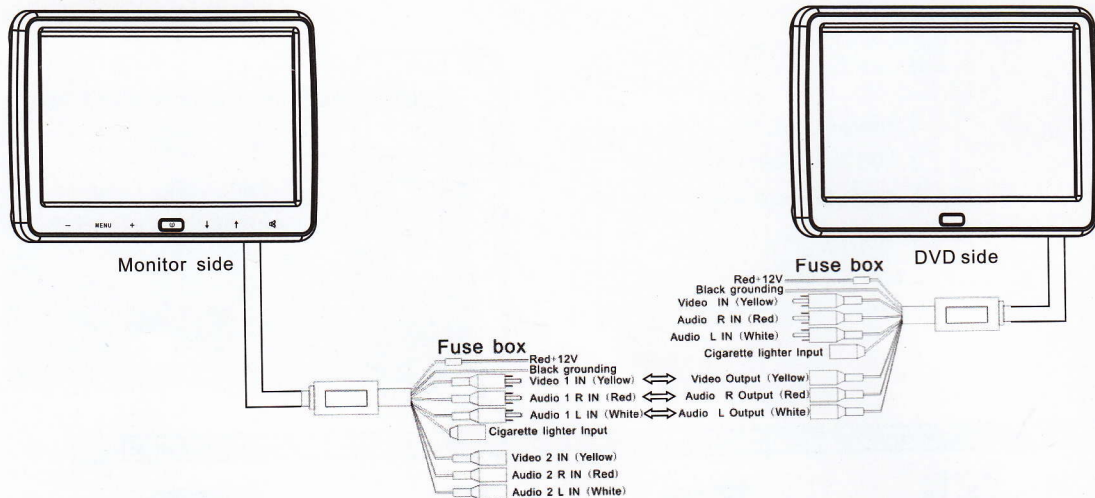



### **Disclaimer**

- Unauthorized reprint of partial or full content is prohibited.
- We reserve the right of changing hardware and software specification mentioned in the manual at any time without prior announcement.
- Illustration and legend may differ from practical situation
- Please note we will never be responsible for any consequences due to the use of this product



Made in china