

3 Functional menu.....	14
3.1 The use of functional menu.....	14
3.2 Information.....	18
3.3 In-box.....	18
3.4 Out-box.....	18
3.5 MMS setting.....	19
3.6 MMS.....	20
3.7 chat.....	20
3.8 voicemail.....	20
3.9 Community radio.....	21
3.10 Call center.....	24
3.11 Setting.....	25
3.12 Mobile phone Settings.....	26
3.13 Network Settings.....	26
3.14 Security settings.....	27
3.15 Restoration manufactured Settings.....	27
3.16 Multimedia.....	30
3.17 The archives management.....	31
3.18 Fun and games.....	31
3.19 Eco Mode.....	33
3.20 Toolbox.....	33
3.21 Network services.....	35
3.22 Additional functions.....	37
3.23 Mode Settings.....	38
4. input method explain.....	39
5. T - flash card is introduced.....	39
5.1 T - flash card dismantled and installation.....	39
5.2 the use of the T- flash card.....	39
6 Common problems and solutions.....	40

1. Basic knowledge

1.1 Thank you for choosing Q8 GSM/GPRS digital mobile phones. You can read the manual, through a comprehensive understanding of the cell phone use, enjoy the perfect function and simple operation method.

This phone is labeled in GSM/GPRS network environment. In addition to basic call functions, but also provides you LianXiangShi English handwritten input, the card holder input, telephone, individualization of phone ring and pictures, 64 chord bell, text messaging and MMS, photography and audio video functions, MP3 and movie player, recording, alarm clock, calculator, automatic switch machine, calendar, memos, world time, stopwatch, ebooks, usb Modem/T - Flash, GPRS, Internet, projector, mobile TV, radio, FM radio keyboard locks, practical function, to facilitate your work and leisure activities, in addition, the machine adopts personalized human-machine interface, the perfect function design, can satisfy your different demands.

The color with mobile GSM/GPRS technologies at home and abroad, and obtain certification authority.

The company reserves in not to make any advance notice of this manual under the conditions of the right to make changes.

1.2. Guidelines for Safe and Efficient Use

- > Do not use your phone in an area where a potentially explosive atmosphere exists such as chemical plant, gas station.
- > Keep out of children's reach.
- > Use earphone to make or answer a call during driving for an emergency, otherwise please pull off the road and park before making or answering a call if driving conditions so require.

- > Do not use your phone on plane. Please turn off Auto Power before boarding.
 - > Mobile phones may affect the operation of cardiac pacemakers, hearing aid and other medical electronic equipments. Care shall be taken.
 - > The warranty covers only original components and parts.
 - > Do not attempt to disassemble or modify your phone. Please contact designated service station in case of phone failure.
 - > Do not charge your phone without battery mounted.
 - > Charge your phone in an area where ventilation and heat-emission is excellent and where is far away from combustible and explosive material.
 - > Do not make your phone close to magnetic material such as magnetic disk and credit card to avoid demagnetization.
 - > Do not expose your phone to liquid. In case of exposure to liquid, disassemble the battery and contact our designated service station.
 - > Do not use your phone in too high or too low temperature; do not expose your phone to extreme sunshine and high humidity.
 - > Do not clean your phone with liquid or cloth soaked with detergent.
 - > Please abide by corresponding rules and laws when you take a picture or record with your phone.
 - > Do not drop, throw or strike your phone to keep shell and components well.
- <Warning>: The company shall not be responsible for phone failure caused by not abiding by the above guidelines or improper use. In case of discrepancy in this manual and your phone, please refer to your phone.
- The company shall preserve the right to modify this manual at any time without notification.

2. Before using

2.1 The name of each part and instructions Screen Status Icons

	Signal strength indication of SIM Card 1 / 2
	SIM Card 1 / 2 GPRS connection
	Unread SMS of SIM Card 1 / 2
	Unread MMS of SIM Card 1 / 2
	Unanswered calls of SIM Card 1 / 2
	Call forwarding of SIM Card 1 / 2
	Ring /ring after vibration /vibration/ Earphone mode
	Keypad is locked
	Alarm clock
	Battery power

2.2 Buttons

1. The navigation key:

- (1) right-click: Right click when edit, standby, the key into the ring Settings
- (2) Left-click: According to the left when edit, standby, this button to enter scene mode
- (3) Upward key: Edit button, press upward, the key under the standby enter text inbox
- (4) Down key: Press down keys, editing, under standby press this button enter an alarm clock
- (5) OK Key: This button on standby interface into the main menu

2. Digital key

Input digital and characters, 2-9 can be set for quick dialing shortcuts.

3. Dial-up key

Call number and answering the call, Standby v already dial the phone records

4. Dial-up key 2:

SIMCard 2 Call number and answering the call, Standby v already dial the phone records.

5. TV key:

It can enter mobile TV screen.

6. Hang key:

End the call or refuse to call, in other cases, this button is generally return standby.

7. Left soft key:

Executive function display screen left-down feet, When standby, Press this button to enter into the main menu.

8. Right softkey:

Executive function display screen right-down feet, When standby, Press this button to enter into the phone.

9. * key:

Input all special symbols, Chinese punctuation, in the Standby interface, Long press this button to input the +, P, W.

10. #key:

Input #, Switch input method, Standby interface long press this button to silent mode with general in switching between mode.

Note: in this manual, "according to a key press this button is refers to loosen; after namely, "A key," long press press this button means and keep 2 seconds or 2 seconds.

2.3 Touch screen introduced

Press any icon lightly to access the program:

You can drag it up or down to scroll the screen. And in some program you also can drag it left or right.

Standby mode

When the phone is ready, and you didn't input any words, the phone will switch to the standby mode.

1. The intensity of the networks.

2. The level of the battery's power.

3. First note. Please refer to the "First note"

4. Clock

5. Screen

First note

Bluetooth connecting note. Bluetooth is power on and connected with other device such as earphone. Gray

note: Bluetooth is power on but there is no connecting.

None of note: Bluetooth is power off.

Unread message.

Unread SMS.

Missed calls.

Alarm is setting.

2.4 Battery usages

Battery performance may be affected by many factors such as wireless network configuration, signal strength, operating temperature; functions or settings, phone components, voice and data transmissions or other application modes.

To enable best battery performance, please abide by following rules:

- ◆ A new battery or one that has not been used for a long time shall be fully charged;
- ◆ The battery should be charged in temperature close to room temperature;
- ◆ It's normal for the battery that has been used for long time to take longer time to be charged full. When the talk-time or standby time is noticeably shorter, it's time to replace your battery. We recommend that you use only batteries approved by our company. Poor quality components will be harmful to your phone and dangerous!
- ◆ When the battery is empty or has not been used for a long time, it may take some time before the battery icon appears on the screen after being connected to charger.

Note: take care of environment and your safety and do not dispose randomly!

Warning: any short circuit may lead to explosion, fire or personal injury!

2.5 Internet connection

This phone supports the network service provided by the SIM provider. Please make sure the you've already apply for the network service before use.

2.6 Separately set SIM Card 1 and SIM Card 2.

Network Selection

- > Auto: Automatically search the visited network of SIM Card.
 - > Manual: Search the currently all available networks and register manually.
- Preferred network: Preset some preferred networks.

Warning: remove SIM card must be before the phone. It is forbidden to have external power linked circumstances insert or remove SIM card, otherwise the SIM card can damage

2.6.1 SIM card inserts and remove

SIM on a card, the general assembly, must be careful in before. cellphones, remove battery and other external power. cixin phone card support for mode, double SIM card by the menu option to choose to 3.10.1 (see section "SIM card Settings"), will be shown in the SIM card into the corresponding SIM gets stuck.

When you need to take SIM card, please take off before shutdown, batteries, again from SIM gets stuck out SIM card.

2.6.2 Switch on and off the phone

Don't switch on the phone in some forbidden area. You can switch on and off the phone by pressing the power button as showed in the picture. You can lock the screen by touch the button lightly. If the phone request for input the PIN, please input the right PIN. (It may displayed as **** after input), then choose the "OK". When the first time you switch on the phone and it is on the standby mode, it would request you whether get the network service from the ISP. Please affirm or refuse.

2.6.3 LOCK OF SIM Card 1

In this menu, you can set the safety options of mobile phone to prevent the mobile phone or SIM Card being used illegally. PIN Code is used to prevent your SIM Card being used illegally. If the PIN Code is turned off now, you can select to turn it on to activate PIN Code protection, the player will ask your for

the PIN Code during startup next time; If the PIN Code is turned on now, you can select to turn off the PIN Code protection. Select Safety Setting-> Change Password -> PIN Code, you can set the new PIN Code, please follow the prompts to input the old PIN Code, new PIN Code and input the new PIN Code again.

⚠ Note: If PIN Code is keyed in incorrectly, SIM Card will be locked. In this case, you shall provide PUK Code to unlock SIM Card. PIN Code and PUK Code may be provided to you together with SIM Card. If not, please get contact with your network operator. The default PIN Code is generally 1234. Please change it into your private password as soon as possible

2.6.4 Phone lock

Phone lock is used to prevent your mobile phone being used by unauthorized persons. When you select phone lock, you've activated mobile phone lock password protection. The phone will ask you to key in the mobile phone lock password; press this key again to disable the mobile phone lock password protection. Note: The default mobile phone lock password is 1122. Please change it into your private password as soon as possible.

2.6.5 Connected to the network

After the successful decryption SIM card, phone automatically search available network (screen for network). Once the contact network provider will appear on the screen name. Note: if the screen can be played "EMERGENCY call" means the EMERGENCY (has) in normal coverage of the network

service scope 0, but you still can send according to the strength of the EMERGENCY calls

2.6.6 Phone call

- 1、Input phone number, then press the "Call".
- 2、Press the "Recent" could access the list of recent call records.

- 3、Please refer to the "Contacts" to using the contacts name and phone number.

To make international calls, press * for two times then you get the symbol "+"(which will allow you to the local international telephone prefix), then input the country code and Integrated phone number.

You can press the volume turner to set the volume of voice while talking. Answer or decline the incoming call.

- Pick up the call by click the "Answer"; to end the call by click the "Decline".
- Decline the incoming call by click the "Decline or press the power on/off button.
- Choose the "mute" while you are talking, the other side could hear you.

-Call waiting

Go to main menu-> Settings -> Phone-> Call Waiting-> Active. Then the network will inform you if you have a new incoming call while you are talking(Network service).

You can click the "Answer" to pick up the waited call while talking, and the first call would be kept.

-Call records

The phone could record missed calls, received calls and dialed calls in power on state and do support by the networks. In the list of missed calls, received calls and dialed calls, you

China is a country from any) call.

Prefix number, then enter the country will enter your call phone number, the area code and complete. According to the national code of practice, Germany is usually 49,

Britain and Sweden for 44 for 46, etc.

And usually make an international call, dial-up should remove city code in front of the "0".

2.6.10Telephone call list

You dial out and received a phone number are each table, the phone call and receive the recent telephone number listed in the top (please refer to the section "call center" 3.9). Each number by telephone, has already dial telephone and mobile phone, also provides all calls for your view of all telephone records. When the telephone number stored after full of old number automatically deleted.

2.6.11Emergency calls

If you are within range of Internet phone screen through examination (upper network signal intensity of instructions that you should be able to), calling the emergency services. If your network provider does not provide roaming in the region, "would display screen can play EMERGENCY telephone (EMERGENCY)," tell you only this call. If you are within range of network, even without SIM card can also make emergency calls

2.6.12To answer the phone

If the answer to any button, press any key can answer the phone, or need to press dial-up or left soft key into the answer, then press left soft key can call. If the call is from card will have the corresponding picture, if the headset has inserted, you can also use the headset button to answer the phone. If you don't convenient, can set up automatic answer keys to open, and the headset has inserted in the ring or vibration, after 5 seconds, phone automatically through

can check the date, time of the calls and also can edit, delete the phone number, or save to your phone book.

1、Missed call: You could check the list of recent missed calls(Network service).

2、Dialed call: You could check the list of recent dialed calls.

3、Received call: You could check the list of recent received calls. (Network service)。

4、Delete: You could delete the phone number in the list of recent calls.

2.6.7Domestic phone call

Enter phone search contacts keys, or call button start dialing the number keys directly use the phone number, then press enter key to start dialing call. If you need to change the phone number, please click the right to delete character of soft keys. When the screen will show call dial-up animation. After each screen will show pick state information, if open call for prompt, also can connect a voice prompt (network).

After the call, please click hang key hang up the phone.

2.6.8Fixed telephone call ext

Some fixed telephone extension cannot directly dialed, you need to dial switchboard, then dial the extension. If your phone number, in input operator number and extension number between insert symbols suspended character "p" is for you, will be completed all dial-up, dial-up extension. Input "p" method is long click * (screen will show "p" symbol)。

2.6.9Make an international call

To make an international call, but long click * keys, until the screen appears international long-distance telephone prefix "+" sign, this will allow you to do not know at the local telephone number of international prefix (for example, in 2005,

2.6.13 Call records

You can also store your phone call last record and use of all the time since the conversation (see section "call center first 3.9).

2.6.14 menu of the call

In the conversation, according to the function, can enter hands-free hands-free conversations can be entered by options. Call option procedures and the function of the same operation menu.

This calls menu only in conversation, and can be seen in the process, "call waiting" function, multiparty need network support, please contact with your network provider

3 Functional menu

3.1 Functional menu structure

Touch screen , Functions of the menu Structure:

1 Telephone:

- 1-1 quickly
- 1-2 search contacts
- 1-3 add contacts
- 1-4 all copies
- 1-5 delete
- 1-6 incoming group
- 1-7 other number
- 1-8 setting
- 1-8-1 storage condition
- 1-8-2 storage location choice
- 1-8-3 card Settings
- 1-8-4 my card
- 1-9 calls big stick
- 1-10 phone ring

2 information

- 2-1
- 2-2 MMS

2-3 chat

2-4 voicemail

2-5 community radio

3 call center

3-1 call records

3-1-1 not to answer the phone

3-1-2 already dial the phone

3-1-3 has to answer the phone

3-1-4 delete call records

3-1-5 call time

3-1-6 calls

3-1-7 messages counter

3-1-8 GPRS flow counter

3-2 generally call Settings

3-2-1 call Settings

3-2-1-1 this number

3-2-1-2 call waiting

3-2-1-3 call transferred

3-2-1-4 call restrictions

3-2-1-5 circuit switching

3-2-1-6 closed group

3-2-2 automatic weighing dial

3-2-3 speed dial

3-2-4 IP dial-up

3-2-5 more

3-2-5-1 time

3-2-5-2 call time

3-2-5-3 three automatic limit

4 Settings

4-1 SIM card Settings

4-1-1 dual mode

4-1-2 SIM card

4-1-3 only 2 open SIM card

4-1-4 flight mode

4-2 touch screen calibration	
4-3 phone Settings	
4-3-1 date and time	
4-3-2 timer switch machine	
4-3-3, key vector fonts	
4-3-4 language	
4-3-5 default input method	
4-3-6 standby menu display	
4-3-7 greeting	
4-3-8 designated function keys	
4-3-9 automatic update time	
4-3-10 handwritten Settings	
4-3-11 UART Settings	
4-3-12 other Settings	
4-4 network Settings	
4-4-1 network	
4-4-2 preference network	
4-5 security Settings	
4-5-1 SIM card 1 security Settings	
4-5-1-1 January SIM card lock	
4-5-1-2 fixed dialing	
4-6 banned dialing	
4-5-1-4 change your password	
4-5-2 SIM card 2 security Settings	
1-1 4-5-2 SIM card lock	
4-5-2-2 fixed dialing	
4-5-2-3 Modify the password	
4-5-3 phone locks	
4-5-4 keyboard lock	
4-5-5 change your password	
4-7 restoration manufactured Settings	

5 multimedia	
5-1 the camera	
5-2 albums	
5-3 video footage	
5-4 video player	
5-5 music broadcast machine	
5-6 recording	
5-7 FM radio	
5-8 FM timing recording	
5-9 gongxue ring	
5-10 mobile TV	
6 the archives management	
7 fun and games	
7-1 game center	
7-2 multi-media ebook	
7-3 games	
7-3-1 game	
7-3-2 gameplay	
7-4 dynamic game	
7-5 theme	
8 scene mode	
8-1 general modes	
8-2 meeting mode	
8-3 outdoor mode	
8-4 indoor model	
8-5 headphones mode	
8-6 bluetooth mode	
9 toolbox	
9-1 calendar	
9-2 todo	
9-3 alarm	
9-4 world time	

10 service

- 10-1 STK service
- 10-2 WAP
- 10-3 account information

11 additional functions

- 11-1 calculator
- 11-2 currency conversion
- 11-3 meter
- 11-4 ebook
- 11-5 bluetooth

12 pattern choice

- 12-1 normal mode
- 12-2 internal data projection

3.2 Information

Choose "messages" menu enter submenu.

If your network support, and you have to apply for the business network provider, through the short message service center, you can send messages in Chinese and English and the multimedia information.

3.3 In-Box

For the current MMS, you can view, reply, delete all, check the details of message or use items, etc.

3.4 Out-Box

You can view, forward, edit, delete, delete all, check the details of message or use items, etc.

Draft

Display the completed but not sent MMS.

3.5 MMS Setting

You can set and operate the mode, status, storage and preferred storage location.

Please get contact with your network operator to get the phone number of message service center.

△ Note: This function shall be supported by network operator.

3.6 MMS

Compile Message

- Addressee: Key in the addressee information, who may be one person, several phone numbers or E-mail address, 20 at the maximum. Press the left soft key of "Edit", select to add number or e-mail address, then edit the phone number or E-mail address. Select to "Add Number", and when no content is edited, press OK key and select "Search" to skim over the Telephone Book, and select numbers in the numbers; Select "Option" and then "Edit" to change the current phone number or E-mail address on the edited addressee notification bar; select "Delete" to delete the current phone number or E-mail address; Select "Delete All" to delete all phone numbers or E-mail addresses of recipients; press "ENTER" to confirm the modification of recipients

- Copy: The phone number or E-mail address for CC.

- Blind Courtesy Copy: The phone number or E-mail address for BCC.

- Subject matter: Input the subject matter.

- Edit: You can add texts, pictures or sound, etc.

After having compiled new MMS, Press "Complete" to access the "Option" menu, you can select to "Send", "Save and Send", "Save to Draft", "Save as Template" or "Options for sending".

In-Box

For the current MMS, you can view, reply, reply by

SMS, reply all senders, forward, delete, delete all, check the details of message or use items, etc.

Out-Box

You can view, forward, edit, delete, delete all, check the details of message or use items, etc.

Draft

Display the completed but not sent MMS.

Template

It contains the pre-stored common message and message saved into the template by user.

MMS Setting

- Edit the setting: Set the editing mode, picture zoom-out and auto signature.
- Send the setting: Set the out-box report, read report, priority, interval time and sending time within the term of life.
- Receive the setting: Set the master network, roaming network, send reading report and allow sending report.
- Filter: Set the anonymous addressers and AD message.
- Server setting file: Select the suitable setting file.
- Storage status: Check MMS storage status.

△ Note: Please consult with your network operator if it has provided MMS network service and how to apply for accessing the service.

3.7Chat

Can enter chat a chat room 2, set yourself or the nickname and enter the phone number, and began to talk

3.8voicemail

Did you receive the information stored in the network of speech, the information you have listened to call voicemail number.

3.9Community radio

■Receiving mode: select open into receiving mode, closed refuses to accept the village broadcast message.

■ read this message read your custom menu of broadcast news.

■set of radio reception area.

■channel set: setting community radio channel.

Note: the community radio and voicemail services are provided for the operators, please contact with the operator.

3.10 Call center

3.10.1 SIM card 1 call records

- Did not pick up the phone, according to determine the grafted can check list of calls.
- already dial the phone, according to determine can view has dial the phone list.
- has been determined by phone, can view phone list already.

Before answering the telephone, has already telephone call, recorded under specified list interface, can view the records of detailed information, including the date, time, number and dialing call number.

In the detailed information, can press options under the interface of the selected telephone records.

Delete Delete this record

Save The number of mobile phone SIM card or to keep

Dial-up Dialing the telephone number

Edit Edit the telephone number and put it in the telephone directory

Sending short messages sending short messages the number

IP dial-up For the number for IP dial-up

■delete call records

In recording, delete calls four sub menu. Did not answer the phone, has already telephone call, and delete all.

Users can choose empty a call records lists, and choose delete all the records are used to delete calls written list

■Time

In time, there are four sub menu. The last time, has already amounted to dial telephone calls, total, all The Times to zero.

1. The last phone time Check the last call time
2. Already amounted to dial the phone Check out the total telephone time
3. Total already telephone Check the total time already telephone

4. All the time to zero Remove the clock, restart data statistics.

■ Call billing Call calls for your billing accumulative storage
1. The last call charges

Enter submenu in the last call charges, check the last call charge.

2. All call charges

Enter submenu all call charges, check total call charges.

3. Calls to zero

Input to the meter PIN2 codes are reset, and start again.

4. Expenses

Enter submenu expenses limitation, can read, amend or cancel this function. One should modify and cancellation function PIN2 input code.

5. The price and rates

Enter submenu and rate of price, can browse, amend or cancel this function. One should modify and cancellation function PIN2 input code.

Note: the operation needs you input PIN2 code, please contact with your supplier of network, in order to obtain the password

■ Messages counter

Already send the message: records have been sent.

Already received the message: has been received record.

You can choose the left soft key reset to empty the two

■ GPRS flow counter

1. Last delivery: Record last transmission bytes
2. Last time receiving: Record last receiving bytes.
3. All transmission: Record the number of bytes in transmission
4. All receive: The total number of bytes receiving records
5. Counter to zero: Start counting

Phone setting

Caller ID: To choose set by network, hide id, send id.

Call Waiting: This function will alert you when there is a new incoming call while you are talking to other person. This is a network support feature.

Call Divert: In "Call Divert", (under certain preset situation) the network service permits you to divert certain incoming calls to another telephone number designated by you. You can set and cancel the incoming call diversion function of your mobile phone. This is a network support feature. Please contact your network provider to activate this service. Enter the Call Divert submenu to carryout the following operations:

1. Divert All Voice Calls: To divert all incoming voice calls.
2. Divert if Unreachable: To divert all the incoming voice calls to a pre-set number when the phone can't be reached.
3. Divert if No Answer: To Divert all the incoming voice calls to a pre-set number when no answer.
4. Divert if Busy: To Divert all the incoming voice call when the phone is busy.
5. Divert All Data Call: To Divert all incoming data calling.
6. Cancel All Divert: To Cancel all the call divert settings.

• Call Baring

Outgoing Calls:

1. All calls.

2. International Calls.

3. International Calls Except To Home.

Incoming Calls:

1. All calls.

2. When Roaming

Cancel All: Cancel all setup, you can dial and receive any call.

Change Barring PW: Apply to the network for change the code.

- Call Time Reminder: Select to remind (Alert) at end of every minute during incoming and outgoing call (Off / Single / Periodic).

- Call Time Display: Press the left soft "On / Off" or "OK" key to display the call duration.
- Auto Redial: Press the left soft "On / Off" or "OK" key to activate or deactivate the auto redial function. When enabled, the phone will automatically redial the number for 10 times until your call is answered or you press the hang up key or the right soft key to cancel the auto redial.

3.11 Setting

Maneuverable mode: maneuverable mode is close communication function, which can phone call hair message, and the base, nor no signal to touch base.

In this mode, the phone off the relevant functions such as mobile still can continue to use open on the articles, movies, etc.

Note: in the current civil aviation authority is not for "flying" mode, the passengers in the computer before still should abide by the relevant provisions on the plane. At ordinary times (such as night) can switch to cellphones, can use less electricity - for mobile power consumption in large part on signal, maneuverable mode closed signal.

Bluetooth

You could use the Bluetooth technology to connect with other compatible devices. The compatible devices include of mobile phone, computer, earphone, and others. By using the connecting of Bluetooth, you could send the picture, video, music and notes. Or connect with PC.

Since the Bluetooth device is using the wireless wave, so you don't need to keep the devices in the same position. Just make sure the distance between the two Bluetooth devices is less than 10 meters (about 33 feet). But the connecting of Bluetooth may disturb by the blocks such as wall and other electronic products.

This phone supports the Bluetooth 1.2, and the lower edition. It supports: Audio transmit mode, basic picture mode, document transmit mode, hand-free mode.

In some place, may have the limit of using the Bluetooth technology, please query the local ISP.

By using the Bluetooth technology, it will consume the power faster and may reduce the life of battery.

When the device is locked, it is unable to using the Bluetooth connecting.

3.12 Mobile phone Settings

Time and date: setting time and date.

- Setting for the city: the phone set time choosing a city.
- Time/date set: set the date and time.
- Timer switch machine: setting time, in this time on or off.
- Si kai vector fonts: to set any font and size, and can be unloaded.

Language: set of mobile phones menu that language

Default input: choose a default input method

Standby menu display

Wallpaper: choose standby interface wallpaper.

-screen protection: give priority to choose a picture on

standby screen interface screen saver pictures and setting waiting time

-boot animation: can choose to boot motion pictures

-Shutdown animation: can choose shutdown motion pictures

-Time and date: choose that open or closed in the current

time under standby interface.

-Show the number: select open or closed on standby interface

that change under the machine number

■ Greetings: on standby interface shows standby greeting.

Choose close not display.

■ Designated function keys specified under standby interface:

■ About the direction key functions

■ Automatic update time: select open or closed in mobile phone automatically update time.

■ Handwritten Settings: setting handwritten speed and handwritten pen colour

■ Setting: choose UART SIM card 1 or 2 SIM card

■ Other Settings: brightness and delay time of LCD

3.13 Network Settings

■ Network choose:

1. The automatic: automatic search - SIM card belongs to network

2. manual: search currently available all network, manual.

■ Preference network: stored several oneself to like network.

3.14 Security Settings

■ SIM Lock

Here you can phone set under the menu option to avoid safety by phone or illegal use of SIM card.

- PIN code

PIN code can prevent your SIM card is used illegally

If current PIN code, which had been closed, select open can

open PIN code protection, next boot will ask you PIN code. If

the current PIN code has opened, choose close can close PIN

code

protection, choose to PIN code can set a new PIN code, please

according to clew ordinal input old PIN code, a new PIN code

and repeat a new PIN code

Note: the PIN code if three consecutive losing wrong, SIM

card will be locked, at this time, you need to unlock the SIM

card PUK yards. PIN code and PUK yards and SIM card can

provide you with, if not, please contact with your network

provider. The default PIN code is 1234, please change it for

yourself as password

■ Fixed dialing:

If your SIM card can be limited only support, call the selected

number. When this function only when opening, can call the

fixed telephone number or the list of dial-up to watch some of

the beginning of the digital telephone number.

Enter submenu "fixed dial-up":

-mode: open or closed fixed dial-up function (input) yards

PIN2.

-Fixed dial-up list: input - fixed dial-up telephone number

Note: open or closed fixed dial-up function, need you input

PIN2 code, please contact with your supplier contact network

obtained PIN2 yards. Open fixed dial-up, that is fixed into card

holder of dial-up number

■ Prohibit dial-up: with fixed dial-up instead, here you can

set the number of calls for some prohibited

■ Change your password: change the password. Including PIN,

PIN2 and unit password revision.

Note: some function need your support network operators.

3.14.1 Phone locks: phone locks can prevent your mobile phone

is not authorized to use. Select phone locks can open mobile

password protection, next time on mobile password will ask you,

password protection, next time on mobile password protected

Note: default password is the phone locks as soon as possible,

you should be 1122 change your password for it.

3.14.2 Keyboard: set keyboard lock locking waiting time. After

setting, when the phone at the specified time when using, keyboard

will automatically locked

3.11.3 Change your password: change the password. Including

PIN, PIN2 and unit password revision.

3.15 Restoration manufactured Settings

Set the default password recovery factory is: 123

3.16 Multimedia

3.16.1 Camera

Your mobile phone, camera function provided by selection menu interface, the small icon pictures can realize pictures. According to the pictures of each small icon frame interface can set the size of the pictures, photo quality and functions. You can also enter the relevant items by options.

Press options:

--Photo: enter - photo album

-- camera Settings: some pictures of related parameter

Settings

--Photos Settings: photo size and picture quality

--For the photo frame: - select a frame.

--Storage: store route choice - to phone or memory card

3.16.2 Photo albums

Enter a photo album

3.16.3 Video footage
Your mobile phone provides the function, choose recording animated video editor into animation menu, press the red button to enter round.

--Setting: choose - video footage into the menu is some related parameters Settings.

--Storage: store route choice - to phone or memory card
--By default, REDOX will revert to the default setting of

all values

3.16.4 Video player

Into animation playback

Nouns explain:

-Broadcasting: play the currently selected files.

-Teleport: teleport currently selected files (can transmit,

MMS, telephone and E-mail).

-Name: changes the current selected filenames.

-Delete deletes the selected files.

-Delete all files, delete the current all files.

-Sorting order of archives arrangement: (name, type, in time, size, or not).

-Storage: check the file path storage location (can store to

fit conversion tool for converting rear can play)

3.16.5 Music Player

• Up navigation key: Pause to play; Down navigation key: Stop playing; Left navigation key: Previous music; Right navigation key: Next music; OK key: Play. * # keys: Adjust the volume.

Press "MENU" on the player interface to play the selected file, view the detailed information, add to ring tone base, update the play list and set.

Select SETTING menu for the following settings:

• Play settings:
➢ List: Select the music play path as mobile phone or memory card.
➢ Auto generate list: When it's set as ON, you can execute "Update Play List" without bothering to manual modification.

When it's set as OFF, you can select to add music files into the File Folder.

➢ Repeat: Separately use the left and right keys to set.

➢ Random: It's separately set as ON or OFF.

➢ Background play: Press the left and right keys to set as ON or OFF.

➢ Bluetooth stereo output: Press the left and right keys to set as ON or OFF.

➢ Libretto display: Press the left and right keys to set as ON or OFF.

△Note: As the music player can only automatically put the music in My Music folder saved in the memorizer into the play list, so you'd better save the downloaded music into My Music folder in the memorizer.

3.16.6 Sound Recorder

• You could record .wav sound files.

• Select Main menu →Sound Recorder →Start

• To select the Play for the sound files list, Press the select file for play.

• Sound recorder option description:

Name	Description
To Bluetooth	To send the sound file to the Bluetooth.
Delete	To delete the selected sound file.
Cancel	Cancel the operation

- To select Main menu → Files → Audio for the sound files list.

- It is unable to record while talking or GPRS connecting.

3.16.7FM Broadcast

- Channel list: Rapidly play the list of pre-set 9 channels.
- Manual input: Rapidly skip to the channels inputted manually.
- Auto search and setting: Automatically search and set it into the list.
- Setting: Set the background play, etc. in this menu.
- Press * and # keys during play to adjust volume.

In addition, the player is also furnished with such functions as Record, My Ring Tone, My Movie, My Picture, Hot Self-Timer Pictures, Attachment and File List, etc.

Note: The effect of listening to broadcast program is subject to the broadcasting coverage in the special area.

3.16.8FM Timing Record

You can set time, date and channel, and record the programs played in the set time.

3.16.9Self-programmed Ring Tone

Press left function key to access Music Composition interface and set the following options: Play, Play Speed, Select Music Instrument and Save.

3.16.10Mobile TV

Enter your TV set, regional, and then on the phone with a tail open antenna will automatically search antenna television channel.

3.17The archives management

Stored documents. Store user Into the folder options:
 - Open: the folder that the content.
 - on the establishment folder: the folder to establish a new folder.

- Format: the folder formatting.

3.18Fun and games

- The game center: here provide related services. This function needs a memory card support.
- Multimedia ebook: here provide related services. This function needs a memory card support
- Game: This phone, a game of mahjong: against.

Game Settings:

- Background the audio: open or closed.
- sound: open or closed.
- game vibration: open or closed.
- Dynamic game: here provide related services. This function needs a memory card support.

3.19Eco Mode

In the main menu interface, use the touch pen to press and access eco mode interface.

The user can select the different eco modes, and at the same time, customize several eco modes. This player is furnished with six types of eco modes, i.e., General mode, Meeting Mode, Outdoor Mode, Indoor Mode, Earphone mode and Bluetooth mode.

Here you can select to Activate or make the Personal setting.

- Activate: Activate the General Mode.
- Personal setting: Customize this mode, including ring tone setting, volume, ring mode, ring type, vocal spelling of caller number, warning tone and answer mode.

Ring tone setting: Change the ring tones for the incoming calls of SIM Card 1 /SIM Card 2, startup, power-off, message of SIM Card 1 /SIM Card 2 and key tone. You can select the pre-set ring tones, or select the recorded or downloaded ring tones.

Volume: Adjust the volume of ring tone and key tone, with options from Class 1 to Class 7.

Ring mode: Select a kind of ring mode as ring, vibration, vibration & ring as well as ring after vibration.

Ring type: Select a kind of ring type as one sound, continuous or increasing ring.

Warning tone: Set the warning tone for different occasions: warning tone, error, Internet connecting tone or call connecting tone.

Answer mode: Set the call answer mode as answer by pressing arbitrary keys except for DIAL key and POWER key, in Earphone Mode, you can also set the answer mode as auto answer mode.

-Meeting Mode

The operation is same with that of general mode.

-Outdoor Mode

The operation is same with that of general mode.

-Indoor Mode

The operation is same with that of general mode.

-Earphone mode

The phone will automatically enter into Earphone Mode when the earphone is inserted; there is no startup option of Personal setting for this mode. The operation is same with that of general mode.

-Bluetooth mode

After Bluetooth feature is activated, the phone will automatically enter into the Bluetooth Mode of Personal setting. The operation is same with that of general mode.

△ Note: Press # key in standby status to turn on or off Mute

3.20 Toolbox

This calendar provides mobile phones, todo (i.e., alarm clock, world memos) time functions.

3.20.1 Calendars

Enter submenu and management, calendars that determine the date

Touch interface above can choose direction key dates and months. Use the direction key, also can realize the function.

According to the options button to enter submenu.

■ schedule: a new agenda. And add a clock reminded. You can choose the time, every day, custom, weekly, monthly five options.

- A: this schedule only reminded again.

- Every day in every: - set the moment will remind.

- custom: set the alarm clock rang in a week.

- Week week: in - set the moment will remind.

- In every month, said - set the moment will remind.

■ new items: editing memo new information.

■ to jump to a specified date: to a specified date from the current date schedule to a specified date.

■ in weeks: to examine in weeks and months that the way week

■ lunar calendar: open or closed lunar calendar

3.20.2 Todo

This mobile phone can be stored 10 memo of information. In the menu selection of memorandum memos, editing.

3.20.3 Clock

This mobile phone set five alarm. Choose one of the clock, edit and Settings

3.20.4 World Clock

Beijing, Hong Kong, Taipei, Manila, Tokyo, Melbourne, Guam, Canberra, Sydney, Solomon, Auckland, Tonga and other places time.

3.21 Network services

3.21.1STK service

Your mobile phone support based on wireless application protocol (WAP) service. You can visit your network operators support service. The service function let you get on watch news, weather forecast and flight information of such.

3.21.2WAP

- Home page: Access this menu and directly link to the default web-site in this mobile phone to obtain various information about the entertainment, movie, fashion, friend-making and games, etc.
- Bookmark: You can select to access the pre-set WAP web-site in this phone.
- History record of web page: The web pages recently logged in on this mobile phone will be saved in this menu, you can directly select and access one record.
- Saved web page: You can edit the web-site to save here in advance.
- Please input the address: You can edit the desired web-sites here.
- Service In-Box: You can receive the network service message.
- Network Setting: You can separately operate on the following options: Select SIM Card, Edit the Setting File, Options of Browse, Service Message Setting, Clear the Cache and Clear

Personal Information, etc.

3.21.3Data account

---GSM data:

- Choose one account into:
- 1 the account name: the name, choose edit can

- 2 the account number: the number.
- 3 the user name: dial-up server (not WAP gateway) account name.
- 4 the password: dial-up server (not WAP gateway) password.
- 5 select lines, analog or digital.
- 6 speed: choose proper transmission speed.
- 7 The domain: IP address.

GPRS data:

Choose one of the account:

- 1 the account name: the name, choose edit can modify.
- 2 GPRS connection: input APN.
- 3 the user name: dial-up server (not WAP gateway) account name.
- 4 the password: dial-up server (not WAP gateway) account password.

---Authentication model: choose - authentication encryption.

3.22Additional functions

3.22.1calculator

Your mobile phone provides you a have four basic functions of the calculator, convenient for you simple calculations.

Choose a calculator, and determine the menu item according to enter:

- Can touch screen in the interface - the input to the calculation.
- 0-9 keys can also be input.
- According to the right key - according to a clear recently, according to the results of the input or soft "back" button

right from calculator, press left soft key "ok" results

Note: this calculator accuracy is limited, can produce rounding errors, please forgive me

3.22.2Currency conversion

Currency conversion rates, and then to enter their or foreign currency, input, according to the left soft key in another box shows your value.

3.22.3computer

computer : Stopwatch function realization.

--general timers:

General stopwatch, divided by time and circle respectively according to left soft key timing, start/stop time, right key points.

1. Time: respectively after a record time record time not reset, suitable for no more than 20 individual test results (such as a class record of 1000 meters).

2. to lap time: to lap time record a record time will reset, suitable for people (such as a professional athlete) for long-distance running around in circles every lap, most of the results should not exceed 20 laps.

3. check record: check has preserved in circle respectively timing and the timing records.

-the collation:

The collation, according to the four directions, or above under the direction key control.

3.22.4e-books

Document storage location for ebooks, you need a memory card through usb download, save in the folder named "magic", if the memory card in this folder to build a name for "magic" folder.

Enter ebook, you can read for detailed information, ebooks, name, delete and sorting.

3.22.5bluetooth

Activate bluetooth:

Through this switch can activate or closed bluetooth function.

---Search through the device: the free mobile phones can automatically search function to avoid the periphery (generally, the default password for bluetooth headset 0000, specific details please bluetooth headset user specified). After the success of mobile phone and it can realize the bluetooth headset connecting with other bluetooth headset with incoming calls.

--My device: the new device can automatically search through bluetooth devices, and to search in the mobile phone screen name, phone already equipment according to clew matching Settings.

--In the online:

--Setting:

The machine is set to open the search,: other bluetooth devices can search to the machine, set to close, other bluetooth devices can search to the machine.

The device name: can customize the name.

The Settings for the authentication demand: open, the search when the input password, bluetooth tips for machine was set off by search.

Set sound path:

(1) : choose the phone in conversation, only use mobile phones, cannot use bluetooth headset.

(2) to avoid the device: when the choice, the conversation, not only with bluetooth headset with mobile phones.

File transfer setting:

(1) : choose to share the directory path of share files.

(2) directory permissions: set permissions.

--My bluetooth: when activated after the bluetooth wireless, display information.

File transfer: to the sender and the receiver is set to open

bluetooth devices (online in the machine can be "search" must be set to open), open files to transfer options - - - bluetooth, transfer the input password after can file transfer (default password for transmitting and receiving bluetooth 0000)

3.23Mode Settings

Here you can set up mobile normal mode and projection model.

This phone, Tim projection function modules, projection model as ordinary open projection, the mobile phone use projector function is not affected. Through the long press "projection" shortcuts can be realized internal data projected in the projection screen, you can check the corresponding contents, through the navigation keys and confirm button to select and operation of the corresponding menu, please see the menu use detailed instructions, also can be in the interface "mode" menu choice "projection" internal data, switch to projection model, through the navigation keys and confirm button to select and operation of the corresponding menu, please see the menu detailed use manual. Through the long press "projection" button.

Note: this will be quenched, LCD touch screen function cannot be used. After the metal shell projection will increase.

4 input method explain

Handwriting input

This touch screen of the phone support the handwriting input.

Number input

Press the numbers showed on the screen to get the same numbers.

Symbol input

When you are using the number input, you can press the "#+=", to get more symbols.

4.1 Keyboard definition

Keyboard input are defined as follows, the specific condition, please refer to the definition of the keyboard input section 4.2.

Left soft key: general said, right softkey general said delete a character.

Navigation button scroll: general for the cursor's move to choose the word before or scroll, pinyin choice.

#Key: the # key in different input switch between.

The * key: Can sign out and input.

Keys (0-9) : in pinyin input conditions, says each key on the phonetic alphabet, In English input method under the condition that the letter in each key.

4.2 input method explain

4.2.1 Intelligent pinyin input method

5. T - flash card is introduced

This mobile Flash memory function, support to expand the storage space. Specific operation is as follows:

5.1 T - flash card dismantled and installation

This mobile flash card, phone back in place. According to flash card, phone: logo insert When the first to take, slightly press, T - flash card will pop-up, Please do not directly to dial direct dial, may cause the card of card or T gets stuck permanently damaged.

Note: this mobile phone to support plug and play, but on condition, insert or remove flash CARDS, Suggestions, manual again, to ensure switch machine once played the normal use of information.

Normally does not suggest dismantling and installation

T - flash card.

5.2 the use of the T - flash card

As one of the mobile phone memory, T - flash card in the factory was established for the default system memory. You need not make any setting can use directly

T - flash cards as the use of mobile phone memory: the first insert T - flash card, you will need to music player, animation, video, animation player, recording etc. The default camera memory for memory card, can use flash card, the storage space and content. (the corresponding setting method in the above mentioned in the function has been).

As a USB connection USB cables use: after the data,

which can realize the computer copy directly. Specific usage can refer to the use of U dish.

6 Common problems and solutions

If you use your phone abnormality, please refer to the table.

FAQ	Causes	Solutions
Receiving bad	In poor areas use mobile phones, receiving radio waves near or basement can effectively communicate.	Try to avoid.
Echo or noise	In the period of intensive use of mobile phone calls, such as consuming time, can cause connection line. With the launch of the network built near.	Try to avoid.
Steadily time shorter	Because of network is caused by poor trunks regional problems. Some call the connection is bad areas. Steadily time and network system Settings.	May require the Internet service providers offer service area. Hang up again heavy dial, good lines may change trunks. In poor areas, please temporarily closed cell phones.
Unable to	Need to replace the battery. Cannot receive signals, the local use strong or signals temporarily closed continue to launch in search of the battery. consumption base, steadily time.	Replace the batteries. Please move to the local use strong or signals temporarily closed cell phones. Check the

boot	SIM card mistake	consumption. SIM card is damaged	battery or charge. Contact your network service provider.
		SIM card not installed	Determine the SIM card has been installed.
		SIM card metal surface are dirt.	Use a clean cloth wipe try SIM card metal contact point.
	Unable to connect Internet	SIM card invalid.	Contact your network service provider.
		Beyond the GSM service area.	To the network service area. Supplier inquiries.
		Weak signal	Please move to the strong signal place again.
	Unable to call	Use the call limiting function.	Cancelled call restrictions.
		Use a fixed dial-up function.	Cancel the fixed dial-up.
	PIN errors	Three consecutive inputs incorrect PIN code.	Contact your network service provider.
	Cannot charge	The battery is damaged.	Replace the battery or charger.
		in the environment below 10 degrees or above 55 degrees of charging.	Change the battery environment.
	Could not add telephone records	Contact undesirable. Telephone has been full of storage space.	Check whether the plug connection. Delete parts of telephone records.
	Unable to	Network	Contact your

set function	some vendors support this function, or do not apply this function.	do not support this function.	network provider service
-----------------	--	--	--------------------------------

