

# Watch Mobile Usermanual

<b>Contents</b>	
1 SAFE USE AND CAUTIONS.....	3
1.1 PLEASE COMPLY WITH THE FOLLOWING CAUTIONS WHEN USING THE PHONE.....	3
1.2 PLEASE COMPLY WITH THE FOLLOWING CAUTIONS WHEN USING THE BATTERY.....	3
1.3 PLEASE COMPLY WITH THE FOLLOWING CAUTIONS WHEN USING THE CHARGER.....	4
2 NOTICE BEFORE THE USE.....	4
2.1 BATTERY.....	4
Charge the Battery.....	5
2.2 T-FLASH CARD.....	5
2.3 USB CONNECTION CABLE.....	5
2.4 SECURITY PASSWORD.....	6
2.4.1 PIN Code (4 to 8 digits).....	6
2.4.2 PIN Code 2 (4 to 8 digits).....	6
2.4.3 PUK Code.....	6
2.4.4 Phone Password.....	6
3 SUMMARY OF THE PHONE.....	6
3.1 KEYSTROKE FUNCTION.....	6
3.2 ICON.....	7
4 BRIEF INTRODUCTION TO MAIN FUNCTIONS OF THE PHONE.....	7
5 BASIC OPERATION OF THE PHONE.....	7
5.1 POWER ON.....	7
5.1.1 Power on.....	7
5.1.2 Input pin code.....	8
5.2 POWER OFF.....	8
5.3 MAKE A PHONE CALL.....	8
5.3.1 Dial a Call.....	8
5.3.2 Emergency Call.....	8
5.3.3 Dial an International Call.....	9
5.3.4 Dial Recent Calls.....	9
5.3.5 Speed Dial.....	9
5.3.6 Call Receiving.....	9
5.3.7 Missed Call.....	10
5.3.8 Additional Function in the call.....	10

5.4 TEXT INPUT.....	10
5.4.1 ABC/abc Input Method.....	10
5.4.2 Number Input Method.....	10
5.4.3 Handwritten input Method.....	11
6 MENU FUNCTION.....	11
6.1 PHONE BOOK.....	11
6.2 INFORMATION.....	11
6.3 CALL LOG.....	12
6.4 SILENT MODE.....	12
6.5 BLUETOOTH.....	12
6.6 MMS.....	12
6.6.1 MMS.....	12
6.6.2 Voice Inbox.....	12
6.6.3 Cell Broadcast.....	12
6.7 MULTIMEDIA.....	12
6.7.1 Camera.....	12
6.7.2 Audio Player.....	13
6.7.3 Video player.....	13
6.7.4 Sound recorder.....	13
6.8 ORGANIZER.....	13
6.8.1 Calendar.....	13
6.8.2 Calculator.....	13
6.8.3 File manager.....	13
6.8.4 Alarm.....	13
6.8.5 Tasks.....	13
6.9 SCENE MODE.....	14
6.9.1 Activate.....	14
6.9.2 Personal Settings.....	14
6.10 SETTINGS.....	14
6.10.1 Pen calibration.....	14
6.10.2 Phone Settings.....	14
6.10.3 Network Settings.....	14
6.10.4 Security Settings.....	14
6.10.5 Restore Factory Settings.....	14
6.11 SERVICES.....	14
7 COMMON TROUBLESHOOTING.....	15

## 1 Safe Use and Cautions

### 1.1 Please comply with the following cautions when using the phone.

- Please read the User's Manual carefully before the use.
- Please turn off the phone all the time in the plane. If the alarm, memo, and etc. of the phone have auto power-on function in power-off mode, please check and cancel the settings before boarding.
- Prevent from fire. Please turn off the phone nearby the chemicals plants, gas stations, fuel warehouses and other combustible articles.
- Please only use the standard battery, charger and accessories authorized by the company. The company will not take any responsibility for any aftereffect caused by using the third party's accessories.
- It is strictly prohibited to make bold to disassemble the phone.
- Please turn off the phone nearby the hospital or rest home; otherwise may interfere with medical electronic equipments, such as heart pacemaker, hearing aid, and etc. because of the phone use.
- It may damage the coating of phone cover if phone bag or plastic phone bag is used.
- Please use the earphone and other accessories carefully.

### 1.2 Please comply with the following cautions when using the battery.

- Please carefully read the operating instructions and battery surface identification carefully before the use.
- Please make sure the phone is turned off before taking out the battery from the phone.
- Please charge the battery in the cool and ventilated room; otherwise too high environment temperature may cause heating, smoking, burning or distortion, and even explosion of the battery.
- The inner battery is equipped with special protection circuit; it is strictly prohibited to make bold to disassemble

## the battery

### 1.1 Please comply with the following cautions when using the battery.

- It is strictly prohibited to use damaged or used up battery.
- It is strictly prohibited to place the battery in the overheat or sub cooled place.
- It is strictly prohibited to throw the battery in the fire for fear of explosion.
- Please treat the battery (such as recycle) according to regulations; don't treat the battery as life trash for fear of explosion and pollution.
- The battery only can be charged using special charger, and over 24 hours of continuous charge time is strictly prohibited.
- Please don't keep the phone in the safe place that out reach of children for fear of danger.

### 1.3 Please comply with the following cautions when using the charger.

- Please carefully read the operating instructions and charger surface identification carefully before the use.
- Please don't disassemble or reconstruct the charger.
- It is strictly prohibited to contact the charger with wet hands. If the charger contacts with water or other liquid, please cut off power supply immediately.
- Please keep the charger in the safe place that out reach of children for fear of danger.

## 2 Notice before the Use

### 2.1 Battery

The phone is using rechargeable battery. Only after two or three times of full charge and discharge cycles (charging time each time should be kept within 14-16 hours; but can't exceed 24 hours), the efficiency of new battery can be exerted fully.

### Install the Battery

1. The face with metal contact of the battery is facing downward (face to the phone).
2. Close rear cover of the phone.

### Take out the Battery

1. Make sure the phone is turned off; make sure that the charger or other equipments have been taken out from the phone.
2. Make the back of the phone upward; push the rear cover outward to take out rear cover of the phone.

### Charge the Battery

1. Make sure that the battery is installed in the phone.
2. Find the charger jack at the bottom of the phone. Connect the charger, and connect the charger to power supply.
3. After the charging is over, please firstly pull out the charger from power socket, take out the charger from the phone.
4. Don't insert and draw the charger plug by force; otherwise may damage the phone or the charger.

### Display screen displays charging indication icon

- In the charging process, indicator bar scrolls circularly.
- After the charging is over, indicator bar stops scrolling.

### Alarm to insufficient electrical quantity of the battery

- When electrical quantity of the battery is too low, display screen will prompt insufficient electrical quantity of the battery. The phone will give an alarm, and then will be turned off automatically. Please fully charge the battery. If you receive an alarm of insufficient electrical quantity of the battery during a call, please end the call as soon as possible.

### 2.2 T-Flash Card

1. Make the rear of the phone upward, push the rear cover outward to take out rear cover of the phone.
2. Make the metal surface of T-FLASH card (face to the phone), insert the card in the T-FLASH card slot of the phone. Make sure that bevel angle of T-FLASH card aim at bevel angle of card slot.

### 2.3 USB Connection Cable

1. Connect USB connector to USB interface of the computer (desk computer or laptop).

2. Connect the other end of USB connector to the charging interface of phone base.

- Through USB connection, download and charging can be used.
- When you connect the phone to the computer using USB connection cable, LCD of the phone will show "storage device, Network camera and series interface" in the power on state. If you just want to charge, according to hang up key directly from.

### 2.4 Security Password

#### 2.4.1 PIN Code (4 to 8 digits)

This is personal identification number of your SIM card; PIN code is usually provided with SIM card by network service provider.

- If you input wrong PIN code for three times continuously, SIM card will be locked and need to input PUK code to unlock. Please contact with your network service provider for more details to unlock.

#### 2.4.2 PIN Code 2 (4 to 8 digits)

Some SIM cards will provide PIN code 2 for visiting some functions, such as: notice of call charges and dial a fixed number. These functions can be used only with the support of SIM card.

#### 2.4.3 PUK Code

To release locked PIN code, PUK code and SIM card should be provided together; otherwise please contact with your network service provider to get the password. If you lose the password, please also contact with your network service provider.

#### 2.4.4 Phone Password

Phone password can prevent others from using the phone without authorization (original phone password is 1122).

- To ensure the security of your personal information, please change the original phone password in time.

### 3 Summary of the phone

#### 3.1 Keystroke Function

Main functions of the function keys are listed below.

#### END (Side Key Near by Camera)

Press and hold the key to power on or power off the phone.

End a call or reject an incoming call.

Return to standby mode.

#### OK (Another Side Key)

In the standby mode: Press OK Key to enter menu.

In the other mode, Press the OK key to confirm the selected functions.

#### 3.2 Icon

According to different functions you are using and different options, display screen will show different icons.

### 4 Brief Introduction to Main functions of the Phone

**MMS:** your phone includes multimedia messaging services, so that you can include film, color picture and sound in the text message; and your photos can be sent by MMS too.

**Camera/video recorder:** Record sound film using the phone; you can add an interesting photo frame when taking a photo.

**Film player:** You can browse or process the video files saved in the player; play the recorded films and MP4 files downloaded from the internet.

**Music player:** You can play MP3 music files saved in phone and T-FLASH card.

**Bluetooth:** You can use Bluetooth transmission of documents directly.

### 5 Basic Operation of the Phone

#### 5.1 Power On

##### 5.1.1 Power On

In the normal condition, press and hold End to power on the phone.

##### 5.1.2 Input Pin ode

- If the phone is set up power-on password, the screen will prompt you to input power-on password, input correct

assword to power on the phone.

- In order to prevent SIM card from being used without permission, you can set up protection password (PIN code). After

setting up PIN code, the phone will require you to input PIN code when turning on the power.

- If you input wrong PIN code for three times continuously, SIM card will be locked. If this condition happens, please contact with network service provider.

- If you don't know PIN code, please contact with your network service provider.

#### 5.2 Power off

If you want to power off the phone, please press and hold End in the standby mode. When the screen shows power off motion, the phone is powered off. Please don't power off the phone by removing the battery. If do like this, it may lose some information that haven't saved in SIM card or the phone.

### 5.3 Make a phone call

#### 5.3.1 Dial a Call

- In the standby mode, input telephone number using Touch Panel, press Call to dial a call.
- You also can dial a call from phone book, press "Names" to enter Phone Book in the standby mode, select Speed Search, find the corresponding contact person and select the corresponding phone number, press Call to dial out.
- When the phone is put through, press "Hand free" to enter hands free mode.
- Press End to end a call.
- Press End to cancel the call just dialed.

#### 5.3.2 Emergency Call

Emergency call is the number that can be dialed out even the phone is locked and SIM card is not inserted.

- Different countries have different emergency numbers, so that emergency numbers of the phone will not take effect in all areas. Sometimes emergency call may not

dial out because of the influence of network, environment or interference.

- 112 is standard GSM emergency number, any GSM network in the world can be used.

### 5.3.3 Dial A International Call

- When dialing an international call, replace "00" by "+", press and hold \* to input "+".

• Input the country code.

- Input the area code and phone number.

- Just like dialing an international call, take out "0" before the city area code when dialing.

### 5.3.4 Dial Recent Calls

No matter what the call is put through, the phone saves the list of incoming and outgoing phone number. The list is saved in the order of from new to old. After new number is saved, older number that exceeds the storage range will be deleted.

- In the standby state, press Call to display recent call numbers of SIM. Press Navigation Key to select required number, press Call to dial out the number.

### 5.3.5 Speed Dial

You can set up speed dial for the numbers that you often dial out, and then you only need to press two keys and dial the number.

- When setting up speed dial, select Speed Dial and enter Phone Settings of Setting Menu.

- After entering the setting interface of speed dial, set the status as on, you can use blank number key to edit new speed dial number, also can delete old speed dial.

- **Number Key 1** may be reserved for voice inbox number.

### 5.3.6 Call Receiving

- When there is an incoming call, according to the phone settings, it may prompt incoming call using **Ring, Vibration, Vibration and Ring, Ring after Vibration and Incoming Call Picture.**

To receive a call, press **Call**.

To refuse a call, press **End**.

- If you have opened Incoming Call Display, calling number and Location will be shown on the screen during a call. If the number is saved in the phone book, the corresponding name of the number will be shown on the screen.

- Press **End** to end a call.

### 5.3.7 Missed Call

When there is a missed call, main screen will show prompt box, you can press Read to enter the list and check the missed call.

- If you have selected Call Divert in Call Settings of Settings, the phone will divert the call to the designated phone number according to your settings.

### 5.3.8 Additional Function In The Call

During a call, you can press **OK** Key to enter the option. Through the option, you can pause (restore) a call, end a call, open a new call, open phone book, enter SMS menu, mute, disable (enable) DTMF.

### 5.4 Text Input

The phone provides the following input modes, in the editing interface, press # to switch the input method, press \* to enter input punctuation interface. In the non-digital input method, press 0 number keys to enter a space.

### 5.4.1 ABC/abc Input Method

The phone provides capital letter and small letter input methods. The difference between ABC input method and smart English input method is no imagination function, you can input required letters by pressing the key many times. Input one corresponding character by pressing the key once. For example: Press Key 2 to input A, press Key 3 to input D, press Key 2 continuously to select 'A','B','C' or '2'.

### 5.4.2 Number Input Method

In the input method, press Number Key to input the corresponding numbers.

### 5.4.3 Handwritten Input Method

The device supports handwriting recognition input, which can greatly enhance the speed of input

## 6 Menu Function

### 6.1 Phone Book

- The phone provides two phone book storages: SIM (Maximum capacity is 200) and the Phone can support 500.

• In the standby mode, input one series of numbers, press **OK** Key to save. After storage location is selected, editing interface is shown.

- You only can input **Name** and **Phone Number** in the phone book record that saves in SIM card.

- Enter phone book function list from the menu, you can select **Speed Search, Name Search, Add Numbers, Copy All, Delete, Incoming Call Group, Other Numbers, Settings, Incoming Call Photo, Incoming Call Ring tone** and other functions.

### Speed Search

Browse all the records in the phone book, also can input the contents to search rapidly.

- The small icon on the left side of phone book list shows that the record is in SIM card the phone, the right side is name information of the record.
- After selecting one record, press Call to dial a call, or press **OK** Key to conduct the following operation.

### 6.2 Information

The phone supports the function of sending SMS. SMS is sent to network SMS center, and then network send to the target user. If target user is not power on or can't receive SMS, network will save the message temporarily. The period of validity of saving SMS is commonly decided by the settings of sender and service operator.

- When you receive new SMS, display screen will show the prompt. Press **OK** Key to read SMS.

- If the opposing party has received SMS, he can hear alarm tone (**SMS Alarm Tone and Information Report**

should be set as on).

- If information memory is full, at this time, you can't receive any new SMS. In the **Inbox**, select designated old SMS, use delete option, delete old SMS. Once there is space in memory, the SMS that has not sent will be received.

### 6.3 Call Log

#### Missed Call

#### Dialed Call

#### Received Call

#### Delete Call log

#### Call Time

#### Call Charge

### 6.4 Silent Mode

In the standby mode, press the menu to switch between current scene mode and mute mode.

### 6.5 Bluetooth

Turn on/off the Bluetooth

Searching for the other unit

Further control the Bluetooth equipment

Units has already been searched

Unit in connecting

"unit can be searched" "unit name" "certification requirement" "set the sounds path" and "file transport set-up"

Unit information

### 6.6 MMS

#### 6.6.1 MMS

**MMS is a network service, you need apply for ISP firstly, to send and receive MMS.**

#### 6.6.2 Voice Inbox

#### 6.6.3 Cell Broadcast

### 6.7 Multimedia

#### 6.7.1 Camera

You can take a photo using the built-in camera and adjust the settings. The photo will be saved in the file system of the phone; the photo being taken is JPG format.

### 6.7.2 Audio Player

The built-in music player is used to play the music list and set the music to ringtone. Notes: MP3 files should be placed in the directory of "Memory Card/ my music", and then can be shown in the music list.

### 6.7.3 Video player

The built-in video player is used to browse or process the video files saved in the player, including video, MP4 files, and etc. Notes: Video files can be played normally if placing in "Memory Card /video" file folder.

### 6.7.4 Sound Recorder

The default path for records file is under "memory cards/audio"

Press option bottom to choose record, play, attach, rename, delete, delete all, setup and transform files.

### 6.7.5 Photo book

Browse and set up your photos in photo list. You can select Check, Browse Mode, and Send, Rename, Delete, Delete All Files, Sorting, Storage Path and other operations.

### 6.8 Organizer

#### 6.8.1 Calendar

#### 6.8.2 Calculator

You can use the phone to conduct simple calculation using the function.

In the calculator interface, press number key 0-9 and input the number to be calculated.

#### 6.8.3 File manager

Conduct the management on your files in the menu.

**Notes:** Video files, audio files and pictures should be saved in T-flash.

#### 6.8.4 Alarm

The phone can set up five alarm time. For each time, you can select whether to turn on alarm and set up the alarm time, alarm method and alarm cycle.

#### 6.8.5 Tasks

Display all the schedule arrangements today and in the

future. In the option menu, you can add new memo, browse, and edit, delete record, delete all, and send calendar and other operations. Please refer to Schedule for specific operations.

### 6.9 Scene Mode

The phone provides **Normal Mode, Conference Mode, Outdoor Mode, Indoor Mode, Earphone Mode and Bluetooth**

**mode** to conduct the default settings. When you insert the earphone, the phone will enter the earphone mode automatically.

- In the standby mode, press # to switch between Mute Mode and current mode.
- For each scene mode, you can enter personal settings and conduct the settings on the following options:

#### 6.9.1 Activate

Activate the mode you have set.

#### 6.9.2 Personal Settings

#### 6.10 Settings

##### 6.10.1 Pen Calibration

If the touch panel does not respond accurately on the phone, it should be calibrated touch panel.

##### 6.10.2 Phone Settings

Set up phone time, power on /power off timely, language, and other options.

##### 6.10.3 Network Settings

You can set up the network in the menu.

##### 6.10.4 Security Settings

In the menu, you can set up security and secrecy of the phone.

##### 6.10.5 Restore Factory Settings

After selecting the function, factory default settings of the phone will be restored. And need to input phone lock password, default password is "1122".

### 6.11 Services

#### WAP

Multi kinds of WAP Wireless Application Protocol

services are available e.g. : Banking, news, weather forecaster and airline timetable. These services are basically designed to the handset and maintaining by the service provider.

\*Some data, picture and tones download by using the WAP service can cost purchased from the ISP, more intensive payment items please check with the website.

### 7 Common Troubleshooting

If any problem occurred when using the phone, please solve the problem according to the following articles. If the problem still exists, please contact the distributors or designated maintenance personnel.

#### The phone can't turn on

- Press End until power-on menu is shown.
- Check electrical quantity of the battery.
- Check whether the battery is poor contact, remove the battery and install it again, and then power on.

#### The phone is not responded for several minutes

- Press End.
- Take out the battery and install again, and then power on again.

#### Phone menu is difficult to read

- Clean the screen.
- Enable the backlight.
- Please use the phone according to the suggested using conditions.

#### The phone will power off automatically

- Please check whether the END key is locked when it is not used.
- Check electrical quantity of the battery.
- Please check whether the backlight is on all the time.

#### The phone only can be used for a short time

- Please make sure to use screen saver.
- Please make sure that the phone is charged for enough time (at least three hours).
- After partial charging, battery indicator may not correct.

#### The phone can't be charged normally

• Please check whether the battery can be used; the battery performance will be reduced after being used for several years.

- Please charge the battery in normal condition.
- Please make sure the battery is installed.
- Please make sure to use the designated battery and charger.

#### The phone can't connect to network

- Please try again in another place.
- Please consult your network service provider and confirm the coverage area of network.
- Please consult your network service provider to confirm your SIM card is effective.
- Try to select network manually.
- Please try again later if network is too busy.

#### SIM card error

- Please make sure to insert SIM card correctly.
- Please consult your network service provider whether your SIM card is compatible 3V. Old 5V SIM card can't be used.
- Please make sure the crystal chip of SIM card is not polluted, damaged or scratched.

#### Can't dial out a call

- Please make sure to dial correct number and press Call.
- Please make sure the phone is connected to network, and network is not busy and available.
- Please make sure not outgoing call barring because of overdue payment.
- Please consult your network service provider about your registered conditions (rating, effectiveness of SIM card, and etc.).

- Please make sure that you don't set up outgoing call barring.
- Please check whether you have set up fixed dialing function.

#### Can't receive an incoming call

• Please make sure the phone is power on and connect to network (check whether the load is too heavy or no network).

- Please make sure not incoming call barring because of overdue payment.
- Please consult your network service provider about your registered conditions (rating, effectiveness of SIM card, and etc.).
- Please make sure that you don't set up call divert.
- Please make sure that you don't set up outgoing call barring.

#### Caller name is not show when receiving an incoming call

- Please consult your network service provider and check whether you have ordered the service.
- The phone has cancelled his /her phone number.

#### Sound quality is not so good during a call

- You can make an adjustment during a call.
- Check the wireless signal.

#### Can't use the functions in the manual

- Please consult your network service provider whether the registered contents include the service.
- Please check the function not need to use the accessory.

#### Can't dial out when selecting a number from phone book

- Please make sure the numbers recorded in the phone book are correct.
- Please make sure you have selected correct country code when dialing an international call.

#### Can't newly build a record in the phone book

- Please make sure your SIM card phone book is not full; otherwise, please delete some numbers or save the number in phone book of the phone, and vice versa.

#### My caller can't leave me a message in my voice inbox

- Please consult your network service provider whether they provide the service.

### Can't enter my voice inbox

- Please input correct voice inbox number in the voice inbox option of SMS.
  - Please try again later if the network is busy.
- #### Has input wrong PIN code for three times
- Please consult your network service provider to get PUK password.

#### Photo is too dark

- Please check whether you set up too low photo brightness.
- Whether the ambient light is too dark.

#### Photo is too blurred

- Whether the object being taken is in motion.
- Whether the phone is slightly shaking at the instant of pressing the shutter.

#### Distortion of the photo

- It is possible that the main body camera of the photo being taken is too close.

#### Can't Play Music

- Please check whether the phone supports the song format or not (such as MMF format).
- Please check whether the downloaded song has been deleted, but the song name is still saved in the file folder. You can update the playlist to confirm