


CORDLESS SCREWDRIVER

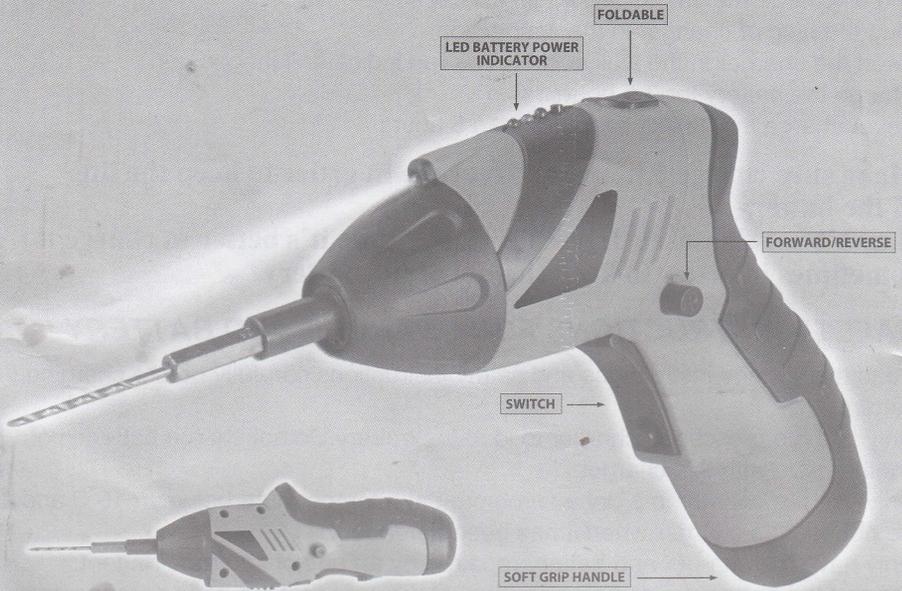

Model		Model(Li-ion)	
Battery	3.6V / 4.8V	Battery	3.6V / 7.2V
No Load Speed	180RPM	No Load Speed	180RPM
Torque	3N.m	Torque	4N.m / 5N.m
Charging Time	3-5Hrs	Charging Time	3-5Hrs
Foadable Angle	180°	Foadable Angle	180°

DESCRIPTION

Light weight construction.
Forward/reverse slide witch easy to change from screw-driving to screw-removal.
T-handle design for easier control.
LED battery power indicator.
Foldable 180°
LED light.

WARNING

Read this manual carefully before using the machine, for your own safety.

SAFETY INSTRUCTIONS

When using the machine,always observe the enclosed safety instructions as well as the additional safety instructions.

CHARGING THE BATTERY

The battery must be charged before first use. Only after several cycles of charge and discharge the battery will attain full capacity.

Plug the plug of charger in the connection.

Insert the charger in the wall socket. The red indicator light goes on.

Charge the battery for 3-5 hours.

Never charge the battery for more than 5 hours.

Make sure charge 5 hours at first time in order to keep the life of the battery.

If don't use the screwdriver for a long time, it's better to charge it sometimes in order to keep the life of the battery.

SAFETY INSTRUCTIONS FOR CHARGER AND BATTERY

Read the general instructions and safety instructions carefully before charging the battery.

Only use the prescribed charger to load the battery. Do not charge batteries of another type with this charger.

Only use the charger in a dry environment at a temperature between 10°C and 40°C.

Do not use the charger when it has been damaged.

Only have the charger and battery repaired by an authorized repair agent.

Prevent the battery from short circuiting. Make sure that the battery connections cannot touch metal objects.

Do not store the battery where the temperature may rise above 50°C, e.g. in a car which has been parked in the sun.

Do not burn the battery.

Never attempt to open the battery.

ELECTRICAL SAFETY

Check whether the voltage indicated on the type plate of the charger corresponds to the mains voltage.

INSERTING AND REMOVING A SCREW BIT

Insert the screw bit in the bit holder

In order to remove the screw bit, you pull it from the bit holder. If necessary, use a pair of pliers.

ENVIRONMENT

If your machine needs to be replaced after long time used. Do not put it in the domestic waste but dispose of it in an environmentally safe way.

BATTERIES

The unwanted batteries should be disposed of in an environmentally friendly way and in conformance with the local regulations.

Discharge the battery by letting the machine run at no load speed until the motor stops.

Hand in the battery as chemical waste with the recycling station in your municipality.