

Digital Photo Frame

Owner's Manual

Before connecting or adjusting this product please read these instructions completely. Please save this manual

Introduction

Thank you for purchasing your Keychain Digital Photo Frame. Please read this manual carefully first in order to get the most out of your device.

What your Digital photo Frame includes:

- Photo Frame
- USB cable
- User's Manual

Computer System Requirements:

To be able to download photos to your PC you will need the following minimum configuration:

- Windows 2K/XP/Vista
- Pentium-based PC (or equivalent)
- 150MB hard disk free space and 128MB or more RAM
- Available USB Interface
- Color display(16 bit or higher recommended)
- Screen resolution 1024x768

Preparing Your Device for USE

To charge battery for your photo frame
Your device has a built-in lithium battery .A red icon will flicker on the LCD screen when your Photo Frame battery is running low. After 10 seconds, your Photo Frame will automatically turn off. You can recharge your lithium battery by connecting your photo frame to the computer with the USB cable.

Starting Your Digital Photo Frame

Power on Your Photo Frame:

Press and hold the Power/Menu button for about 3 seconds to power on your Digital Photo Frame.Note:

Please make sure that your Photo frame has sufficient battery power in order to operate properly.

Power off your Photo Frame

When your Photo Frame is turned on, press and hold the power /Menu button for about 3seconds. On your LCD

screen the message"Power Off"will appear, and your Photo Frame will power off.
Viewing Different Photos on your Photo Frame

If multiple photos are loaded on your Photo Frame, you can press the Page Up or Page Down buttons to view the different photos on your LCD screen.

Exploring the Settings Options

To change or adjust any of the settings options for your Photo Frame, first power on your Photo Frame, and then press the power/Menu button. On your LCD screen, you will see the heading "Main Menu", followed by a list of settings that can be adjusted on your Photo Frame. Use the Page Up Button or Page Down button to scroll through the list of settings options. When the setting you wish to adjust is highlighted,

press the Power/Menu button to make adjustments. Your photo Frame features the following settings which can be adjusted:

1. USB CONNECT

A. Press the power/Menu button once.

B. Press the Page up or Page Down button repeatedly until USB CONNECT is highlighted.

C. Press the power/Menu button to make adjustments to the USB CONNECT setting.

USB CONNECT SETTINGS

Yes:When YES is selected, you can connect your Photo Frame to your computer in order to load photos on to your Photo Frame.

No:When NO is selected, your computer will not recognize your Photo Frame and you will not be able to load photos from your computer.

You can use the Page UP or Page Down buttons to highlight YES or NO. You can press the Power/Menu to enter this setting.

NOTE: The USB CONNECT option must be set to YES in order to load photos from your computer onto your photo frame.

2. CLOCK

B. Press the Page Up or Page Down button repeatedly until DISPLAY CLOCK is highlighted.

C. Press the Power/Menu button to turn on the DISPLAY CLOCK.

D. Press the Power/Menu button to make adjustments to the CLOCK setting.

By choosing the DISPLAY CLOCK option, your photo frame will display the date, time and day of the week instead of showing photos stored on your photo frame.By pressing the Power/Menu button, you can go back to

showing stored photos.

SET CLOCK

SET CLOCK SETTING

The SET CLOCK SETTING allows you to adjust the Display Clock so that it displays accurate time and date information.To do so ,press the page up button or page down button to choose the correct date or time

setting, and press the Power/Menu button to enter these settings.

CANCEL: CANCEL can choose to return to the next level

3. SLIDE SHOW

A. Press the Power/Menu button once.

B. Press the Page Up or Page Down button repeatedly until SLIDE SHOW is highlighted.

C. Press the Power/Menu button to make adjustments to the SLIDE SHOW setting.

SLIDE SHOW SETTING

ON:When ON is selected, The SLIDE SHOW SETTINGS allow you to choose the number of seconds that each of your photos will be displayed. You can choose anywhere between 01-15 seconds. Press the Page Up button repeatedly to toggle through the amount of seconds you'd like to select, and press the Powe/Menu button to enter the setting.

OFF:When OFF is selected, you will turn the side show off. Your Photo Frame will only display one photo without periodically switching to others.

CANCEL:CANCEL can choose to return to the next level.

4. AUTO SHUTDOWN

A. Press the Power /Menu button once.

B. Press the Page Up or Page Down button repeatedly until AUTO OFF is highlighted.

C. Press the Power/Menu button to make adjustments to the AUTO OFF

setting.

AUTO OFF SETTINGS

ON:when on is selected,The AUTO OFF SETTINGS allow you to choose the number of minutes until your

Photo Frame automatically shuts off in order to save battery power. You can choose anywhere between

01-30 minutes.Press the page up button repeatedly to toggle through the amount of minutes you'd like to select,

and press the power/menu button to enter the setting.

OFF:By selecting 0 seconds,your Photo Frame will not automatically turn off automatically.To turn it off, you

will have to manually turn off your Photo Frame..

CANCEL:CANCEL can choose to return to the next level.5.CONTRAST

A.Press the power/menu button once.

B.Press the Page Up or Page Down button repeatedly until CONTRAST is highlighted.

C.Press the power/menu button to make adjustments to the CONTRAST setting.

LCD CONTRAST SETTING

The CONTRAST SETTINGS allow you to adjust the amount of contrast shown on your LCD screen. You can

choose anywhere between levels 1(low contrast) and 6 (high contrast).Press the page up button repeatedly to

toggle through the amount of contrast you'd like to select, and press the power/menu button to enter the setting.6.BACKLIGHT

A.Press the power/menu button once.

B.Press the Page Up or Page Down button repeatedly until BACKLIGHT is highlighted.

C.Press the Power/Menu button to make adjustments to the BACKLIGHT setting.

BACKLIGHT SETTING

The BACKELIGHT SETTING allow you to adjust the strength of backlighting on your LCD screen. You can

choose anywhere between levels 1 (every dark) and 21(very bright).Press the

page up button repeatedly to toggle

through the amount of backlight you'd like to select,and press the Power/Menu button to enter the setting.7.DELETE

A.Press the Power/Menu button once.

B.Press the Page Up or Page Down buton repeadely until DELETE is highlighted.

C.Press the Power/Menu button to make adjustments to the DELETE ONE setting.

D.Press the Power/Menu button to make adjustments to the DELETE ALL setting.

DELETE ONE SETTINGS

YES:When YES is selected, the last photo that has been loaded on your photo Frame will be deleted.

NO:When NO is selected ,the last photo that has been loaded on your Photo Frame will not be deleted.

You can use the Page up or Page down buttons to highlight YES or NO. You can press the Power/Menu to enter this setting.

DELETE ALL SETTINGS

YES:when YES is selected, all photoes that have been loaded on you Photo Frame will be deleted.

NO:When no is selected, all photoes that have been loaded on your Photo Frame will not be deleted.

You can use the Page up or Page Down buttons to highlightYES or NO..You can press the Power/Menu to enter this setting.

CANCEL:CANCEL can choose return to the next level

8. OFF

A.Press the Power/Menu button once.

B.Press the Page up or Page Down button repeatedly until OFF is highlighted.

C.Press the Power/Menu button to select the Commissioner power OFF

9. EXIT

A. Press the Power/Menu button once.

B. Press the Page up or Page Down button repeatedly until EXIT is highlighted.

C. Press the Power/Menu button to EXIT the settings option menu.

LOADING PHOTOS FROM YOUR COMPUTER ONTO YOUR PHOTO FRAME.

In order to load photos from your computer, simply connect your Photo frame to your computer by inserting one end of the included USB connection cable to the USB port on your Photo Frame, and the other end to an available USB port on your computer. Make sure that you have the USB Connect setting on your Photo Frame selected. To do so .

USB CONNECT

A. Press the Power/Menu button once so that the Main Menu appears on your Photo Frame.

B. Press the Page up or Page Down button repeatedly until USB CONNECT is highlighted.

C. Press the Power/Menu button to make adjustments to the USB CONNECT setting.

USB CONNECT SETTINGS

YES: When YES is selected, you can connect your Photo Frame to your computer in order to load photos on to your Photo Frame.

NO: When NO is selected, your computer will not recognize your Photos Frame and you will not be able to load photos from your computer.

You can use the Page up or Page Down buttons to highlight YES or NO. You can press the Power/Menu to enter this setting.

NOTE: the USB CONNECT option must be set to YES in order to load photos from your computer onto your photo frame.

When your photo frame is connected to your computer, and the USB CONNECT option is properly set, the LCD Screen of your Photo frame will display USB CONNECT. USING DPFMaTe Software.

Once your photo Frame is connected to your computer, DPF Mate software will automatically start. No additional software disks are needed.

1. In the one left hand corner of the screen, there is a directory of files and folder on your computer. Find the picture file you would like to load onto your Photo Frame and left click on it with your mouse.

2. You can adjust the appearance of the Photo you have selected by clicking on the +(expand), -(contract), Rotatel.(rotate left). RotateR(Rotate right) or RECT buttons. The RECT button automatically resizes your photo so it will fit in your Photo frame.

3. Click on the ADD button to add the photo to the right hand column. All photos listed on the right hand column can be added to your Photo frame by clicking on the DOWNLOAD button.

In the upper right hand corner of the screen you also have options to SAVE (this saves a selected Photo from your Photo Frame to your computer), SAVEALL (this saves all photos on your Photo Frame to your computer.

EXIT) (this exits the DPF Mate Program). All (this highlights all the photos on your Photo Frame). And DELETE (this deletes any unwanted photos from your Photo Frame).

4. The setting button allows you to change the text color and background color seen on the LCD screen of your Photo Frame.

NOTE: Do not unplug your Photo Frame while photos are being transferred.

Digital Photo Frame Maintenance
Your Photo Frame is a instrument—please handle it with care.