

Table of Contents

Introduction 1

Getting Started 2

Installation and Setup 3

Operation 4

USER MANUAL

Maintenance 5

Troubleshooting 6

Specifications 7

Appendix 8

Index 9

Legal Notices 10

Warranty 11

Contact Us 12

Revision History 13

Copyright 14

Printed in the USA 15

100-000000-000000 16

Tab of Contents

Introducing your MID	2
Battery	2
SD card	2
Home screen and Application list	3
HDMI & Host	5
Language & keyboard	5
Manage Applications	6
Music	6
Photo	7
Video	8
Wi-Fi	8
Browser	9
Gmail	10
Maps	11
Market	12
YouTube	12
Recorder	13
Camera	13
GPS	16
3G (option)	17

Introducing your MID

Features:

Power key	Press and hold to power on/off the MID Short press to put the MID into sleep mode. press any key will awaken MID
Home key	Press to return to the Home screen from anywhere. Press and hold to rotate the Applications window
Menu key	Press to open a list of actions available on the current screen. Press and hold to see the menu shortcuts for that screen. The shortcuts will blink in place as you hold down the Menu key .
Back key	Press to go back to the previous screen or to dismiss a dialog box or menu.
Power switch	Slide to turn on/off the device power.

Battery


You can charge your MID via charger. MID has an internal charging battery. We suggest to charge up the battery when the battery power is low.

Charge via the charger

1. Plug in the Power adaptor to Power adaptor port of device, Battery charge LED will light up. Charging procedure will be completed once the LED turns green.
2. During battery charging, you can operate MID.
The charging time will be longer when operating and charging at same time.

Battery Status view

1. Touch **settings**. Touch **Advanced setting**.
2. Touch Battery information.

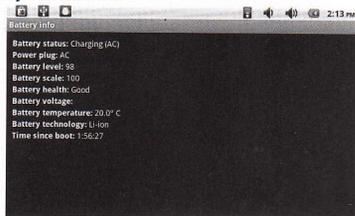

SD card

Your device comes with a removable microSD memory card where you can store multimedia files, such as video clips, music tracks, sound files, and images.

Copy files to the memory card

You can transfer files such as music and pictures between your MID and your computer.

To view files on your MID, just launch the appropriate application and navigate to the file within that application.

1. Connect your MID to your computer using the USB cable.
2. On the home screen, press the **Menu** key.
3. Touch **Notifications**, touch **USB connected**.
4. Touch **Turn on USB storage**.
5. On your computer, go to the **Removable Disk** folder.
6. Locate the files on the computer that you want to copy to your MID.
7. Copy and paste files to the desired location in the **Removable Disk** folder.

Delete files on the memory card

1. Locate the file that you want to delete.
2. Touch and hold the file name.
3. Touch **Delete**.

View available memory space

1. Touch **settings**, Touch **SD card & Device storage** to view available memory space for your memory card and MID.



Home screen and Application list

The Home screen is your starting point for using all the applications on your MID. You can customize your Home screen to display applications, shortcuts, and widgets.

To open the application list, tap on the Home screen.



Notification and connection icons


Along the top of your screen is the status bar. On the left side, icons will appear, notify you of new messages, upcoming calendar events, alarms, and more. On the right side of the status bar, you will see the connection status icons.

Read notifications

When you see a notification in the status bar, tap the bar and slide your finger down the screen to open the list of notifications.

To open the notification, tap the item.

To clear notifications, Touch **Clear** at the top of the notification window.

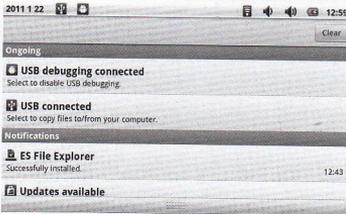

To close the notification window, slide your finger up the screen.

Icons of Status Bar:


	New e-mail message		Downloading
	Upcoming event		Content downloaded
	Song is playing		Alarm is set
	SD card is full		Data is syncing
	Battery change indicators		Wi-Fi service connected

	No SD card		Battery is charging
	USB connected		Wireless services are off
	warning		Silent mode
	Volume reduction		Volume increase

HDMI & Host

Using the HDMI output

1. Touch **settings**, touch **Display**.
2. Touch **HDMI**, select an output mode.
3. Press **Back**, Touch **Sound**.
4. Touch **HDMI switch** to open the sound of HDMI.
5. Connect your MID to your display using the HDMI cable.

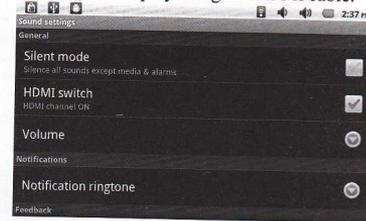

USB Host

USB host supports USB-mouse, USB-keyboard, 3G Modem and other peripherals.

Language & keyboard

Language


You can setting language for MID .To setting

1. Touch **settings**, touch **language & keyboard**.
2. Touch **Select language**.
3. Touch the language that you want to setting.

Keyboard

You can setting keyboard for MID .To setting

1. Touch **settings**, touch **language & keyboard**.
2. Touch the keyboard that you want to use.

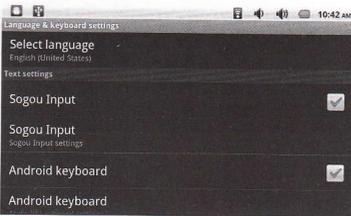

You can install other keyboard for MID


Manage Applications

Allow install of non-Market applications

1. Touch **settings**.
2. Touch **Applications**.
3. Touch **Unknown sources**.

Uninstall Application

1. Touch **settings**.
2. Touch **Applications**.
3. Touch **Manage applications**.
4. Touch the application that you want to Uninstall.
5. Touch **Uninstall**.
6. Touch **OK**, Touch **OK**.

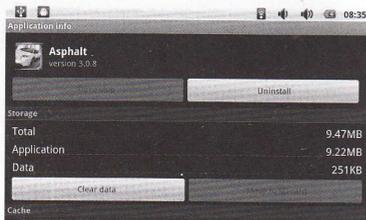

Music

Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Artists category, you will see a list of artists in A-Z order, the list opens to display that artist's albums. Select an album, and the album's song list displays.

Your MID will play the following music file formats:MP3,WMA,OGG, WAV, and MIDI.



Access and play music

1. On the home screen touch the **Application** button.
2. Touch **Music**, Touch **Songs**. You can also touch **Artists**, **Albums**, or **Playlists**.
3. Touch the song to play.

Add songs to new play list

2. On the home screen, touch the **Application** button.
3. Touch **Music**. Touch **Songs**.
4. Touch and hold the song that you want to add to the play list.
5. Touch **Add to playlist**.
6. Touch **New**.
7. Type the name for the play list.
8. Touch **Save**.

Delete play lists

1. On the home screen, touch the **Application** button.
2. Touch **Music**, touch **Playlist**.
3. Touch and hold the play list you want to delete.
4. Touch **Delete**

Photo

Your MID can play the photo file formats as follows:JPG、BMP、PNG、GIF. You can keep these files in SD card.

Slideshow the photos:

1. Copy the photo to SD card.
2. On the home screen touch the **Application** button.
3. Touch **Gallery**.
4. Touch the folder of photos. Touch the photo.
5. Touch **Slideshow**.



Video

Your MID can play the video file formats as follows:RMVB、RM、AVI、MP4、WMV、3GP、MPG. You can save these files on SD card.

Play a video:


1. Copy the video to SD card.
2. On the home screen touch the **Application** button.
3. Touch **UTPlay**.
4. Touch the video.



Wi-Fi

Your MID can connect to Wi-Fi networks. To connect

1. Touch **settings**, touch **wireless & networks**.
2. Touch **Wi-Fi** to turn it on. Touch **Wi-Fi settings**. Your MID scans for available Wi-Fi networks.
3. Touch the Wi-Fi network that you want to connect to.
4. Touch **Connect**. Some network may need you input the password.

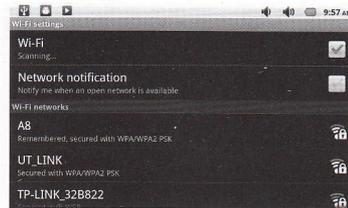

On the Wi-Fi settings screen, press the **Menu** key, touch **Advanced**, you will get more settings for Wi-Fi.

Browser

Go to your home page

The Browser always opens to the last Web page you were viewing. The first time you enter the Browser after powering on, your home page will display.

Change your home page

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **more**, touch **settings**, touch **Set home page**.
4. Type the site address and touch **OK**.



Visit Web pages

1. Touch **Browser**.
2. Press the **Menu** key.
3. Touch **address bar**.
4. Type the Web address, touch **Go**.




Need network connection

Gmail

With Gmail, all your messages on the same subject are threaded together into conversations. To read the messages in a conversation, open the conversation and scroll through the individual messages. The most recent message appears at the bottom.

All the Gmail that you fetch to your MID is delivered to your Inbox and the Inbox is your default Gmail view. The total number of unread messages displays in the title bar and individual unread messages display in bold. If you have labeled a message, its label appears in a colored rectangle to the left of the date.

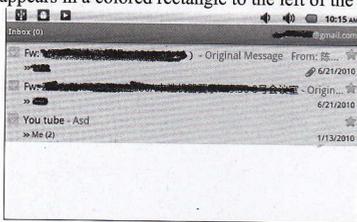


Read new messages

1. On the home screen, touch **Gmail** to display your inbox.
2. Touch a message to read.

Write new messages

1. On the Home screen, touch **Gmail** to display your Inbox.
2. Press the **Menu** key.
3. Touch **Compose**.
4. Type a name or e-mail address in the **To** field. Matching contacts will appear. Select the contact or continue typing.
5. Type the subject and message.
6. To attach pictures, press the **Menu** key and touch the picture to attach.
7. Touch **Send**.

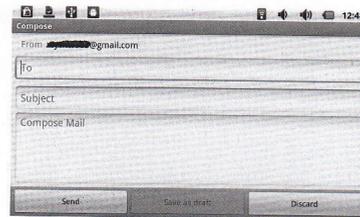

Need network connection


Maps

Find a location

1. On the Home screen, touch the **Application** button.
2. Touch **Maps**.
3. Press the **Menu** key.
4. Touch **Search**.
5. Type an address. Touch **Go**.
6. Touch to see the result on a map.

Get direction

1. On the Home screen, touch the **Application list** button.
2. Touch **Maps**.
3. Press the **Menu** key. Touch **Directions**.
4. At the **From** field, type your starting address, at to **To** field, type your destination address. Touch **Go**.

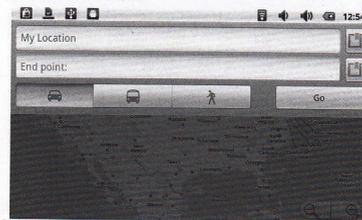

Change map mode

Maps gives you both map and satellite of the area you are viewing. To view satellite, traffic, or street view.

1. On the Home screen, touch the **Application** button.
2. Touch **Maps**.
3. Press the **Menu** key.
4. Touch **Map mode**.

5. Touch satellite, Traffic, or Street View.



Need network connection

Market

Market provides you with direct access to software developers throughout the world. It is the place to go find fun games and cool applications.

Browse contents

When you first enter Market, you will see featured items, a list of item categories, a link to search, and a link to My downloads.

Scroll through the featured items or select a category to browse its contents, then select a subcategory. Within each subcategory you can select to view items sorted By popularity or By date. Note that all items in a subcategory are listed in each tab, those in the By popularity tab are sorted most popular to least popular, and those in the By date tab are sorted newest to oldest.



YouTube

YouTube is a free online video streaming service that allows anyone to view and share videos that have been uploaded by the YouTube members. You do not need a YouTube account to browse and view videos.

Watch YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.

3. Touch the category and the video in that category.



Search for YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Press the **Menu** key.
4. Touch **Search**. Type your search.
5. Touch **Search**.

Recorder

A sound recording and playback:

1. On the Home screen, touch the **Application** button.
2. Touch **Sound Recorder**.
3. Touch **Record** and Touch **Stop** when the sound recording is completed.
4. Touch **Use this recording**.
5. On the Home screen, touch the **Application** button.
6. Touch **Music**.
7. Touch **Playlists**, touch **My recordings**.
8. Touch the recordings to play.



Camera

Shooting and playback a video:

1. On the Home screen, touch the **Application** button.
2. Touch **Camera**.
3. Drag the button to the **shooting mode**.

4. Touch **Shooting**. When finished recording press the **Stop**.
5. On the Home screen, touch the **Application** button.
6. Touch **Gallery**. And found this video just taken.
7. Touch the video and Select a video player to play.

Photo shoot

1. On the Home screen, touch the **Application** button.
2. Touch **Camera**.
3. Drag the button to the **photo mode**.
4. Touch **shooting**.



Product Specifications

CPU	Samsung V210,Cortex-A8,1GHz
3D Graphics	PowerVR SG×540
Storage	4GB/8GB/16GB option
OS	Android2.3/4.0
Memory	512MB DDR2
Touch	Capacitance Multi-Touch
WIFI	802.11b/g/n
Bluetooth	V2.1+EDR
3G	Built-in 3G Module(option), WCDMA/HSDPA,support calling、message、 Wifi ad hoc
GPS	Built-in GPS Module(option)
Camera	Front-0.3M,Rear-2M pixels
USB	USB Host 2.0,USB Device 2.0
SD	Up to 32G Micro SD
HDMI	1080P 30fps
Video codec	1080p Hardware decode:H263/H264/MPEG4/VC-1 Support video format: AVI/3GP/MP4/H264/WMV/WKV/MOV/FLV/VOB RMVB(480p)
Audio codec	MP3/WMA/WAV/AAC/AAC+/OGG
Photo	JPEG/PNG/BMP
Battery	4000AH/7.4v
Power	9V/1.5A adapter charging

GPS

Find this function

The interface into the system, through the power management window components,, open the GPS module power supply:



Pic 7.1 GPS Module power interface

2. Click "Program interface" → " "



Pic 7.2 GPS interface

Notice GPS Map Installation and use method, Please refer to kailide map data.

3G Calls and message

3G Setting Interface


Support 3G mobile version, Plug in SIM card, Can use mobile communication function, That call, message data communication, the Internet functions, etc.

Open 3G steps

1. SIM card slot will insert SIM card;
2. The interface into the system, through the power management window components, open 3G module power supply;

How to set up power management window components


Through "long press the interface→ widget→ power control" to add the parts.

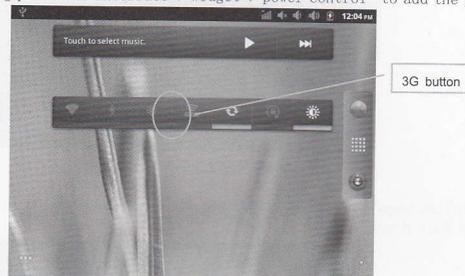

Pic 4.1 Power management widget

Mobile network Settings

Enter "Settings→ wireless and network→ mobile network Settings".

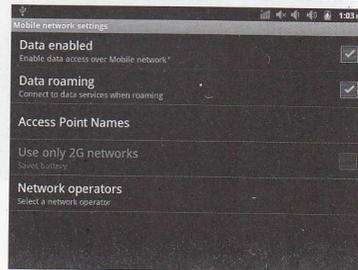


Pic 4.2 Mobile network Settings

Dialing and Call interface


Find this function Click "Program interface"  -> 

Through the application, can the speech communication, check call records, management the address book

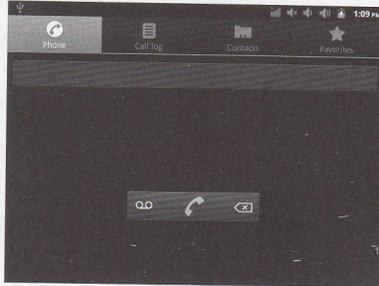

Pic 4.3 3G Call interface

In "dialing page" to dial, bluetooth calls, voice communication through and hang up and wait operation

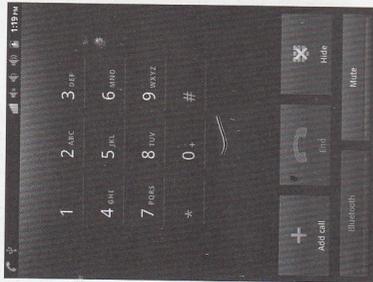

Pic 4.4 Dialing interface

In contacts interface, can be a contact management



Pic 4.5 Contacts manage