 


OWNER'S MANUAL
(T-2101)

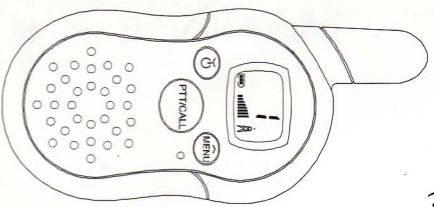

PLEASE READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE. KEEP FOR YOUR REFERENCE.

Operation

- BATTERY INSTALLATION:**
- Remove the belt clip by pulling the tab and sliding it up.
 - Pull the battery door lock tab down to release the battery cover. Insert 3 "AAA" batteries.
 - Replace battery cover. Snap the lock tab and belt clip back into place.
 - To use the radio, you must install 3 "AAA" size batteries.

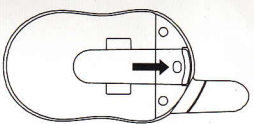 


Figure 1

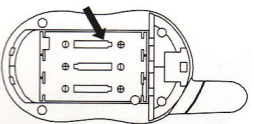 


Figure 2

 
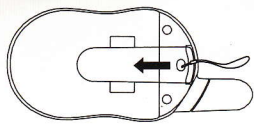 


Figure 3

- Turning the unit ON**
Press and hold the \odot button. The unit will beep and the LCD display will display the current channel.
- Turning the unit OFF**
Press and hold the \odot button. The unit will beep and the LCD display will turn blank.
- Adjusting the speaker volume**
- Press the \odot button to increase the speaker volume.
- The speaker volume level is indicated by the number of bars displayed in the lower left corner of the LCD display.
- RECEIVING COMMUNICATIONS:**
- When the FRS is switched on and not being used for speech or paging, it is always in the receiving mode.
- Pressing the TALK or Call buttons automatically overrides and turns off the receiving mode.
- Calling another radio**
- Turn the volume up to an audible level.
- Set both units to the same channel.
- Press TALK/CALL button double times to CALL. The other unit will make a 2 second call tone. They can then respond to your call by either:
- pressing the TALK/CALL button and speaking into the radio, or
- Press TALK/CALL button double times to CALL, which activates a 2 second call tone on your radio.

- Function description**
1. Batteries: Use 3 "AAA" size batteries.
 2. Belt clip: The belt clip is attached for easy use.
 3. LCD display: Displays current channel selection and other radio status symbols.
 4. Power/Down \odot button: Press and hold the \odot button to turn your unit on/off. Press the \odot button to decrease the speaker volume.
 5. MENU/UP \odot button: Press and hold the MENU button to Channel and function selector. Press the MENU button to increase the speaker volume.
 6. TALK/CALL button: Press TALK/CALL button to transmit. Press TALK/CALL button double times to CALL.

\odot	- Receiving icon, displayed when receiving a signal.
\odot	- Transmitting icon, displayed when transmitting a signal.
	- Display of current volume.
SCAN	- Displayed during the Channel Scan mode.
CK	- Keyboard is locked.
8888	- Display of the current battery level.
1	- Channel number.

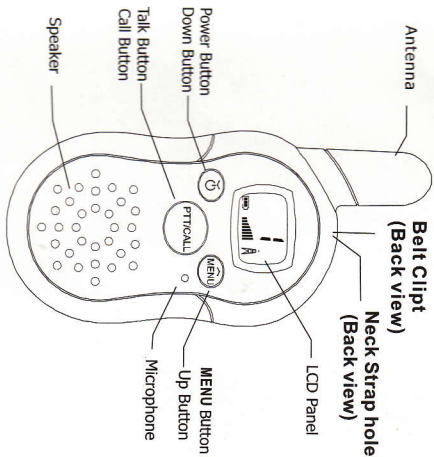

Operation

- Changing channels**
The COMMUNICATOR has multi-channels. To change channels:
1. Press and hold the MENU button until the current channel number and [ch] icon flash on the LCD display.
2. While the channel number is flashing:
- Press the MENU button to move to a higher channel.
- Press the \odot button to move to a lower channel.
3. Press and hold the MENU button to choose the desired channel and return to normal mode, or press the

AUTOMATIC SQUELCH:
The FRS is equipped with an automatic squelch circuitry filtering out weak transmission and unwanted noise, usually caused by terrain conditions.

MONITOR:
- This feature turns off the automatic squelch feature, either momentarily or continuously. It helps in receiving signals to its maximum range, but may pick up static signals, too.

Continuous monitor:
- Press the \odot and MENU button to the MONITOR melody option.

Press the \odot button MENU to increase the speaker volume. Press the TALK/CALL button to restore the automatic squelch.

CHANNEL SCAN:
- Your radio can scan across 8 channels allowing it to search other radios without changing channels. To scan:
- Press and hold the MENU button until the current channel

- number and [ch] icon flash on the LCD display.
- Press the TALK/CALL button to the SCAN melody option.
 - Press the MENU button to ON to activate the channel scan. The channel number will run rapidly on the display. When a signal is detected, the channel scan pauses keeping the active signal broadcasted.
 - Press the TALK/CALL button to communicate (the Channel Scan is deactivated). When the active signal is detected and another channel is desired, press the \odot button to search for another active channel.
 - To stop the scanning operation, press the TALK/CALL button again.

Low battery indicator
When the batteries need to be changed, the battery level icon will flash. To ensure uninterrupted communication, recharge or replace the batteries as soon as possible.

External Speaker/Microphone/Charger Jacks
Your FRS radio can be used with an optional external microphone and speaker, usually sold together in a ear bud/mic combination.

The jacks are located under the protective rubber cover on the top of the unit. To attach external speaker/microphone headsets or ear bud/mic. Lift the rubber flap on the top of the unit to expose the jacks. Insert the appropriate plugs into the correct jacks.

To charge the unit using AAA X 3 Battery, insert the round connector of the AC/DC adapter into the CHG JACK on top of the unit.

