

# FOUR CHANNEL WIRELESS RECEIVER



# Manual of four channel wireless receiver

Thank you for selecting this kind of wireless monitor receiver, in order to help you use the product better, please read the manual carefully.

## I. Basic specification :

Receiving frequency: 2.414GHz. 2.432GHz.

2.450GHz. 2.468GHz.

Video output: 75Ω/IVp-p

Audio output: 10KΩ/200mVp-p

Signal output: Can output two channels with  
the same audio and video signal

Power Adapter: DC 12V/500mA

Power consumption: <2W


Remote control distance: 6~8M

Working temperature: -10~50°C

Volume: 120 X 99 X 30mm

Weight: 150g

## II. Diagram:

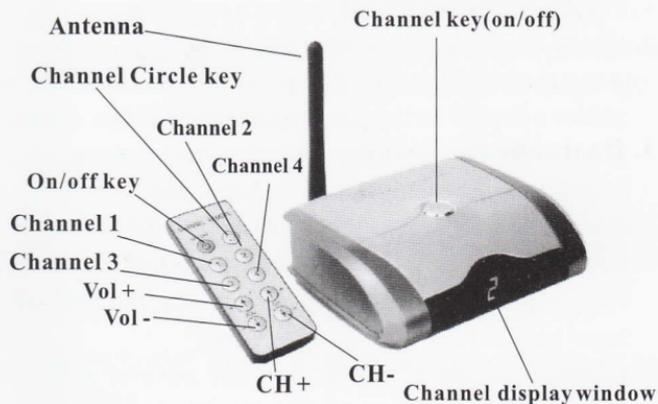

### III. Instructions of the function and operation:

1. Put the camera in the place where need to monitor.
2. Insert the input end of the power adapter in the AC normal voltage socket; insert the DC output plug of power adapter in the power input jack of the camera.
3. The distance between the cameras, the camera between the receiver should be kept about or over 2 meters, other-wise receiving will be interfered.
4. Use the AV cable to connect one channel of audio and video output of the receiver with the audio and video input plugs of the TV set or monitor.
5. Connect the DC 12V/500mA power adapter with the receiver and put through the circuit, the channel display window will show red light point.
6. Press the off/on key of the remote controller, or press the channel key of the receiver and open the power adapter of the receiver. The receiver will acquiesce the channel 1 after opening.
7. Press the channel key of remote controller(Number 1, 2, 3,4) in order to make the camera and receiver on the same channel,or press the channel key of the receiver in order to make the channel on the blue display window of receiver the same as the camera.

8. You can see the video and listen to the voice through the television or monitor, adjust the place of the camera, aim at the monitor object then can make the valid monitoring, can adjust the voice by "vol+", "vol-"key of the remote controller, can change the channel in turn by the "CH+", "CH-"key.
9. Press the ON/OFF key of the remote controller, or press the channel button on the receiver for 3 seconds to turn off the power of the receiver.

### IV. The familiar problems and solutions:

1. The indicator of the channel display window is not lighting.  
Check whether the socket of the power adapter works well or not, and make sure the power switch is on.
2. The receiver cannot receive picture or the received picture flashes.
  - Please check whether the wireless camera have already put connected with power.
  - Whether the distance between wireless camera and receiver is too far or whether there is electromagnetic shielding barrier between wireless camera and receiver (eg: Building of steel structure will make much hindrance for transmitting signal).

● Don't make two wireless cameras with the same frequency work at the same time, otherwise they will cause interference.

● When the transmitting cameras of different frequency work at the same time, the distance between the cameras should be kept about or over 2 meters, otherwise receiving will be interfered.

● If there are high-power transmission signals with the same frequency and car-mounted radio working around, they will cause interference to the receiver.

## V. Accessories:

- |                              |                 |
|------------------------------|-----------------|
| 1. Antenna                   | 1 pcs           |
| 2. AV Line                   | 2 pcs           |
| 3. DC12V/500mA Power adapter | 1 pcs           |
| 4. Manual                    | 1 pcs           |
| 5. Camera (2.4G)             | 1-4pcs optional |
| 6. Camera power adapter      | 1-4pcs optional |

## Warranty card

This card is an important evidence to receive our service, please keep it well.

- ① When used normally, the following services can be offered:  
A. Repair free of charge for functional disorder within 1 year.  
B. Service for all the life( only charge material cost and freight if the warranty date expires.)
- ② The following conditions are excluded for warranty service ( repairable if needed, but will charge material cost and repair charge.)  
A. Malfunctions or damages by incorrect installation or the using of the products exceeds the limited operating conditions.  
B. Malfunctions or damages by repair and any other misuse.  
C. Spare parts missed, artificial damages  
D. Unmatchable products.
- ③ Repair cycle

Excluding the shipping dates, the quality department will submit the examine report in one day on receipt of the products, the products on the quantity under 50 sets will be repaired in 3 days after customers signed back the test report.

Product name: \_\_\_\_\_

User's name: \_\_\_\_\_

User's address: \_\_\_\_\_

Tel: \_\_\_\_\_ Zip code: \_\_\_\_\_

Purchase date: \_\_\_\_\_

Invoice No.: \_\_\_\_\_

Distributor: \_\_\_\_\_

Contact person: \_\_\_\_\_ Tel: \_\_\_\_\_

Dealer:( Valid by sealed)