

 


WiFi
M10⁺



Product Features

- > A water-resistant casing that allows you to film fascinating water sports; water-resistant up to 30 meters under water
- > 1.5 inch Ultra HD screen
- > WIFI
- > Detachable battery that is easy to replace and prolongs your camera's service life
- > Vehicle-mounted recording
- > 12-megapixel HD wide-angle lens
- > HDMI HD output
- > Web camera
- > Support storage cards up to 32GB maximum
- > Multiple video recording formats: 2K 1080P 720P
- > Recorded in MP4 format
- > Multiple photo shooting modes: Single shot, Snapper
- > Video encryption enabled
- > AV video output
- > Mini appearance, diversified colors available

Product Diagram

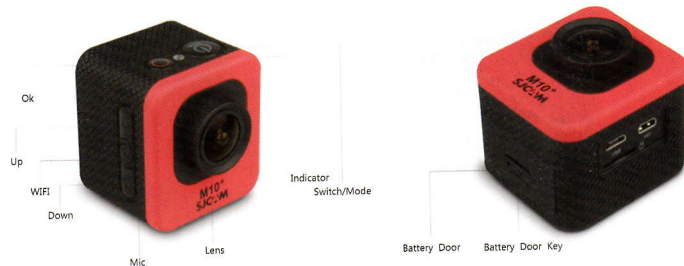

Waterproof Case Diagram

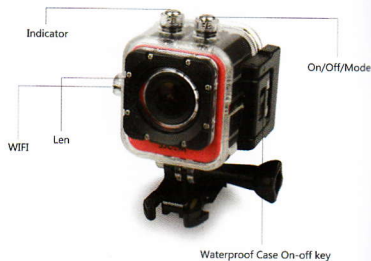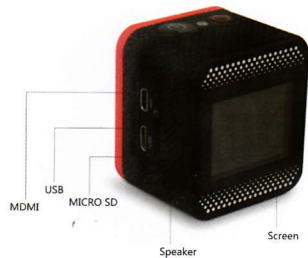  

Operating Instructions

1. Inserting Micro SD Card

Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.

2. Installing and removing batteries

- A Press on battery cap to open it.
- B Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- C Battery Gauge: Please refer to diagram.
- D Remove Battery: Open cap to take battery out.

3. Charging

- A Charging can be done by either connecting M10+ to computer power adaptor.
- B Charge M10+ on vehicle by connecting it to car charger.
- C M10 can record video while charging (Switch into Vehicle-mounted Mode in "Menu")
Charging of M10+ can be done even when it's powered off.

4. Vehicle mounted video record

- A Firstly set up menu, and search vehicle-mounted mode in the menu, then power on (it will automatically and circularly record video)
- B Plug in vehicle-mounted charger, and power on the vehicle, and the machine will automatically start. switch off, the machine will automatically power off.

5. Switching camera on and off

- A Press and hold power switch for 3 to 5 seconds to turn it on / off.
- B Switch it on and off by turning display screen on and off.


6. Mode Switching


Switch between video recording / photo shooting / playback / menu by pressing "Power On-Off" button.

 recording mode, while  photo shooting mode. Symbols are displayed on top of screen.  Refers to the function of video playback.

7. How to record videos and configure recording setting


- 1 Video Recording

Switch to recording mode and there'll be an  icon in the upper left corner of the screen. Press OK

to start recording and the  icon in the upper left corner will start to flash. Press "OK" again if you

want to stop and the  icon will disappear.

2 Photo shooting & Settings

Switch the camera on and press "Mode" to select "Photo shooting Mode", there'll be an  icon in the upper left corner of display screen and the camera is in photo shooting mode. Press "OK" to take photos.

Shooting Pattern: Single shot / Self-timer (3s/5s/10s) / Continuous Shooting

8. WI-FI connection

1. This product can connect a mobile phone with android or IOS system or a panel computer via WIFI, the operation steps are as following:
 - A. Install SJCAM ZONE software on a mobile phone or a panel computer (you can search and download on Google Play for android system, or search and download on APP Store for IOS system).
 - B. After power on, press WIFI key on the camera, WIFI icon displays on the screen, M10+WIFI WiFi displays.
 - C. Enable WIFI on a mobile phone or a panel computer, search WIFI account for the camera on IOS system, account: M10+wifi, and connect, the initial Password "12345678". WIFI account and password will display on screen, open APP of mobile on Adroid system, the account: M10+WIFI, then connect, and the initial Password "12345678" will display on screen.
 - D. When WIFI connected, WIFI Connection Ready displays on the screen,
 - E. After SJCAM ZONE software operates on a mobile phone or a panel computer, images recorded by the camera will be real-time displayed on a mobile phone or a panel computer. You can operate via related icons related to the software or set function parameters of the camera
2. WI-FI password change
 - A. Power on and enter WIFI setting menu, the password can be set as per your requirement.

9. File Storage & Playing

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you can take the Micro SD card out and access the image data with a card reader.

Note: Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

Liquid Crystal Display (LCD)	1.5LTIPS
Lens	170°A+ HD wide-angle lens
Language Options	English / German / French / Spanish / Italian
	Portuguese / Chinese Traditional / Chinese Simplified / Japanese / Russian
Resolution of Videos Recorded	2K (2560*1440) 30FPS 1080P (1920*1080) 60FPS 1080P (1920*1080) 30FPS 720P (1280*720) 120FPS 720P (1280*720) 60FPS 720P (1280*720) 30FPS
Video Format	MP4
Compressed Format of Videos	H.264
Resolution of Photos	12M/8M/5M
Storage	Micro SD
Shooting Mode	Single Shot / Self-timer (3s / 5s / 10s / Continuous Shooting
Frequency of Optical Source	50Hz/60Hz
USB Interface	USB2.0
Power Source Interface	5V1A
Video time after WIFI on	About 1080P 70 minutes
Video time after WIFI off	About 1080P 90 minutes
Battery Capacity	900MAH
Power Dissipation	500mA/4.2V
Recording Time	About 1080P/ 90 min.
Charging Time	About 3 hours
Operating System (OS)	Windows XP/VistaorAbove/Win7/Mac os
Dimension	48.1*43.3*43.4

Note: Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.

Optional accessory



Car Bracke



HDMI Line



Waist Bandage



Car Charger



TV Line



AV Line



Charger



Battery

Accessory Diagram



Waterproof Case



Bicycle Stand



Base 1



Base 2



Clip



Fixed Base



Switch Supprt 1



Switch Supprt 2



Switch Supprt 3



Adaper



Helmet Base
Bandage



Data Wire



3M Adhesive



Manual



Wiper