Power Case for Sony L39h

User Manual



*Please read this manual carefully before use


Specifications

' Item	Spec 144X74X13mm	
Dimension		
Input	DC5V-800mA	
Output	DC5V-1000mA	
Weight	81g	
Charging time	4hours	
Operationg	0℃-45℃	
Cell type	Polymer Lithium Battery	

Product Details:

- Designed for SONY L39h, Make your phone special style.
- ▶ Cell Capacity: Original Polymer Lithium battery, Power your phone standby time twice.
- Creative Design, Enjoy your phone without removing the power case.
- ▶ High class material to protect your phone, Charging and protecting 2in1.
- ▶ Integrated circuit design, effectively avoid short circuit or overtime charge even under extreme conditions of wrong operating.
- ▶ With smart switching and precise power display, to extend the life of the built-in battery

Instructions

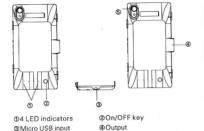

How to use

©Camera aperture



① Filt your phone connect with the Power case @ Then put your phone into the Power case

Accessories

1 Power Case 2. User manual

Operating Guide

▶ Charging the power case

Connect the phone Micro USB cable with the power case, then plug the USB to power adapter to charge the power case, when charging, the LED will flashing to indicate the capacity.

▶ Charging the Phone

Put the Phone into the power case, press the switch key on the back, When charging, the LED indicators are flashing, press again the switch key to stop charging.

▶ Charging both the Phone and power case 1.When charging the power case, put your Phone * into the case, press the switch key on the back, the Phone will be charged firstly, Press the switch key again to stop the Phone charging priority.

LEDIndicators

Canadity


Capacity	LED1	LED2	LED3	LED4	
< 25%	Flashing	OFF	OFF	OFF	
25% -50%	ON	Flashing	OFF	OFF	
50%-75%	ON	ON	Flashing	OFF	
75%-100%	ON	ON	ON	Flashing	
7070-10070	Charging the SONY L36h				
Capacity	LED1	LED2	LED3	LED4	
< 25%	Flashing	OFF	OFF	OFF	
25%-50%	ON	Flashing	OFF	OFF	
50% -75%	ON	ON	Flashing	OFF	
75% -100%	ON	ON	ON	Flashing	
	Not Cha	rging	. 1 115		
Capacity	LED1	LED2	LED3	LED4	
< 25%	ON	OFF	OFF	OFF	
25%-50%	ON	ON	· OFF	OFF	
50%-75%	ON	ON	ON	OFF	
75%-100%	ON	ON	· ON	ON	
The second livery as	Chargin	g both			
Capacity	LED1	LED2	LED3	LED4	
L39h priority	ON	OFF	OFF	OFF	

Charging the power case

 A [Caution]







■ Please use the proper charger or adapter for it, if have any deformities or corrosion, please stop using!

Warning: improper use may cause product damage and may harm yourself! keep it away from the child!