

User Manual



1. Introduction

Thank you for choosing our smart watch phone. Watch phone S99 comes with Android 5.1 system, which supports GSM network (850MHz, 900MHz, 1800MHz, 1900MHz) and 3G network WCDMA 850MHz/2100MHz. Basic functions of S99 are as follows:

- 1: Screen resolution: 240*240 pixels, oncell capacitive screen
- 2: Built-in GPS
- 3: MTK 6580 Quad-core chips
- 4: 5.0M HD camera
- 5: RAM: 512MB ROM: 4GB
- 6: GPRS, EDGE, HSDAP, HSDAP+, Bluetooth 4.0, WiFi, USB2.0

Note: For saving power consumption after using the watch, please deactivate GPS, WiFi and Bluetooth functions and return to the standby state.

2. Safety Warnings and Precautions

Please read these precautions carefully before using the watch phone to ensure proper use of it.

Please turn off the watch when you are in the plane, hospitals or other places where cell phones are prohibited to be used. Otherwise it will affect the normal operation of electronic equipments and medical instruments. Please comply with the relevant provisions of the workplaces when you use the watch in these places.

When approaching the places of fuel, chemicals, explosives, etc, please abide by the laws, regulations and related marks.

Please don't use the watch in the places with weak signal coverage or near high-precision electronic devices. Radio wave interference may cause malfunction of electronic devices and other problems. In particular, a special attention is needed in the vicinity of the following devices: hearing aids, pacemakers, medical electronic devices, fire detectors, automatic doors and other automatic control devices. For impacts on the equipment, please consult the device manufacturer or your local distributor.

Precautions to Use the Watch

Do not disassemble or modify the watch, otherwise it will cause damage or leakage to it. For disassembling it, please ask professionals for help. Non-professionals may not dismantle the machine.

Do not beat the touch screen or use it to beat other objects, otherwise it will cause liquid leakage or damage to LCD. LCD liquid into the eyes may cause blindness. Please rinse immediately your eyes if any liquid splashed into the eyes (do not rub them), and immediately ask the doctor for help.

 
Do not use needles or other sharp objects to touch any keys and touch screen, otherwise it will damage the watch or cause improper operation.

Please avoid the watch is close to any magnetic objects, e.g., magnetic card. Radiation waves of watch phone may remove the data stored on the floppy disks, stored value cards or credit cards.

Please ensure the watch is free from damp, water or other liquids which will cause short circuit, leakage or other defects to the watch.

3. Preparation before Using the Watch

A. Product Introduction

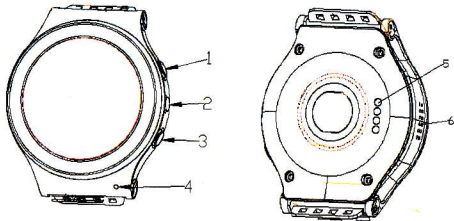

1.Switch On/Off; 2. Camera; 3. Return; 4.Microphone; 5.Charging pins; 6.Speaker
Magnetic adapter works for charging. USB cable connects power supply and magnetic adapter for charging.

 
B. Charging:

Magnetic adapter adsorbs the back shell of the watch. Please ensure contact pins on both the adapter and the back shell are well contacted. While charging when the watch is on, the power indication icon at the top right of the screen scrolls for charging status. While scroll stops, the watch is fully charged. Please unplug the cable; While charging when the watch is off, the power indication icon on the screen strolls, please remove the cable when stroll stops.

Note:

When the power is low, the watch will display a warning message. When the power is too low, the watch will automatically shut down. Do not leave the battery power in low state for long time, otherwise it would damage the battery.


Please use specified charger in order to ensure the watch works normally.

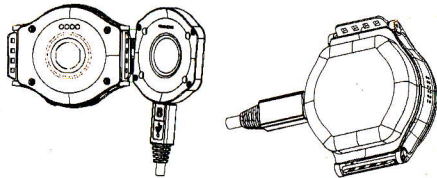

C. Insert the SIM card

Before installing the SIM card, power off the phone, open the screen and take off the battery cover and find the place of SIM card slot. Push the SIM card front part(same as the picture) to the sim card slot. Make sure the mental is downward, notice the notch orientation

 - Please make sure the kids can not touch it.
- Please be careful of the using way and don't buckle.
- Support GSM and 3G network.

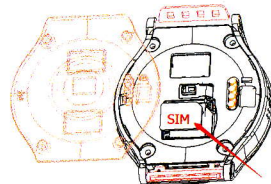


D. Power on/off and return button

Power on/off is located on the right side(same way as camera but up stair) of the watch, functions: 1 : Press 3 seconds and power on/off, press 10 seconds is reset function. 2: Short press return to main menu.

Down stair of the camera is the return button: short press return to last menu.

4. Analog Clock

 Short press power button to turn on/off the analog clock, slip the clock interface to enter the menu pages

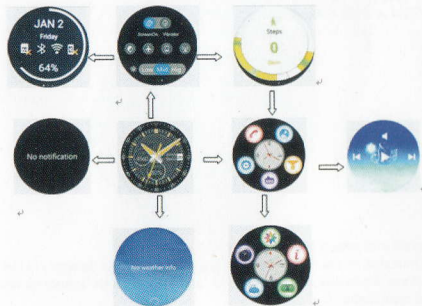

5. Shortcut key function



6. Function Menu

Slide the standby clock interface from right to left to into the main menu, then set the main menu display style, matrix or list or round, on the main menu slide up and down to the next menu.



PS: To save battery power, pls turn off the GPS WiFi Bluetooth when you don't need it, and return to standby.

 
7. Settings

7.1 Settings menu



Click to set menu

1. Sound: Set the sound volume and ringtone.
2. Display: Set the display brightness and sleep time.
3. App(Main menu) style: three kinds for option: matrix,list and round.
4. Connect: Bluetooth, Wi-Fi,Wi-Fi hotspot, Airplane mode, GPS and Cellular network.
5. Gesture: raise hand to light screen, turn on the pedometer option.
6. Power saving mode: default to power-saving mode
7. Language input method: many languages for option.
8. Date&time: Set time and date.

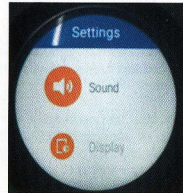

7.2 Other functions:

- | | | | |
|-----------------|------------|------------------|-------------------|
| ➤ Contact | ➤ Browser | ➤ Music | ➤ Reset equipment |
| ➤ Messaging | ➤ Calendar | ➤ Remote music | ➤ Health |
| ➤ Phone | ➤ Alarm | ➤ Sound Recorder | ➤ Weather |
| ➤ Settings | ➤ Gallery | ➤ File manager | |
| ➤ Remote Camera | ➤ Camera | ➤ Looking phone | |

8. Connect PC

Find"Setting"--"About equipment"--"Developer options", open" USB debugging", then use USB to connect with computer, watch will show "USB connected " reminder, user can use the watch as storage.

9. Common Troubleshooting

If any problems appeared when using the watch phone, please follow below solution ways.If theproblemsare still existed, please contact the distributor or appointed maintenance personnel.

The watch phone can not power on

- Press "on" button till startup screen
- Check the battery power
- No battery, please charge the watch then power on.

Using time is short

- Please make sure have not closed the screen savers
- Please make sure enough charging time(more than 3 hours)
- After charging parts of power, Battery level indicator might be inaccurate. Please wait about 20minutes to get the accurate indication after removing the battery charger.

Cannot connect the network

- Please try in another place
- Please confirm the net service place from your network supplier
- Please make sure your SIM card is effective from your network supplier
- Try to select the network by hand
- Please try it later if the network is busy.

Cannot dial the watch phone

- Please make sure the telephone NO. is correct and press the call button
- For the international call, please check the country code and area code.
- Please make sure the phone with net work and not in busy status
- Please make sure your Sim card have enough money and did not prohibit the calling
- To inquiry your register information from your network supplier (such as limit, SIM card validity and so on)
- Please make sure did not set the call limited
- Please check if set the fixed dialing

Music cannot be played

- Please check if the music format is supportable, such as MMF format
- Please check whether the download music file has been deleted, but music name still remains in this folder, you can update the play list to confirm.