


## Personal Micro Cinema

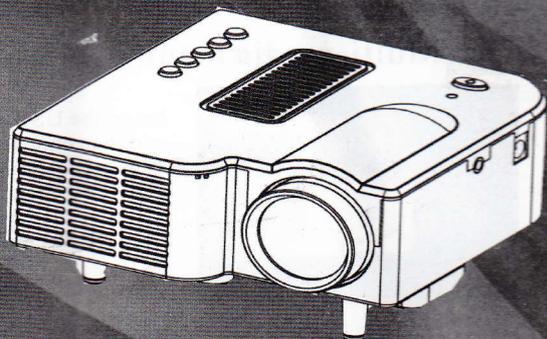

## User Manual

### Remarks

- ❖ Thanks you for your interest in this projector, please read this manual book carefully before using the projector.
- ❖ To ensure stable power supply, please use national standard power cable and power cord with grounding.
- ❖ Please use the power supply and power cable indicated on the projector or the manual.
- ❖ To protect your eyes, please do not look into the lens while the machine is working;
- ❖ While working, the projector should be kept away from cloth, sofa or any other material that could have stock the ventilation holes. And no flammable and explosion materials should be put around the projector.
- ❖ To prevent electric shock, the projector and power adaptor should be kept away from water as they have no water-proof function; no such apparatus as vase or cup should be put around the projector.
- ❖ The projector should be put in the place with good ventilation, dry and clean condition, and avoid vibration, heat and radiation.
- ❖ Please turn off the projector and cut off the power supply, if it will not been used for long time.
- ❖ If any trouble is found for the projector, please cut off the power supply first. Customer please does not dismantle the projector without authorization, or the company bears no obligation for free maintenance service.
- ❖ The projector might be different from description in the user manual because of the software update, please subject to the projector, use manual is for reference only.

## 1、 Product Feature

- ◇ The professional appearance design for ventilation has largely improved the stability and life time for the projector;
- ◇ The LED lamp can work for over 20 thousand hours, and can provide beautiful colors;
- ◇ Manual focus adjusting, get picture from 20 to 60 inches;
- ◇ Professional trouble shooting and protection measures;
- ◇ The projector is small and light, easy to carry with;
- ◇ Easy changing in 16:9 and 4:3 aspect ratio;
- ◇ Low power consumption, eco-oriented;
- ◇ Multi-function interface: AV, VGA, SD, USB;
- ◇ Vehicle power supply supported, easy to use;

## 2、 Fittings

User manual	1 pc
Power adaptor	1 pc
3 in 1 AV cable	1 pc
Remote control	1 pc

## 3、 Specifications

Model		Image system	LCD
Native Resolution	320*240	Supported resolution	1024*768
Lamp	LED	Input Voltage	12V
Language	English etc	Brightness	48 Lux
Contrast	300:1	Lens	F=125
Image size	20—80Inches	Projection distance	1.25-4.0m
Color	16770K	Projection mode	Front projection
Power waste	24W	Speaker	1.0W*2
Weight	0.38KG	Size	127*126*56.6mm
Operation mode	Manual remote control	Working Temp	-10-36℃
Output	Head phone	Input	AV/VGA/USB/SD




## 4、 Multi-media support files

File	Format	Sub-fix	Decoding
Audio files	WMA	.wma	
	MP3、	.mp3	
	M4A	.m4a	
Image files	JPEG、	.jpg	
	BMP、	.bmp	
	PNG	.png	
Video files	MPEG1、	.dat\mpg\mpeg	
	MPEG2、	.mpg	
	MPEG4、	.avi\mp4	DIVX,XVID
	RM、RMVB	.rm\rmvb	RV8\9\10
	H264	.mkv\mov	MPEG1,2,4
	MOV	.avi\mp4	
	MJPEG	.avi	
	FLV	.flv	H264
	VC1	.wmv\asf	vc1
	DivX、	.DIVX\AVI	MPEG,DIVX


### Remarks:

If you want to play any files that is not included in the above table, you might encounter troubles, and please transform the format first so as to make it play smoothly and normally.

## 5、 Product details

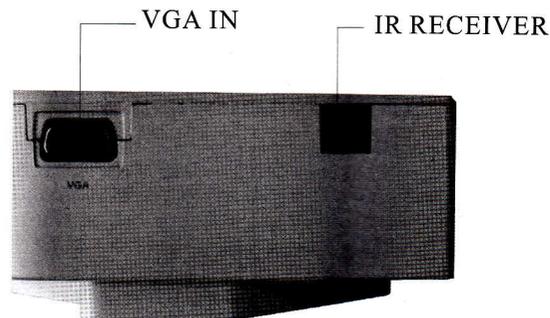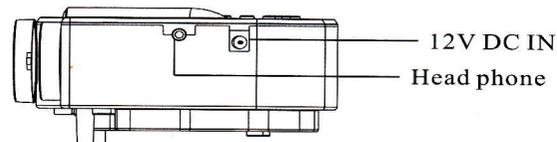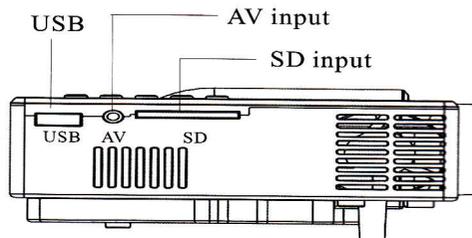


## 6、 Button function

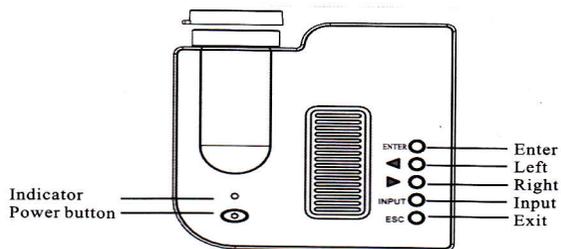


**Enter:** confirm the choosing item;  
**Left:** move left, up and volume down;  
**Right:** move right, down and volume up;  
**Input:** Choose the signal input source;  
**Esc:** exit the current menu or back;  
**Power button:** power on and off.

## 7、 Remote Button function

1. Power
2. Play/pause
3. Up,down  
left, right button
4. Confirm/ok
5. OSD menu
6. Exit
7. Forward/backward
8. Previous/next
9. Zoom
10. Previous page
11. Mute
12. Next page
13. Information
14. Volume adjust
15. Input source
16. Sound mode

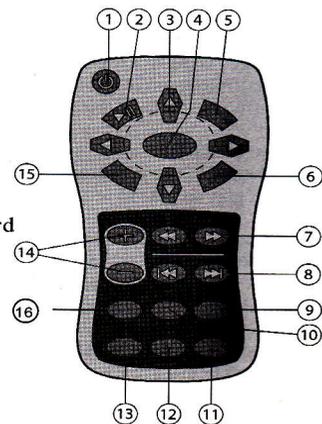

Li-battery is used for the remote control, for the installment, please see the attachment.

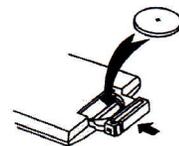

## 8、 Function operation

### 8.1、 Power on and off

**Stand-by status:** After the projector is power through adaptor, it goes into stand-by status, and the red indicate light flashes;

**Power on:** Press the power button once, the indicator light stops flash, the projector start works.

**Power off:** Press the power button once, the projector is off, and the indicate light starts flash.

### 8.2、 Focusing

Take the table of projection size and distance table for reference. Put the projector at a certain place within the distance scale, and then rotate the lens to make the picture clear.

#### Remarks:

While using the projector, please connect the power adaptor with the projector first, and then connect the power adaptor with the power.

## 8.3 Menu Operation

### 8.3.1 Input source selection



Press “source” button on the remote control or “input” on the projector to get the source menu, then press “OK” button on the remote control to confirm the input source you need.


### 8.3.2 Picture menu operation



Press “OSD Menu” to enter into the main menu and press “◀/▶” button to choose picture, then press up or down button to choose sub

-menu you need to adjust, the sub-menu you can adjust is Picture mode, color temperature, aspect ratio, noise reduction screen and horizontal flip.

### 8.3.3 Sound menu operation

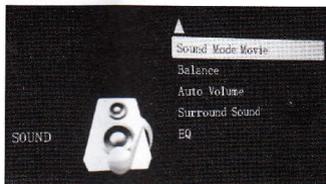

Press “OSD Menu” to enter into the main menu and press “◀/▶” button to choose sound, then press up or down button to choose sub menu you want to adjust.

The sub-menu for sound includes: sound mode, balance auto volume, surround sound EQ and SPDIF mode.

### 8.3.4 Time menu operation



Press “OSD Menu” to enter into the main menu and press “◀/▶” button to choose Time, then press up or down button to choose sub menu you want to adjust.

The sub-menu for time includes: Clock, off time, on time, sleep timer, and auto sleep.


### 8.3.5 Option menu operation



Press “OSD Menu” to enter into the main menu and press “◀/▶” button to choose sound, then press up or

down button to choose sub menu you want to adjust. The sub-menu you can adjust under option menu are: OSD language, software update, color range, blending OSD duration.

### 8.3.6 Multi-media menu operation

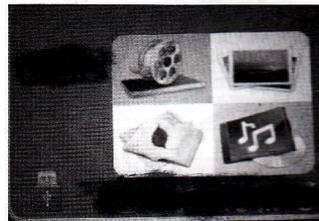

Insert the USB or SD first, and then choose Media from source menu. Then choose the icon for different files and press OK to confirm.

By this menu, you need to play video, photo and music correspondently with the icon showing.

Remarks: You can only insert the USB or SD on at a time, or the projector can not recognize any of them.

# 9、 Daily Maintenance

During use, you are required to perform some simple daily maintenance work to keep the projector in good status. And this simple job is to keep the lens clean, but do not dismantle any parts of the projector.

But you need to note that:

- A Its' much better to use professional lens cleaning cloth, or air gun to get rid of the dust on the surface of the lens.
- B If any dirt port is found, please get rid of it by using the lens cleaning paper or wet soft cloth to get rid of it. Please note that you need to clean them gentle, do not use abrasive substance to rub the surface of the lens.
- C Please do not use wax, ethyl alcohol, benzene, diluent or any other chemical cleaning material, because they are harmful to the case of the projector

If the projector will not be used for a long time, please do not forget:

- A Store the projector in the place with temperature of-10-60 c<sup>0</sup>
- B Take out the battery in the remote control,
- C Use the original packing.

# 10、 Trouble Shooting

Any trouble encountered during use, refer to the table below

Trouble	Cauese	Solution
No power	<ol style="list-style-type: none"><li>1、 The power switch on the bottom of the projector is not turned on;</li><li>2、 The power cable is not well connected;</li><li>3、 The outlet short.</li></ol>	<ol style="list-style-type: none"><li>1、 Switch on the power;</li><li>2、 Reconnect the power cable;</li><li>3、 Use a new outlet.</li></ol>
No image	<ol style="list-style-type: none"><li>1、 Signal soure turned off;</li><li>2、 Projector is not connected with the input source;</li><li>3、 Choose the wrong input signal source.</li></ol>	<ol style="list-style-type: none"><li>1、 Turn on signal source</li><li>2、 Reconnect the input source;</li><li>3、 Change signal source.</li></ol>
No sound	The volume is set on the min one.	Add volume
Vague image	The projector is not focused rightly	Adjust focus until image is clear
remote control no use	<ol style="list-style-type: none"><li>1、 No battery in remote control</li><li>2、 Battery is used off</li><li>3、 distance is too far or not rightly operated</li></ol>	<ol style="list-style-type: none"><li>1、 Add battery .</li><li>2、 Change new battery</li><li>3、 Please operate the remote control within one meter, and with the remote control point to the IR receiver.</li></ol>

If after all the steps above, you still can not solve this problem, please contact with the distributor.