


Restriction Content Logo for Electronic Information Products is the only valid logo for reference to do not use in strict industry standard to mark my products, so the logo indicates the environmental protection use period for the electronic information products. The logo is only valid for the electronic products, and the right indicates the environmental protection use period for the electronic information products. This logo is only valid for the electronic products, and the right indicates the environmental protection use period for the electronic products, and can be used solely during the electronic protection use period. This logo also signifies that the products should be recycled immediately after the environmental protection use period.					
Component name and type					
Circuit board assembly	X	RoHS	REACH	WEEE	MSDS
Horn	X	RoHS	REACH	WEEE	MSDS
Injection molded parts	X	RoHS	REACH	WEEE	MSDS
Alloy parts	X	RoHS	REACH	WEEE	MSDS
Power cord	X	RoHS	REACH	WEEE	MSDS
Packaging material	X	RoHS	REACH	WEEE	MSDS

Said the toxic and harmful substances in the components of all homogeneous materials in the content of the SJ/T 11363-2006 standard limits for the following substances. Indicates that this toxic or harmful substance contained in at least one of the homogeneous materials used limit requirement in SJ/T 11363-2006. Note: the environmental protection use period depends on the working temperature, humidity and etc.

## 1. Install battery and SD card

1. Open the battery case
2. Put SD card in

3. Close the battery case

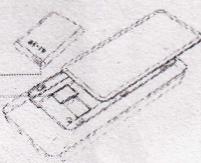

## 2. Key functions



Top view

K230 Value has not been configured to SD card and FM

1. Mode: Long press to power on/off, shortly press the mode key to switch between SD/ Bluetooth/ Auxin/ FM
- 2.\*Under SD mode, shortly press to switch between play and pause.
- \*Under FM mode, long press till orange LED light shines, when the light off means the auto searching finished.
- \*Under Auxin mode, shortly press to switch between play and pause
- \*Under Bluetooth mode, shortly press to switch between play and pause, when connect with mobile phone, if there is phone call in, shortly press to make a hand free answer, again to phone off, and twice to recall the last phone number

## 3. Key instruction:



Top view

- 1.“-” key: Long press to turn down the volume, and shortly press to last song
- 2.“+” key: Long press to turn up the volume, and shortly press to next song

## 4. LED Instructions




front view

### LED light

1. Orange LED means power on, and when play SD card, this LED light shines
2. Blue LED index the Bluetooth
3. Red LED light index the battery recharge, when recharging, it will shines, and when the battery is full, it is off

## 5. Bluetooth connection

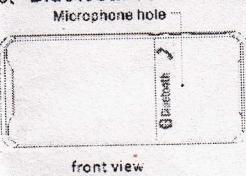

front view

- 1.The 1<sup>st</sup> time when connect Bluetooth, open the Bluetooth device like mobile phone, Tablet, PC, laptop, open its Bluetooth and search for Bluetooth signal, when it find the Bluetooth speaker, click match to finish connection, key in “0000” as default password if necessary, and after that user may play music and audio via Bluetooth speaker.
- 2.If connect with mobile phone, hand free phone call is available
- 3.When connect with laptop, also it is hand free when use instant message like MSN, Skype, IC


## 6. Aux (external voice)



Side view

1. Connect with laptop, mobile phone, MP3 player via 3.5mm hole as the image shows

## 7. Enjoy music with earphone

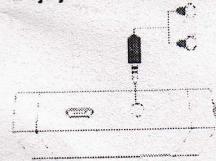

Side view

1. Insert the earphone to the Bluetooth's 3.5mm hole as the image shows, and user can enjoy music and FM radio

© KORE MATERIALS CO., LTD. All rights reserved to SD card and FM

## 8. Recharge



Side view

1. Connect laptop and mobile phone's adaptor with USB cable to recharge for the Bluetooth, notice that the output is 5V/ 500mA-1A

## 9. Trouble shooting, it is for reference only, if the trouble cannot be solved, please contact supplier for help.

### 1. No voice

- 1) Check the power key
- 2) Check if the battery is properly inserted
- 3) Check if the battery is full
- 4) Check the SD card
- 5) Check the line in

### 2. The voice is not so good

- 1) Check the USB cable and battery, make sure the power is enough
- 2) Check all the cables to make sure it is tight enough
- 3) The Bluetooth speaker's default power is 3.7V, the voice may change if 5V used

## Safety guide

To ensure safety, please read and comply with the following safety rules:

- Any edge of the cutting, non-smooth surfaces, metal parts, accessories or packaging are probably to cause bleeding or injury accident, must be used with care.
- This circuit can not be eaten, placed in children can not reach the place in order to avoid accidents.
- Do not modify, repair or remove this product, improper handling may cause electrical short circuit, damage or even a fire. Unauthorized operation or alteration of the product will void warranty service.
- Do not use any cleaners or liquid to clean the speaker surface, only use a dry cloth to clean.
- Inappropriate control the speaker volume (Such as "maximum" volume), the volume probably to influence the effect of the speaker, or damage to the speaker.
- Please avoid falling, collision or excessive pressure.
- Do not use this product in a dangerous environment. Special working environment such as laboratory might be used suitable environmental.
- Any anomalies in using period please stop using the product immediately.
- Disposed of in open flame or high temperature environment could cause an explosion.