WIRELESS

7"LCD WIRELESS VIDEO DOOR PHONE

Menu



Operation)

- 1. press to enter the menu settings
- 2. press 🛕 🔻 to select the item, pressok to enter this project
- 3. press ▲ ▼ to choose to set the project, press OK to confirm
- 4. press Esc to exit Setup

PAIR) Camera







- 1. press to enter the menu settings
- 2. press \blacktriangle \blacktriangledown to select the item, press \bullet K to enter this project
- 3. press ▲ ▼ to choose to set the camera, press ok to confirm
- 4. press pair switch on the camera


Unlock

Press the camera and the Unlock button at the same time

WIRELESS

7"LCD WIRELESS VIDEO DOOR PHONE

Wireless Unlock

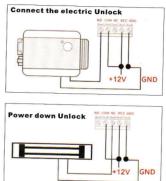



Packing List)

Nuber	Name	Quantity	Unit
1 -	Receiver	1	Piece
2	Camera	1	Piece
3 -	Adapter	2	Piece
4	Manual	1	Piece
5	Unlock	1	Piece
6	Bracket	1	Piece



See, hear, Unlock, REC, Talk to visitors













 












RoHS (FC &

WIRELESS

7"LCD WIRELESS VIDEO DOOR PHONE

Feature

- •2.4GHz launch frequency, Approx 300 meters barrier free remote control distance, robust anti-interference.
- ·Simple installation, no video cable required
- •Total digital wireless, no interferences, no privacy leak
- ·Wireless Unlock
- •7" TFT color display.0.3Mega pixel camera.
- ·Support up to 32GB TF card
- ·Motion detection Automatic video recording
- ·Rain shield for the outdoor camera.
- •3m night vision range
- •Surveillance, hands-free call and talk.

