

Quick User Guide



About Tablet

Thank you for using MeeGoPad tablet pc. This portable device is designed to take
advantage of micro-mobility and direct interaction through touch input and wireless
connectivity (Wi-Fi/Bluetooth) to provide distinct and different experiences for study,
entertainment, business and office job. The device support 3G wireless
network(option), GPS, windows8 OS and Magnetic suction keyboard. It is also a
laptop when you want it.

Package Contents

 Your package contains Tablet X 1

Accessories:

AC Power Adapter X 1

OTG cable X 1

User Guide X 1

Warranty Card X 1

Ultrastick 3G X1 (option)

Magnetic suction keyboard X 1 (option)

If anything is missing or appears to be damaged, please contact with vendor and keep the whole package for further transportation use.



Interface Introduction







Use your tablet

- Power On Press and hold the Power button on the top left side of the tablet.
- Power Off /Restart
- Swipe in from the right edge of your screen or the keyboard shortcut start menu + c to open the charms
 Go to Settings>Power>Shut Down /Restart to turn off / Restart the tablet
- 3. Press 10seconds of power key till shut down option display, then slip screen according to the prompt to shut down tablet
- Wake up: 1.Press power key Or 2. Touch Windows key
 - Language Format Change

Go to settings>Control Panel>Region>Formats>Select the desired language in "Format"

Functions

- Built in Dual Camera Online Video, take pictures/videos
- Webcam Light When webcam turn on the light will turn on
- Light Sensor Detect environmental light and adjust screen brightness automatically
- Multitouch Capacity Touch Use fingers or touch pen touch screen to realize the system and control applications
- Windows 8 Touch Key Touch the key to Home Page, or back to the last application
- MINI HDMI Port connect Mini HDMI to HDMI cable to connect with HD multi-media device
- Micro USB Port Connect OTG cable, support keyboard, webcam, USB Driver, usb driver, printer, Scanner etc
- Speaker Audio Jack Microphone
 DC in/out Use AC adapter to charge tablet
- DC In/out Use AC adapter to charge table
 Micro SD Slot Support 64G Micro SD card
- · Power Key (With charge light)

Long time press power on/off button turn off tablet (This way only when tablet in "dead" situation)
When tablet is on, short press the power key can enter sleep model or wake up from sleep model

- Volume key +Enlarge /-Reduce Volume
- Battery charging light Blue=full charged Red=Charging
 Built in GPS Need Match Maps
- 3G Module slot Support Huawei UltraStick 3G Module (option)
- Magnetic keyboard Support Magnetic suction keyboard (option)

The tablet should be charged

at least one time every 3months, otherwise the battery life will be shorted..



Main Specification

CPU: Intel Bay Trail Quad Core

GPU: Intel HD Graphic(Gen7)

Memory: DDR3 L 2G

EMMC Storage: 64G

Micro SD: Support 64G

Touch Screen: 10.1inch capacity 10point touch
Display: 1280X800 IPS HD screen

Webcam: Dual 2M Pixels front/rear camera

Network: Dual Band WiFi 802.11ahipin Bluetooth 4.0

Support built in Ultrastick 36 (notion)

Others: GPS, G-Sensor, Light Sensor

OS: Support Windows8

Video: Support 1080P HD format.



Notice!

- Tablet PC should be used often. At least Charge one time every 3months. Charge in time when it informs need to avoid battery life short.
- Please put the tablet computer away from strong magnetic field, strong magnetic field may lead to tablet computer damage.
- Don't let the computer fall, friction or impact with a hard object, or may lead to tablet surface grinding, hardware damage or software missing.
- Do not put the tablet exposed to a humid environment or rain and hot environment. If water or damp or subjected to high temperature, may lead to the failure of the equipment, even can't repair.
- Do not use chemical or detergent to clean the tablet computer, it will damage the surface and corrosive paint.
- It is recommended that you listen large volume invoice through Headset in long time, please set the volume to a safe right size, and control the use of time, in order to avoid your hearing impaired. If the volume is too large, may cause permanent hearing damage.
- During the software upgrade or programs upload and download don't power off suddenly, otherwise it may cause data loss or program error.
- · Prohibit use overload power, bend or extrusion power line with heavy weights, to avoid overheating or fire.
- · Prohibit use wet hands to touch tablet, to prevent electric shock
- Certain films, music, pictures may authorized with copyright, without permission to play these files will violate the copyright law.
- When using the wireless devices or equipment can cause interference or danger, please don't boot.
- All wireless devices may be susceptible to interference, which affects performance.
- Do not use tablet pc in the gas station. Do not use tablet pc in the vicinity of fuel or chemical products.
- · Only qualified technology may repair tablet computer
- Please use the original accessories. Do not use not matching products.

Thank you for using MEEGOPAD once again! If you have any questions, please contact your dealer.

- All specifications are subject to change without notice.
- MeeGoPad. All rights are reserved.

