



# MEEGOPAD PC STICK USER MANUAL



After Sales Service  
WhatsApp



 
MeeGopad  
WeChat



www.meeGOPad.cn  
www.x86pad.com  
+86-755-86645339



## Package Including



## Optional Accessories

1. HDMI Extension Cable (optional). Recommend to use when display is behind wall.
2. HDMI-VGA Adapter (optional). Recommend to use when display only VGA port.
3. Keyboard&Mouse Kit

## Notice

1. When the first time boot the device, need wait patiently (around 8minutes) till Meegopad PC Stick completely enter OS. Do not power off when the mini pc is running to boot OS, to avoid any system crash.
2. Before power off Meegopad PC Stick, please turn off all running programmers, and power off OS. Please do not unplug DC-Jack till LED of Meegopad PC Stick turn off.
3. If long time do not use the device, please pull out the power adapter.
4. Power adapter and USB cable must maintain good connection, avoid loosening, flint, voltage fluctuated.
5. Please avoid continuous use this computer equipment long time, avoid to affect the service life. Cut down the power connect when no use in serval hours.
6. Avoid long time not use the device (like 1-3 months).
7. Please put the device in ventilated environment, avoid covering.
8. Prevent the corrosion of vapor and prevent liquid, debris drop into the device.

## User Guide

1. Please connect the mini pc dongle HDMI port to TV (or other display, like projector, computer display) HDMI port, use a HDMI extension cable when direct connect not convient. And please change the 'signal source' to the HDMI port which connect with Meegopad PC Stick.
2. Sometimes display device only have VGA interface, then we need to use a HDMI-to-VGA adapter (with Audio output) to connect the display device.
3. USB power input. Make sure connect Micro USB port with power supply.



 
Some TV USB port also can supply power to Meegopad PC Stick. But please use original power adapter and power cable.

4. Support Wireless mouse&keyboard. Support Bluetooth keyboard&Mouse. Third party software also support to control MINI PC dongle by mobile.
5. Press power switch on Meegopad PC Stick to boot OS. The first time enter OS need 8minutes maybe, need wait patiently, do not power off or restart mini pc to avoid system crash.
6. Shut down Meegopad PC Stick in windows or press power on/off key to shut down the device according to display guide.



## Product Interface

1. HDMI Interface
2. TF card slot
3. USB 2.0x2 (Data)
4. Micro USB (power only)
5. Earphone Port
6. Power On/off switch

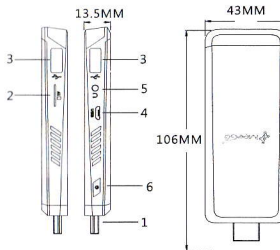

## Specification

CPU	Intel Atom™ Cherry Trail X5 z8300 Quad Core <input type="checkbox"/>
OS	Intel Atom™ Bay Trail Z3735F Quad Core <input checked="" type="checkbox"/> Support Windows 10
RAM	DDR3L 1333 2G <input checked="" type="checkbox"/> / 1600 2G <input type="checkbox"/> / 1600 4G <input type="checkbox"/>
Storage	32G eMMC
Extend Storage	Micro SD Slot, USB Device
Display	Through HDMI
Wireless	WiFi 802.11 B/G/N
USB port	USB 2.0*2 (for Data)
Bluetooth	Bluetooth 4.0
Power Supply	5V/2A
Input	Through Micro USB 2.0*1 (Power)
Fan	With Fan
Audio	Through HDMI port or Earphone Port

## Notice

1. The low power RF motor passed the authentication, unlicensed companies, businesses or Users are not allowed to change the frequency and increase the frequency or change the characteristics and functions of the original design.
2. Please do not change the onboard CMOS battery by unprofessional people. If customer change battery with wrong type, it will invite danger. Also need deal with the old battery well. otice



MEEGOPAD\* all rights reserved, prohibit copy  
www.meeGOPad.cn www.x86pad.com  
+86-755-86645339