 


Intel Tablet PC for Windows8.1

Quick Start Guide

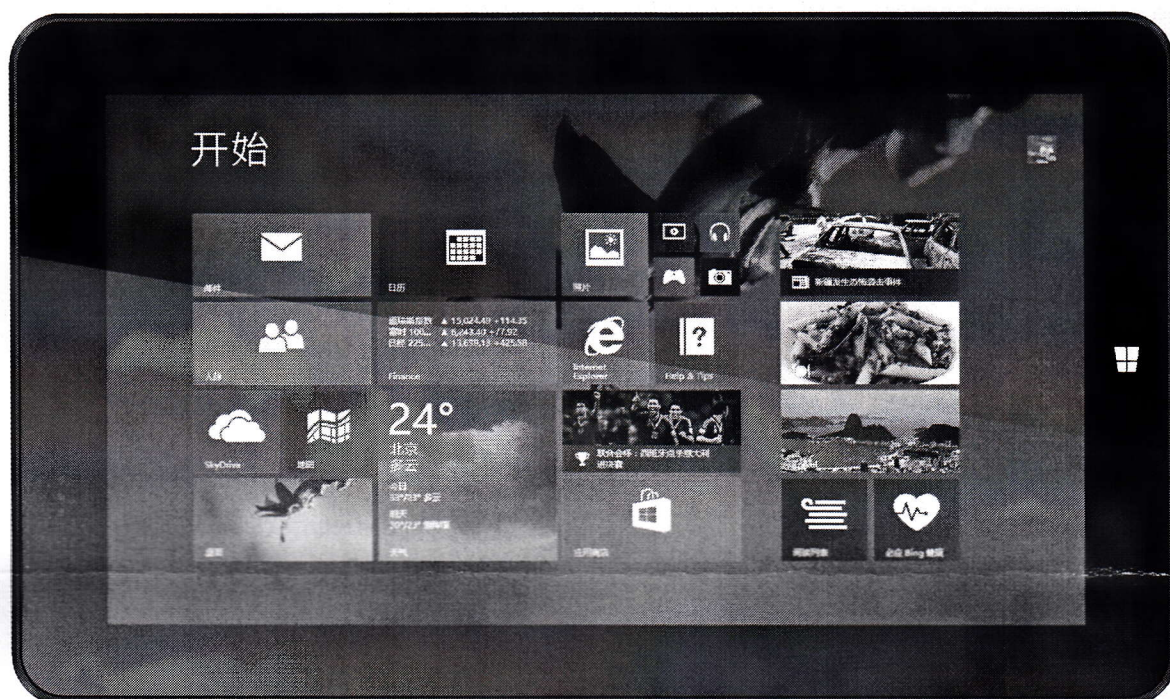

Introduction

Thank you for your choosing the new Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible.

Here we have made a brief introduction to the key layout and definitions in figures and words.

Attentions:

This manual includes important safety instructions and the information on how to use correctly, for avoid the accidents happening, so ensure you should read the manual before using the product.

- Please don't put the product on the places with high temperature, humidity or more dust.
- Please don't put the product on the places with high temperature, especially not put the products in a car with close windows in summer.

- Not fall off or knock this product strongly, not let IPS panel be shocked, otherwise it may cause IPS panel broken or display abnormal.

- Please choose the right sound volume, not too big when use earphone, if feel tinnitus, please turn down the volume or stop using.

- Please do the charge when meet below situations:

A. When the icon of battery capacity display no electricity.

B. System power off automatically, the unit will be power off fast after powering on again.

C. No response when press the power button.

- Please not open the link suddenly when the player is doing format or the unit is uploading or downloading, otherwise it will cause the procedure error.

- For the products broken, repair or other reasons caused the memory information lost, our company will be not responsible for this, please follow the manual to do operations.

 
- Please not tear down the unit, not use the alcohol, diluents or benzene to clear the products.

- Not use this unit in the forbidden area(such as airplane).

- Not use this unit when driving or walking, otherwise it will cause the accidents.

※ Our company will keep the right with products' improving, specifications and designs, and not do the notice.

1. Cosmetic and button instruction

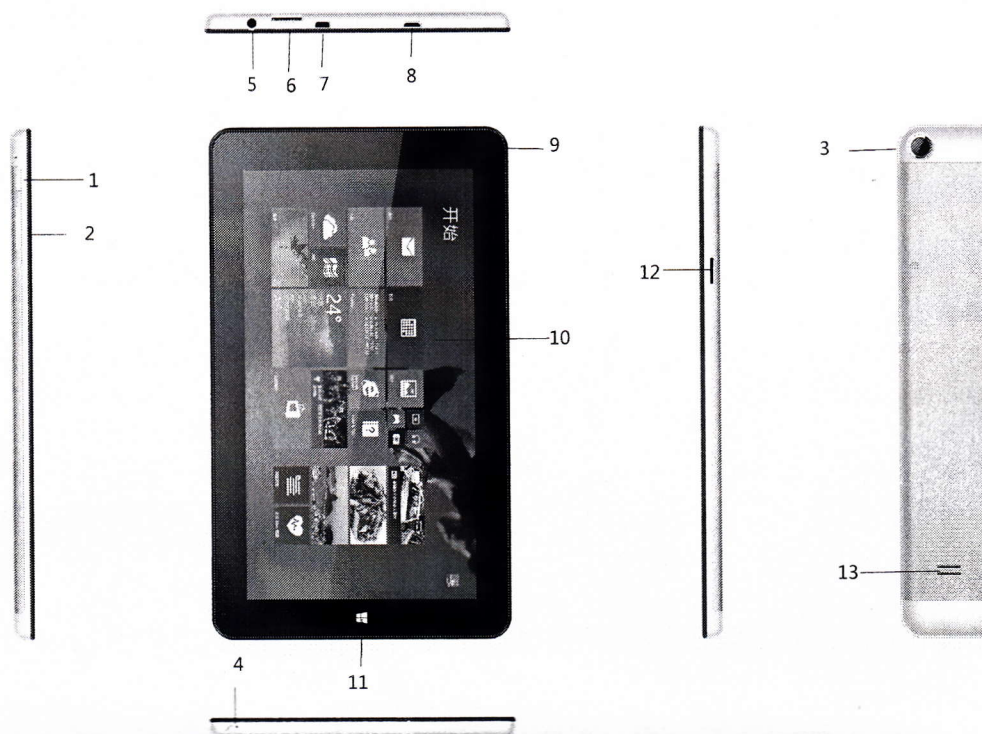

Number introduction as below:

1. Power button
 - ◆ Starting up with short press, or enter standby status, or wake up from standby.
 - ◆ Keeping press 4s to enter shut down interface, and keep pressing 10s to compel the unit shut down.
2. Volume button
 - ◆ volume up and down
3. Rear Camera
 - ◆ Rear camera can take a picture and video
4. Internal MIC
 - ◆ Using for video meeting, sound control and record.
5. Dual using jack with 3.5mm earphone and MIC
 - ◆ Can output the sound signals of computer to external speaker or earphone; also can link the external MIC.
6. Micro SD slot
 - ◆ Can support the card with Micro SD and Micro SD HC
7. HDMI
 - ◆ HDMI can exchange to external High-definition LCD
8. Micro USB

- ◆ Can connect the devices with USB keyboard, mouse and U disk...
- 9. Front camera
 - ◆ Take a picture or video for front
- 10. Touch panel
 - ◆ Can operate the unit by touching
- 11. Windows logo
 - ◆ Can back to original desktop
- 12. SIM slot
 - ◆ For inserting SIM card
- 13. Stereo speaker port
 - ◆ For output the external voice

2. Introduction to Desktop

 
1. Windows 8.1 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of "magnet". As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.




3. Image slide applications

Slide to right

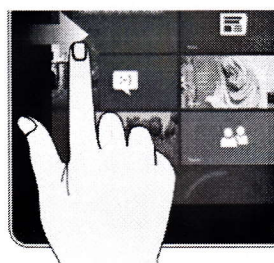


Slide to the right from the left side of the screen to start the application program in running.

 Slide to left

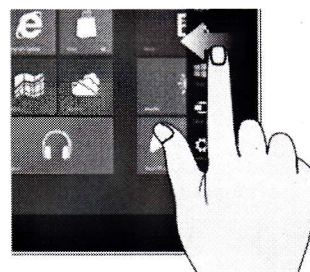


Slide to the left from the right side of the screen to start Charm menu column.

 Reduce

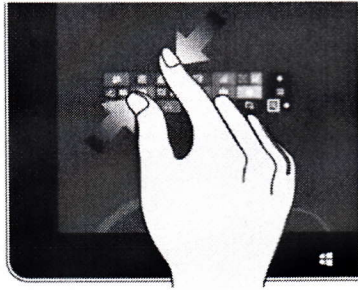


On the touch screen, narrow two fingers to reduce the image.

 Enlarge

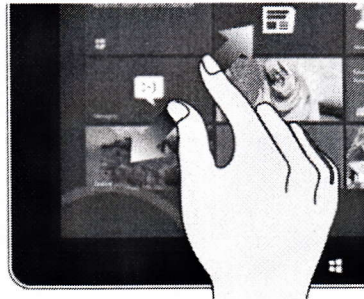


On the touch screen, widen two fingers to enlarge the image.

 Slide downward

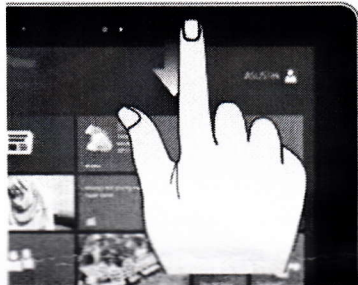


In start screen, slide from the top of the screen to view all application programs

 Slide with finger

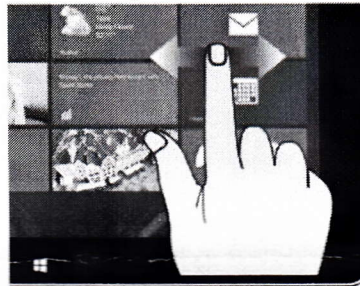

In start screen, slide finger right and left to move the image.

 Slide upward

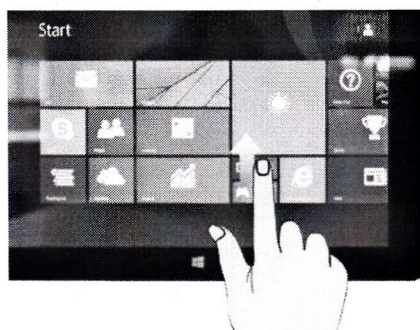


In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

4. Introduction to app Interface


Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.



 If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

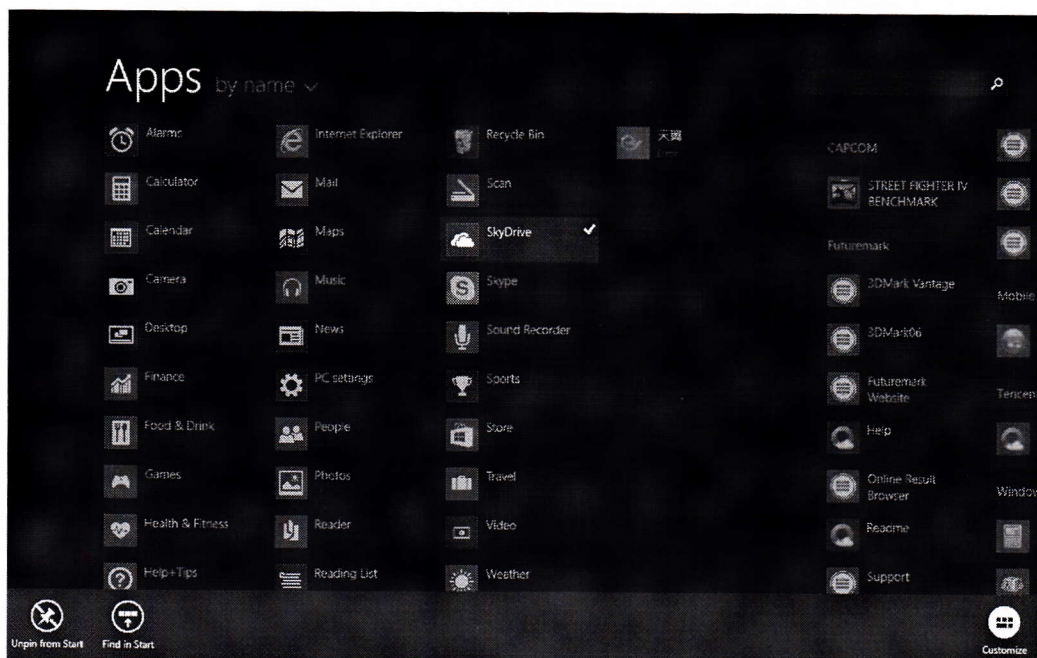

 Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

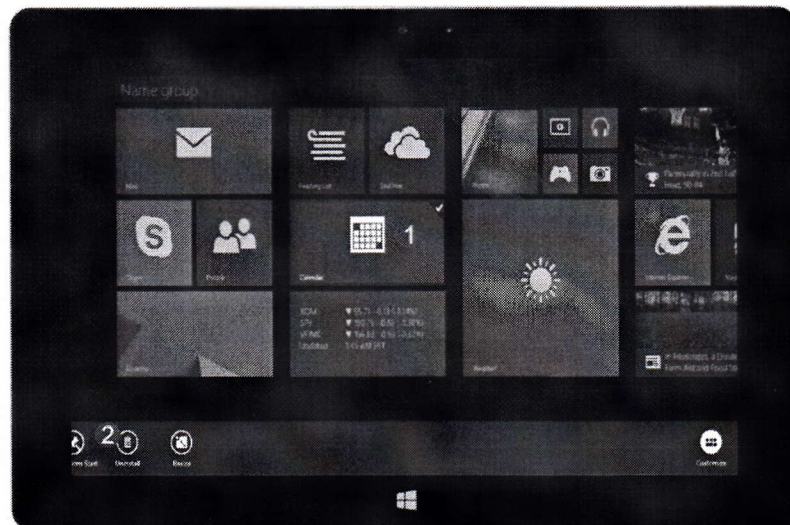

5. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Can let you search the files and application programs in the Tablet PC.



Can let you share the program through social exchange website or e-mail.



Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.



Can let you read, write and share files, connect external screen or printer with the device connected to the Tablet PC.



Can let you set up the Table PC.

Search menu



Share menu



Device Menu



Set up Menu




6. Dual-Screen Application

On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.

In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.



 
(Figure 1)

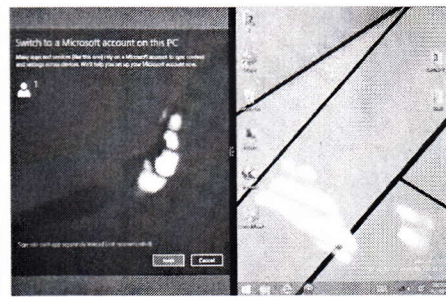

(Figure 2)


7. Basic Operations

 7.1. Dormancy, restart and power off

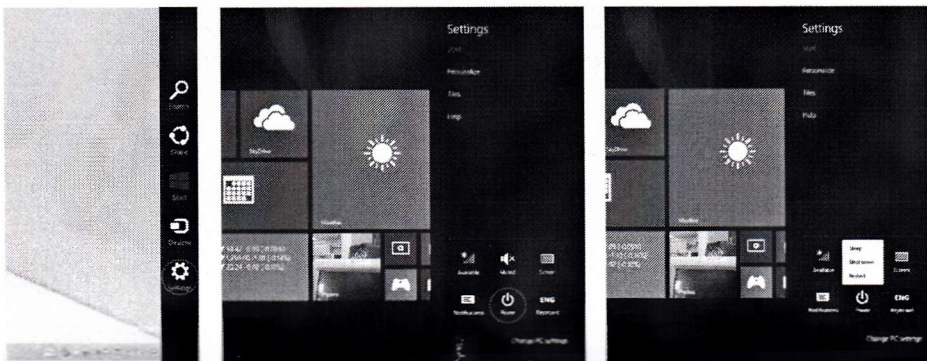

7.2. Security Management

 User and password setup

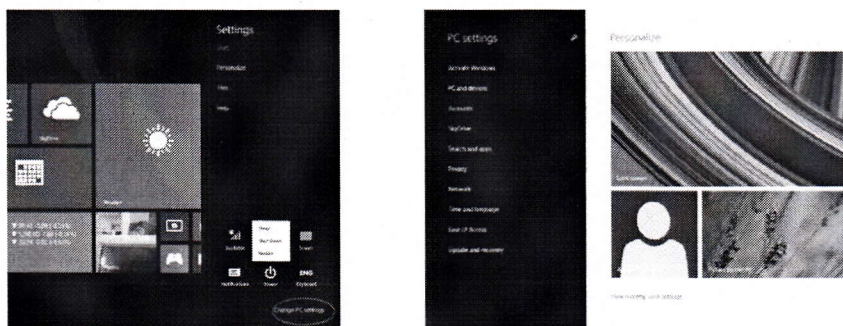

Method for quick setup:

Click the "Setup" button in "Charm" setup, and select "Change computer setup". Select "User" on the left and click "Create local account" in "Your account" on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.