

# **D1** User Manual

www.mysagamobile.com

# TABLE OF CONTENTS

1Safety and General Information		
1.1General Precautions		A series
1.1.1 Phone Precautions		7 4
1.1.2 Battery Safety Precautions		15. 9
1.1.3 Disposing of Used Battery		
1.1.4 Charger Precautions	La Teaut esca	111
1.1.5 Care and maintenance		1
2 Telephone Appearance and keys		1
2.1Keys specification		. 1
2.1 Screen icon specification		14
3 Assembling	ran a fan de a de	1
3.1Installing/ Removing the battery		1
3.2Charging the battery		1
3.2Charging the battery	- Sign	10
3.3,1 Installing/Removing T-Flash card		
3.4 Inserting/Removing the SIM card		
3.5 Power On or Off		

4 Calling	18
4.1 Making a call	18
4.2 Answering a call	18
4.3Hands free calls	19
4.4 Call waiting	19
4.5 Options in Call	19
5 People	20
5.1 Adding a contact	20
5.2 People setting	20
6 Messaging	21
7Call center	22
7.1 Call history	
7.1 Call history	
7.2.1SIM card 1 call settings	22
7.2.15IM card 1 call settings	22
7.2.1.1 Gall waiting	22
7.2.1.2 Call divert	
7.2.2 SIM card 2 call setting	23
7.2.3Advanced setting	23
8 Settings	24

8.1 phone profiles	24
8.1.1Mode	24
8.2 Phone settings	24
8.3.2 Schedule Power on /off.	24
8.3.3 Language	24
8.3.4 Pref. input method	
8.3.5 Standby menu display	
8.3.6 Dedicated keys	25
8.3.7 LCD black light	25
8.5 Security Settings	
8.6 Restore settings	25
9 Multi-Media	26
9.1Camera	
9.2 Video	
9.3Video player	26
9.4Music player	27
9.5Sound Recorder	
9.6 FM radio,	
10 Organizer	28
-	

10.1 First Aid settings	20
10.2 Voice king	
10.3 One key report time	28
10 4 Magnife	
10.4 Magnity	28
40 C Calculator	28
10.7 Alarm	29
10.7 Alarm	20
10.8 Led flash light	20
10.9 Bluetooth Settings	23
11 Input method	
11.1 Input method key	30
11 29 most toyt input case	
11 31 ottor input method	
11.4Digital input method	3

#### 1Safety and General Information

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

#### 1.1General Precautions

- 1) Mobile Phone
- ♦ Please use the phone at a temperature of -10°C~55°C and a relative humidity of 35%~85%.
- Avoid using the phone near regular telephone, television, radio and automatic office equipment, as they may interfere with one another.
- Please keep the removable SIM card out of the reach of children as there is a risk they could swallow it.
- 2) Battery
  - Please put the battery in a cool and well-ventilated place out of direct sunlight.
  - Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same.
  - Do not discard battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
  - 3) Charger

Do not charge the phone in the below environment:

- Under direct sunlight;
- ♦ Temperature out of range: -10°C to 45°C;

- Humid, dusty or severely shaking environment (could cause a malfunction);
- ♦ Near appliances such as television, radio (could affect the image, audio effect).

#### 1.1.1 Phone Precautions

- 1) Switch off your phone in aircraft, hospital and any facility where posted notices instruct you to do so. Wireless phone can cause interference to electronic instruments and medical equipment, when using your phone in such kind of area, meet any special regulations in force. Your phone features automatically power on function, check your power settings and make sure your mobile phone will not automatically switch on when on board an aircraft. Turn off your phone whenever on board an air craft, so as not to interfere with electronic system and result in aircraft accidents.
- 2) To avoid electromagnetic interference and/or compatibility conflicts, turn off your mobile phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy. Especially when near the below devices: hearing aid, pacemaker and other medical devices, fire detector, automatic door and other automatic control devices. In the event of mobile phone interfering with pacemaker and other medical electronic devices, consult the manufacturer of the device or local salesman. Mobile phone may interfere with appliances like television, radio, or PC
- 3) Do not hit the LCD display with extreme force or use it to hit other things. Doing so may break the glass and cause the LCD liquid to leak. If the liquid enters into eyes, it may blind you. In such case, rinse with a large quantity of water immediately (do not rub your eyes) and consult a doctor.
- Do not disassemble or remodel your phone. Doing this may damage your phone or result in the leakage of electricity and circuit fault.
- 5) In a very few cases, the use of mobile phone may interfere with the electronic equipments in some

 
cars. In such case, for safety, do not use mobile phone.

- 6) Do not press keys with sharp things like needle or pen head. Doing so may cause damage to your phone or operation mistakes.
- Do not use the mobile phone if it has a damaged antenna, as it may cause injury to persons.
- 8) Turn your phone off and do not remove its battery or charge the battery when in an area with a potentially explosive atmosphere. Sparks in such areas could cause an explosion or fire resulting in property damage, bodily injury or even death. For example: switch off the phone before entering refueling point. Do not use the phone near at a refueling point (service station) or near fuels or chemicals.
- Keep your phone away from moisture. If water or other liquids get into phone, it will cause phone overheating, leakage of electricity and malfunction.

#### 1.1.2 Battery Safety Precautions

- 1) Battery Precautions
- Do not throw a battery into a fire. A battery may rupture or bum violently when thrown into a fire. Please dispose of the used battery according to your local environmental laws.
- When installing battery, do not forcibly put pressure on the battery, or it may result in overheating, leaking, rupturing or fire.
- Do not short-circuit the positive (+) and negative (-) terminals. If the positive and negative terminals come into contact with each other or are shorted with wire or other metallic objects, an instantaneous high current will flow, possibly damaging the battery structure due to the generated heat, with the possible result of overheating, leaking, rupturing or fire.

- Do not exceed the battery manufacturer's charging current or voltage limitations. And only use the approved peripherals.
- Do not directly solder anything onto the battery terminals. Direct soldering onto the battery terminals can cause heat generation, leaking, rupturing or fire.
- If the electrolyte inside the battery gets into your eyes, it may blind you. In such case, do not rub your eyes but rinse with a large quantity of water immediately and consult a doctor.
- For safety, do not put the battery into your mouth or use the damaged battery.
   Do not attempt to disassamble or modify a battery. Doing so may result in leaking, ow
- Do not attempt to disassemble or modify a battery. Doing so may result in leaking, overheating, rupture or fire.
- Do not use or put battery near high temperature places like fire or heat-generating parts, or it may cause leaking, overheating, rupture or fire.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal conditions are detected during use, charge, or storage.
- Do not allow leaked electrolyte to come into contact with your skin or clothes. If this happens, rinse with a large quantity of water immediately and consult a doctor.
- If the battery leaks electrolyte or emits a strange odor, immediately remove it from open flame to avoid fire and rupture.
- Keep battery from moisture, as it may cause the battery to overheat, smoke and corrode.
- Do not place or store the battery in an automobile in hot weather, under direct sunlight. Use or storage of the battery in these places may cause battery leakage and overheating, and possibly lower the performance and shorten the battery's life.
- Only use the approved batteries and fittings. Do not connect to unspecified devices.



#### 2) Battery Capability

- Câlling, backlight on and playing game drain your battery much quicker. Long talk-time decreases the duration of the standby time.
- Idle time becomes shorter if the phone is out of coverage.
- Battery capability varies along with charging level, temperature, signal strength, and backlight.

#### 1.1.3 Disposing of Used Battery ·

The rechargeable batteries contain toxic heavy metals like mercury, cadmium, and lead. Improperly disposed batteries will cause heavy metal contamination. These batteries when discarded in ordinary household or workplace, after a long time, the heavy metal will leach slowly into the soil, ground water and surface water. Therefore, please dispose of used battery in a proper way.

- 1) Do not land filled, because the heavy metal will leach slowly into the soil, ground water and surface water.
- Do not incinerate, because the heavy metals can enter the air through smokestack emissions and can concentrate in the ash produced by combustion.
- 3) Do not compost, because the heavy metals in the compost may exceed standards.
- 4) Do not throw away used batteries random, avoiding environmental pollution.
- 5) Separate wasted batteries from household trash, reducing its harm to the environment.

#### 1.1.4 Charger Precautions

1) Use charger to charge battery quickly. Before charging, make sure the battery has been inserted in

the phone correctly. Do not remove the battery while charging.

Please use the specified alternating current. Using other voltage will cause electricity leakage, fire or damage to the phone and charger.

3) Charge your battery for at least 12 hours at the first time for its best performance and long cycle life.

4) If the charger still plugs in the charge slot and the phone has been fully charged, the phone will check the battery state automatically, and recharge the battery once it is not at full level.

5) While the mobile phone is being charged, keep it out of the reach of children.

 Do not short-circuit the charger. A short-circuit may result in electric shock, smoke and damage to the charger.

7) If the power cord is damaged, please do not use the charger, or it may cause fire or electric shock.

8) Please clean the dust on the power outlet in time.

9) Do not put container filled with water beside charger, as water may be splashed on charger, causing the charger overheating, leakage of electricity and malfunction.
10) If the charger comes into contact with water or any other liquids, immediately unplug the charger

from outlet to reduce the risk of overheating, fire, electric shock or charger malfunction.

11) Do not disassemble or modify the charger. Doing so could result in risk of injury to persons, electric

shock, fire and damage to the charger.

12) Do not use charger in a high moisture environment like bathroom, or it may cause electric shock, fire

and damage to the charger.

13) Do not touch the charger, power cord and power outlet with wet hands as it may cause electric

shock.

14) Never put a heavy object on the power cord or modify the power cord. Doing so may cause electric

shock or fire.

15) To reduce risk of electric shock or injury, unplug the charger from the power outlet before cleaning or maintenance.

16) When you disconnect the power cord of the charger, grasp and pull the plug, not the cord. Pulling the cord may cause electric shock and fire.

#### 1.1.5 Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. By following the warranty obligations and by caring for your mobile, you can enjoy it for many years:

1) Keep the phone dry. Precipitation, humidity and liquids containing minerals will corrode the electronic circuits:

2) Do not use or store the phone in dusty areas as the dust could obstruct or damage the moveable parts;

 Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics;

 Do not store the phone in cold areas, because moisture can form inside the phone when temperature rises, which may damage the electronic circuits;

 Do not drop, knock, bump or shake the phone. Rough handling may damage the internal circuits. Put the phone in a safe place when you do not use it;

6) Use a slightly cloth damping with clean water or neutral soap to clean your phone housing. Never use any chemical or abrasive cleaners, as they could damage the phone;

7) Do not paint your phone as the paint could obstruct any moving parts and prevent normal use;

- Use only approved batteries and accessories. Use of any unauthenticated batteries and accessories could damage your phone and may be dangerous;
- If there's something wrong with your phone or its accessories, do not attempt to dismantle the phone.
   Contact qualified service personnel to repair your phone.

### 2 Telephone Appearance and keys

#### 2.1Keys specification

Keys	Specification	
	Right key Carry on the words on bottom right screen or symbol indicative function. Press to telephone book.	
9	Left key Carry on the words on bottom left screen or symbol indicative function. Press to menu.	8
	Dial Key Dial and answer call Call comes, no matter in one SIM card or double, press dial key to answer. Press to show 1/2 dial logs in SIM card.	
9 N	Decline key End call or refuse call. Long press to power on or power off the phone. Back to menu	

 Direction Key
To show [↑] [↓] directions.
press [↑] key to shortcut menu.
press [1] key to choose switchover operator, time and calendar.
Long press middle SOS key to dial 3 emergency calls in circle and send emergency message to 3 numbers. Firstly, open "Mode" and set" emergency numbers" in Tool Case-emergency setting.
In calculator, press middle key to show result.
Letter and number key.
When dialing, press relevant key to show relevant number.
Press one by one or multi numbers, then press # can find number quickly in phone book.
For example, press 1 and # can view the first number in SIM card quickly.
Long press 1、2、3 key to dial 3 emergency numbers directly.
Long press 0 key to open or close flashlight under cell phone.
* key
When dialing, it shows * character.
Continue to press * will show "+", "P", "W"in circle.
Under input state will show punctuation.
# key
Under input state, it can switch input mode.
When dialing, it shows #.
Long press # key can switch to mute mode.
 In calculator, input "."radix point.

#### 2.1 Screen icon specification

icon	Icon specification	*	
المرالة المرالا	Internet signal intensity		
	The more straight stripes, the signal is stronger.		
	Message icon		
,,,,,,,,	Means new message.		
9	Earphone		- A
100,000	Means the earphone already plug in telephone.		
	Keyboard lock		
June 1	Means the telephone is in keyboard lock	1	
<b>(2)</b>	Alarm clock		
276	Means alarm clock is on work.		
	Ring ways		
	Means the present call display are:		
222	Means "ring"		
	Means "vibrate"		
	Means "ring and vibrate"		
200	Means " ring after vibrate"		
BERRE	Battery strength		
1 katabatatat	The more stripes means the more power of battery		

#### 3 Assembling

#### 3.1Installing/ Removing the battery

#### 1) Installing the battery

- With the top of battery (the terminal with pole) facing right toward the contacting points in the battery compartment, press the bottom of battery slightly until it enters into place;
- Slide battery cover forward along the side slot until it clicks into place.

#### 2) Removing the battery

- Long press end key to switch the phone off;
- Slide downward the battery cover;
- Use your nail to lightly lift the battery away.

#### 3.2Charging the battery

Your phone is powered by a rechargeable battery. When the battery is weak, the battery sensor informs you. At this time, you need charge the battery. When the battery becomes too weak for the phone to operate, it switches off automatically.

- 1) Open the cover of the multifunction jack on the top of the device.
- 2) Plug the small end of the travel adapter into the multifunction jack.
- 3) Plug the large end of the travel adapter into a power outlet.
- 4) When the battery is fully charged, unplug the travel adapter from the power outlet.
- 5) Unplug the travel adapter from the device.
- 6) Close the cover to the multifunction jack.

#### Note:

- (a) During charging, the phone can operate as usual. But the charging time increases.
- (b) Use only approved chargers and cables. Unauthorized chargers or cables can cause batteries to explode or damage your device.
- (c) While the device is charging, the touch screen may not function due to an unstable power supply. If this happens, disconnect the charger from the device.

#### 3.3T-Flash card use

#### 3.3.1 Installing/Removing T-Flash card

This mobile supports the T-Flash card feature. Make sure that the T-Flash card has already inserted into mobile.

Make contacting points downwards. Ensure the angled corner is positioned correctly and slide the card into the carrier;

### 3.4 Inserting/Removing the SIM card

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription details, such as your personal identification number (PIN) and optional services.

Contact points downwards. Ensure the angled corner is positioned correctly and slide the card into the carrier:

#### Note:

- (a) Be careful when handling, inserting or removing the SIM card, friction or bending may damage SIM card.
- (b) If left unused, keep SIM card out of the reach of small children.

- (c) Keep SIM card away from static, dusty and water.
- (d) When inserting or removing SIM card, always make sure that the phone is switched off before you remove the battery. Or the SIM card memory might be damaged.

#### 3.5 Power On or Off

Make sure the battery is already inserted:

- 1) Power On: Press and hold the POWER key to turn on the phone. After power on, the phone searches for your network automatically. Some SIM card is protected by the PIN number, if you are asker for inputting the PIN number, please enter it.
- 2) Power Off: Press and hold the POWER key until the power-off image display.

#### Note:

- (a) PIN is provided by your service provider. If the PIN is entered incorrectly three times, the SIM card is barred.
- (b) If the phone asks for an unlock code when switched on, enter the unlock code.

#### 4 Calling

When you want to make a call, please input area code and phone number. Press middle key to save the 4.1 Making a call

After inputting number, press dialing key to call this number. If there is number in phone book, it will number.

Only in GSM system coverage, you can make an emergency call, even though the phone is locked, show the user of this number. without SIM card, or cannot enroll to the system.

※Note: This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. Check with local service providers to make an emergency call. \*\*

When you receive a phone call from someone in phonebook, the incoming call screen appears and 4.2 Answering a call displays the caller ID icon, name, and phone number of the calling party( it depends on whether your phone

book has the caller information or not)

The unanswered call will show on screen to remind the unanswered call. For unanswered call, you call press detail function key to check the related records of this call, or press dial key to call this number directly.

This telephone support dual cards and duel standby, when you have a call, no matter in one card state or duel cards state, press dial key can answer the call. Press right soft key to choose" mute", open or close the microphone of mobile phone to avoid the party hear your voice. Then press right soft key to choose "refuse" to end the call, press middle key to open options menu to choose" answer" and "Call divert" the call. \*Note: if you want to answer a call, you can't open Call divert function

#### 4 3Hands free calls

in order to make you be convenient to have a call when you're in drive or faraway place, you can open hands free calls function to spread voice in call via loudspeaker. Close hands free calls, then press soft right key to hear a call in acceptor.

\*Note: because the volume of loudspeaker maybe loud, so please don't put loudspeaker near your ears.\*

### 4.4 Call waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call Waiting menu option to activate. You will be notified of an incoming call by a call waiting tone. In dialing mode, click "Menu-Settings -Voice call-Additional settings-Call waiting".

#### 4.5 Options in Call

In a call, you can press left soft key to carry on the following operation: keep/recovery singlet line call, end singlet line call, phone book, call logs, message, record, mute.

#### 5 People

This feature allows you to store phone numbers and their corresponding names in the memory of your SIM card and phone's memories.

Contact right hand "1" or "2" sign means contact in SIM card 1 or 2. No sign means contacts saved in telephone. You can input first letter of PinYin name or English name to search contacts logs. For example, if you want to search the name" zhang san", input "z", when there is "z" on title panel in bottom screen, it will search automatically the name list with the first letter "z".

# 5.1 Adding a contact

Learn to create and manage a list of your personal or business contacts stored on the telephone's

- 1) Choosing" add a contact", confirm entry. Choose the place in telephone book: to SIM card 1, SIM card memory or a SIM card.
  - Choosing storage location, confirm entering record edit menu, input name and number.

# 5.2 People setting

Set telephone book parameter information

- Reporting number: You can open or close the function. After opening, choose any call logs, there is
- Storage stage: show SIM1, SIM2, the used telephone capacity and totally capacity.

#### 6 Messaging

Test massage service makes you can read, text, send and receive words.

The sign"1" or "2" means messages in SIM1 or 2.

This telephone support to send written messages, which characters is over one massage. The messages that characters exceed the limit (Chinese characters is over 70, English characters is over 160) will send in twice or more in chain, the most is four. On right upside screen, you can see the message length designated symbol, it shows the characters you can input in message and already input characters. For example, 20/536 means this message can send as a normal message, and already input 20 characters.

When there is 🖾 icon, it means you receive new message, you can read your all received messages in inbox. If you open prompt tone, then the telephone will send out warning tone at the same time to remind you to read received messages. If your inbox is full, you can't receive new messages anymore. Then standby screen tip will show inbox is full, delete the full messages, you can receive new messages again. This function is to edit new message. Click "Option" to operate.

#### 7Call center

This function record automatically the recent dialed number, received number and missed number, and you can carry on different kinds of operations.

The "1" or "2" symbol in call log right side means call logs in SIM card 1 or 2. It can show missed call, 7.1 Call history dialled call, received call and all calls. Press left key to view number, make a call, send message, keep number to phone book and delete operations.

### 7.2Call settings

# 7.2.1SIM card 1 call settings

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call Waiting menu option to activate. You will be notified of an incoming call by a call waiting tone. In dialing mode, click "Menu-Settings -Voice call-Additional settings-Call waiting".

Call forwarding is as network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area.

This function is to set telephone to dial or answer calls in select. Set this function need network operator 7.2.1.3 Call barring to provide limit code.

#### 7.2.1.4 Line switching

Line switch over is a kind of network service. If your SIM card support open one card dual number function, then you can choose line 1 or line 2 to dial calls; if you don't apply to open one card duel number service, when you choose "line 1", you can dial or answer call no normally, when choose "line 2", you can't dial numbers. When SIM card don't support this service, this menu can't be used.

#### 7.2.2 SIM card 2 call setting t is the same with SIM card 1

7.2.3Advanced setting

#### 7.2.3.1 Auto redial

If you open this service, when dial fail, it will redial, you don't need dial manual.

#### 7.2.3.2 Call time reminder

Open this service, when you're in call, there is voice remind conversation time. You can choose one time remind, or period remind. 7.2.3.3 Connect notice

Set up to open or close this function, you can choose whether open connect notice or not when call dialing contacts. 7.2.3.4 Answer mode

Choose any keys to answer a call or earphone mode answer automatically.

#### 7.2.1.2 Missed call remind

When there is missed call, there is voice prompt after some interval of time.

#### 8 Settings

Settings is for common used functions

This function is to set telephone remind calls and messages in different ways. Choose phone profiles 8.1 phone profiles need to set up. Telephone in different environment has different ring volume, incoming ring, text message ring, message remind open or close state.

#### 8.1.1Mode

- ♦ Double mode open: SIM card 1. SIM card 2,both are in valid and in work.
- Only SIM card1 open: only SIM card1 is in valid and work.
- Only SIM card2 open: only SIM card2 is in valid and work.

### 8.2 Phone settings

8.3.1Time and date

Setup telephone used time and date

Set phone power off or power on in fixed time. When system time is on scheduled time, telephone will 8.3.2 Schedule Power on /off.

be power on or off automatically. You can set four times at most.

8.3.3 Language

You can choose telephone recent used language

#### 8.3.4 Pref. input method

You can choose tolerant input method.

#### 8.3.5 Standby menu display

You can Set parameters show on screen under standby mode

#### 8.3.6 Dedicated keys

In standby mode, set direction keys enter menu function project quickly. Choose appointed GPS function key, for example, "up key" enter Clock list. You can set" down key", "left key"," right key" in same way.

#### 8.3.7 LCD black light

You can setup LCD black light intensity and time.

# 8.4 Network settings

It uses for set telephone search internet ways and new network search.

### 8.5 Security Settings

Security setting means you can encrypt some functions. It is useful to avoid your mobile phone and SIM card be embezzled. When require to input the following codes, after input the right code( show in"\*"), press" confirm" function key. If you input wrong, please press " delete" function key to delete wrong numbers. In Security setting, you can modify PIN1, PIN2 and telephone lock codes.

#### 8.6 Restore settings

It can restore some telephone parts to factory settings. Before recovery, you need to enter telephone lock code. After code enter, it will show prompt messages, press left key to confirm, press right key to back. Telephone code and initial code is 1122.

### 9 Multi-Media

Enter <Camera> function state, camera start to work, there appear preview state of picture take subject 9.1Camera on screen.

Shortcut keys operation:

Press middle key to take photo, press middle key again to" delete"

press up/down keys to adjust distance. After taking pictures, pictures will named automatically in JPG layout file.

#### 9.2 Video

This for record video, video files, the telephone will name automatically in 3GP layout file and save at the same time.

- Press left key to confirm to enter video state.
- image scanning: press left key to open operation menu
- Press middle key to start video; in video, press middle key to stop video.
- Press up/down key to adjust distance.

### 9.3Video player

It can play video files. When playlist is empty, you can choose save location first, then choose the video you want to play. The telephone will show animation video list, choose-video file, press middle key to choose<play>, then you can play present video file, press right key to end playing and back to list. Support playing AVI/MP4/3GP files.

#### 9.4Music player

It can play music and ring files. Press left key to choose ts>, enter music list, after choose one song name, press left key to choose<option> to operate.

In play, press \*, # key to pick files in play list quickly; press up and down key can adjust volume, press middle key to stop playing.

#### 9.5Sound Recorder

You can record sound through the menu. The recording files are saved in the memory card. You can use the sound as phone ringtone or message tone, you can see and play the recording files in "Music -Playlists - My recording".

After choosing sound record, press middle key to enter<option>, choose " new sound record", start to record, in sound record progress, screen will show record time prompt information, press middle key to stop recording, if you want to restore recording, press middle key again. Press right key to stop on recording sound, to confirm to save this sound record and back to sound record list. Sound record files will save in amr layout.

#### 9.6 FM radio

After entering menu, the telephone will show searched or pre-set frequency of radio channel. Then you can roll\*/# to choose the channel you want to listen. You can adjust volume with direction up and down keys. When listen in, you can press middle key to stop listening, or right key to exit radio.

#### 10 Organizer

This menu is include common used soft wares

## 10.1 First Aid settings

When you come across in danger, in idle state, long press middle key to dial first aid list and send SMS.

- Mode: Open or close this function.
- → First Aid list: You can input three emergency numbers, press left key to keep numbers.
- ♦ First Aid SMS: Edit first aid SMS, such as "I need your help!" and so on.

#### 10.2 Voice king

It can report phone book, key voice, call. Choose to open or close this function.

# 10.3 One key report time

Press left key" confirm", there is voice to report the present time.

#### 10.4 Magnify

Use magnify, press up or down key to zoom in or zoom out; press right key to exit.

### 10.5 Calendar

It can check some date state and check date.

### 10.6 Calculator

The calculator can add, subtract, multiply and divide. There is calculator interface, press number keys,

#### 10.7 Alarm -

It can ring in scheduled time. if the scheduled time arrive, when telephone is in power off state. Clock is still in work.

#### 10.8 Led flash light

You can open or close flash light in the bottom of telephone.

### 10.9 Bluetooth Settings

Bluetooth is a short-range wireless communications technology for exchanging information over a distance of about 30 feet. You do not need to line up the devices to send information with Bluetooth. If the devices are in range, you can exchange information between them, even if they are in different rooms.

- 1) Turn the Bluetooth wireless feature on.
- 2) In the Bluetooth interface, you can see the name of your bluetooth device, touch the name, let it visible to all nearby Bluetooth devices.
- 3) If you want to modify you device name, press "middle key", input the new name and choose" options" to select " done". .
- 4) Search for available Bluetooth devices. From the list of scanned devices, touch the target device to pair, make sure the target device is showing the same passkey,
- If the pairing is successful, touch and hold the file you want to send, select "Share-Bluetooth" in pop up menu, select the paired device and send the file.

Note: Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

# 11 Input method

### 11.1 Input method key

- 1) Number 1-9: it shows 9 number in corresponding grid and letters keys or stroke input
- 1 number key: in letters (ABC,abc) input method to input punctuation
- 0 number key 0: input blank, in numbers input method to input number 0
- \* key: In all input methods to open punctuation input.
- # key: It can switch input methods.

# 11.2Smart text input case

Smart text input case (ENG and eng) has the same intelligence with Intelligent Pinyin input method. using the numeric keypad 2-9 to enter the corresponding letters of the alphabet, each letter can be entered only once, the word on the screen will change, press the left / right arrow keys to select the candidate word, or press the up / down arrow keys to turn the page to see the candidate word, press the center button to confirm your choice, then select the word appears in the text input area, such as writing "ok" by simply pressing the number keys and numeric keys 6 5 (see the corresponding letter on the keyboard), you will see the word "ok" appears in the word candidate area, press the middle button to confirm the selection complete the entry.

### 11.3Letter input method

Letter input method (ABC and abc) is based on consecutive points sequentially in order to enter letters on the screen. Press \* key to insert punctuations, press the 0 key to enter a space, ABC refers to input all uppercase; abc refers to input all lowercase.

If necessary enter the letters located on the first of several of the key, we must press the button a few times. Such as: To enter the letter "k", we must press 5, press twice to display "k" on the screen.

### 11.4Digital input method

Input 0-9, those 10 numbers. Press" \* " key to insert punctuation.