

 
Dual Core Andriod4.0 Mini PC Manual

Declaration:

- The user manual includes all the information of safe and correct operation instruction. To avoid accident and product damaged, please make sure go through all the content carefully before using the product.
- Please keep the product away from high temperature, humid and dusty environment.
- Do not drop or crash the product.
- Do not cut off the device when it is formatting or upgrading. Otherwise it will cause operation system error.
- Do not dismantle the device. Do not clean it by alcohol, thinner and Benzene
- We keep the right to upgrade and modify the product.
- Disclaimer: We only take the responsibility to provide the product warranty and after service. The users have to take care their data in the device by themselves. Wdo not responsibleor ay data lost or related lost.
- The product is not water-proof.
- All the pictures in the instruction are just for reference.

A.Appearance Introduction

- AV out: HDMI
- TF-CARD: Could be expended by T-Flash memory
- MicroUSB OTG: for power.
- USB Host : For pen drive, mouse, keyboard, External HDD, could be expended by USB Hub.

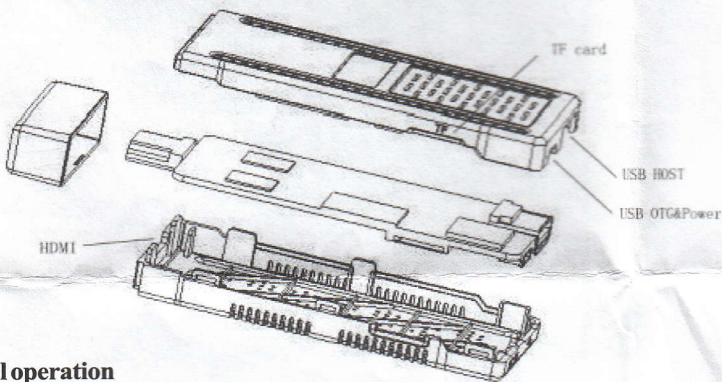

B.Initial operation

1. Hardware connection instruction.
 - Connect the TV set or LCD monitor. Set up the TV data receive mode to HDMI port. (Refer to TV set user manual)
 - Suggest to use 2.4G wireless mouse and keyboard. Plug 2.4G receiver on USB Host connector. If only mouse plugged, the device will provide soft keyboard in operation system. If the device detected the physical keyboard, the soft keyboard will be hide by OS automatically.
 - Mouse left button for "ok", right button for "return", rolling for page up and down. Hold left button to pull icon or copy & paste file. Hold middle button for Properties
2. OS interface
Connect power supply and devices, the booting information will show up within 1m




3. Management Software



Click the



4. Return, Homepage, program, properties 



Return button: click to return to the upper level directory



Homepage button: Click it anytime to return to homepage.



Program button: Click to check all the running program.


5. Status bar
The right bottom corner is status bar. It shows the status of T-Flash Card, USB connection, Time, Wifi and Download...and so on.



Click status bar, the hide menu will bound up.




Click this icon, it will shows up more options.

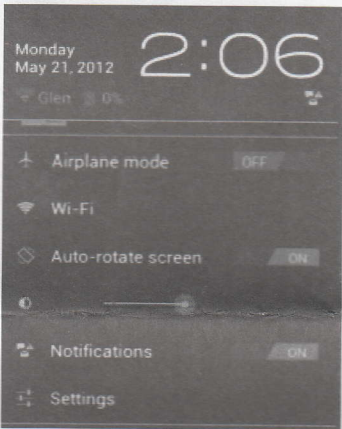 



 
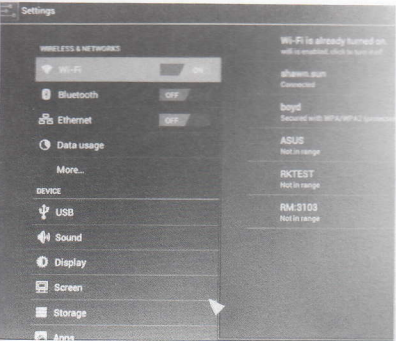 
C.Program, Tools icon management.

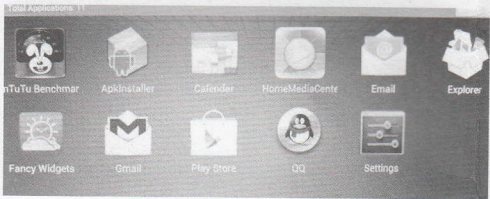


Click to show up all the installed program and setup tools icon.



D.Setting(or click home screen  for setting), Open  then click , It is in Tool bar. Click to show it up.




  1. WIFI Setting

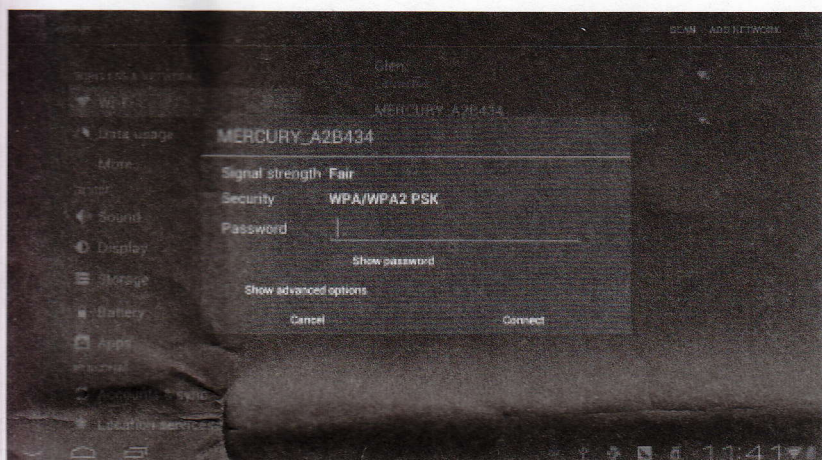


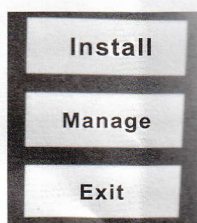 
2. USB to RJ45 Lan adapter setting

If there is no wifi and have to use cable to access internet. Please buy USB2.0 LAN Adapter. And plug it on USB Host or OTG ports. Connect RJ45 LAN Cable, click "setting"-> "More"-> "Ethernet"-> tick "Use Ethernet"

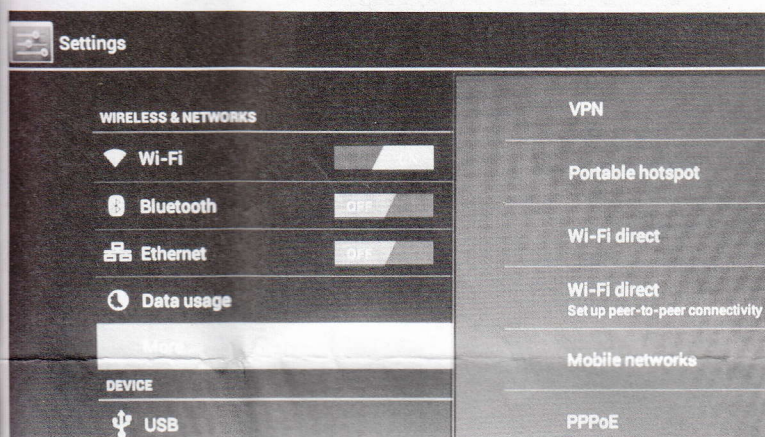 


E. Install/delete program.

● Click it , then can manager the APPS



● If click manage , then can choose one program and delete it

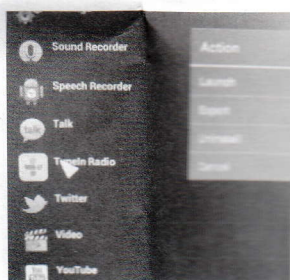

Install program

Please click **install** to find downloaded software package. Then Click to **install**.

F. Picture, Video, Filing Management, Webpage.

1:How to see the picture, home screen>"gallery"



1. How to play media player, home screen>"video"



2. Music Player, home screen> "Music"



3. Visit the website

Please set up Wifi to access to internet. Click any browser at home screen bottom



 
4. watch film online



G. Language and Input.

1. Select language and usual input method


The devices is including 54 different language. Please Click "setting" -> "Language and input"

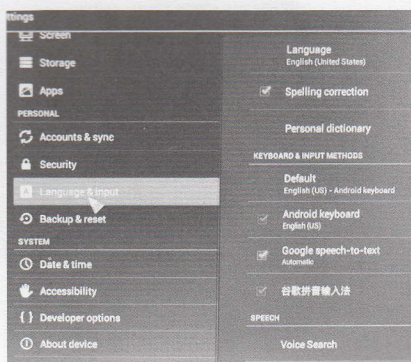

Different area users please select the suitable input software according. And make some setting under this item.


2. Keyboard and Mouse

 Device will show up the soft keyboard if it is only connected with mouse. And the soft keyboard will be hide once the hardware keyboard is detected by the device.

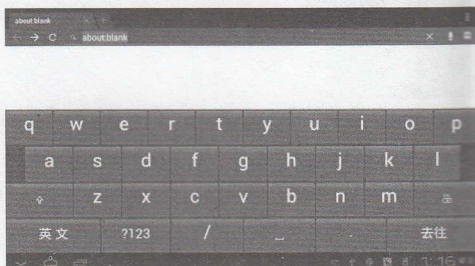


H:E-HOMEMEDIACENTER

 
First confirm other laptop or dest pc use same wifi router with the android mini pc,,and open.
Example for windows7 laptop to show:open the windows media player

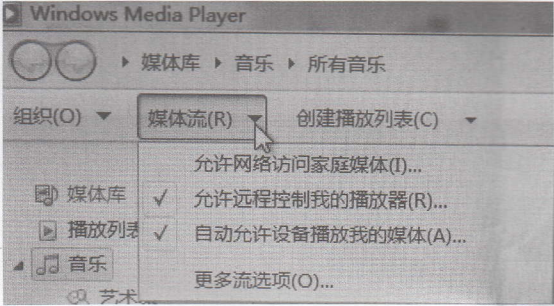

 
Click share your music, picture and video file, then on android mini pc homedia player can find this pc,see follow:

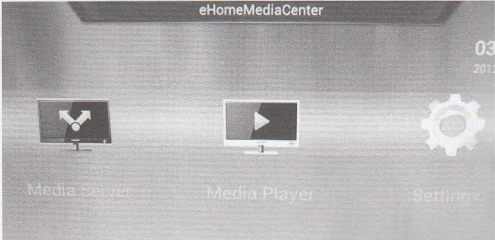

click media player,

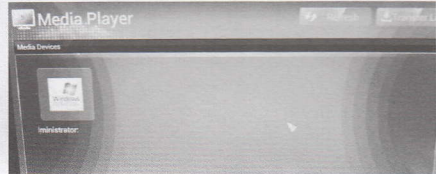 

 If your pc share,then can find your pc,and click your pc.

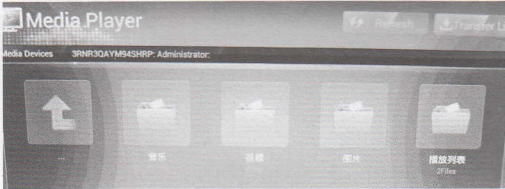

Then you can player your pc file,



I:other setting: In apps,



J:Question&Answer

- Screen flicker or unstable working: please check if the HDMI cable has been connected **tightly**.
- Can not start **device**: please download OS file from official website to refresh the **device** OS. Make sure all the important data has been backup before process it. If the issue still can not be solved, please contact the distributor **which** you bought from.
- Keep restarting **system** automatically: Please check if the device get enough **power supply**(best is **5V,2A**). Sometimes, external HDD cause power shortage. Please plug additional power supply for external HDD or other **external** devices.
- Can not find **file** in SD card or pen drive: Please check all the connection of the device.