 


*"Here's your dream. Premium SmartTV device"*

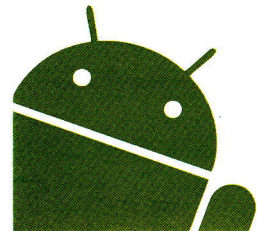

ANDROID

## Precautions before use

### Precautions before use

#### Precautions before use

To prevent fire, electronic shock and damage of product, please do not let the player come into contact with rain, moisture or liquid. Do not put vases or other water containers on the player.

To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheat of the player. Keep lit candles and other lit subjects away from the player. Please do not open the case of the player. Only a specialist is allowed to do this.

#### Placement of unit Issues

Please place the player on a flat area. Keep it away from sunlight and avoid heat, humidity and frequent shaking to avoid damage the case and other components of the player and shorten the service life of the player. For the best performance of the player, please do not place heavy objects on the player and keep it at least 6 inches away from the wall.

#### Power Issues

Do not use over-voltage, otherwise the player would be damaged and might cause fire. Please connect the power cord correctly and make sure the cable is not damaged. In the United States, that means supplying 110 VAC to the device. Please unplug the power cord if you do not use the player for long time to prevent damage caused by lightning.

#### Cleaning Issues

Please unplug the power cord before cleaning the player. Use a slightly wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.

### Moisture Issues

Please keep the player away from any humid places, like a basement. Condensation of moisture might cause damage to the player. In this case, please turn on the player and the heat of the player may drive the humidity away.

### About the user manual

Please read the user manual carefully and keep the manual in a safe place for review if necessary. The pictures in this user manual might be different with the pictures shown on the TV because of a difference in firmware versions.

### Service

Please do not try to repair the player by yourself. Unauthorized repair might cause electronic shock or damage of the player. It is suggested that you contact [www.ugoos.net](http://www.ugoos.net) web site for help with technical issues that cannot be resolved, after you read the "Troubleshooting Section" below.

- A. Abnormal picture or audio output
- B. The AC adaptor or the power cord is damaged
- C. Liquid or other things enter the inner parts of the player
- D. The player comes into contact with rain or other liquid
- E. The player is dropped or damaged because of any other reason
- F. The player operates anomalously

If any of the components needs to be replaced, please make sure only authorized components are used. Otherwise it might cause fire, electronic shock or other damages.

### Product introduction

### Remote control

The enclosed remote requires the use of two new "AAA" batteries. New alkaline batteries are recommended for the remote control, although rechargeable NiMH batteries are also acceptable.

### Front Panel



### LED light and RC receiver on front panel.

Note:

 
1. Bluetooth
2. 5M Camera(Auto focus)
3. Please do not cover the remote control signal receiver.
4. Please do not put heavy objects or other liquid containers on the player.
5. In order to protect the hardware, pls turn on the player again in 10s if turn off.

## Product introduction



	Power on/off		Setup
	Play/Payse		Prew/REW
	Next/FF		Numeric keys
	Display		Pending
	OK direction key: Up/Down/Left/Right		
	Information		Home
	Back		Menu
	Volume-		Volume+
	Mute		
	Red/Green/Yellow/Blue		

## Rear & Left Panel

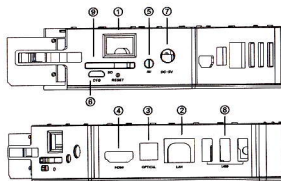

①	ON OFF	⑥	OTG
②	LAN	⑦	DC IN
③	OPTICAL	⑧	USB
④	HDMI	⑨	SD
⑤	AV/AUDIO		

### Note:

1. When player is on, please don't remove the HDMI cable.
2. Player can recognize external device and refer "plug in" automatically.

## Connection

### Connection

### TV Connection

 
HDMI		1080/24p, 1080p, 1080i, 720p 480p/576p, 480i/576i
CVBS		480i/576i

### HDMI connection



HDMI can transfer video and audio signal at the same time. Max definition is up to 1080p and lossless audio signal, 7.1 channels.

### YPbPr and Composite Connection

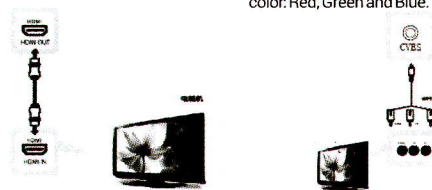If there is no HDMI port on your TV, please connect via CVBS interface. Connect the CVBS cable to the player and TV respectively according to the color: Red, Green and Blue.




## Two audio connect interfaces

 
HDMI		High definition multimedia interface	support 7.1 audio system
OPTICAL		Optical	support 5.1 audio system

## Amplifier Connection

### HDMI Connection Diagram

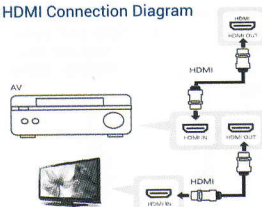


### Optical Connection Diagram

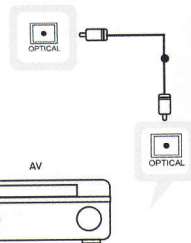 

## Network Connection

 With gigabit LAN, you can connect the player to your home network and browse the computer and NAS.  
There are 2 ways to connect to the internet: Wired and Wireless.



## Main Menu



## Main Menu



Click "Home" button to enter "Main Menu"

 
 
## Settings

 
 
Click "Setup" button to enter "Settings"

## WIFI

- 1) Click "OK" button to TURN ON the WIFI
- 2) Click "UP"-"DOWN" button to choose suitable WIFI, and input the password.
- 3) Connect
- 4) Connect successfully



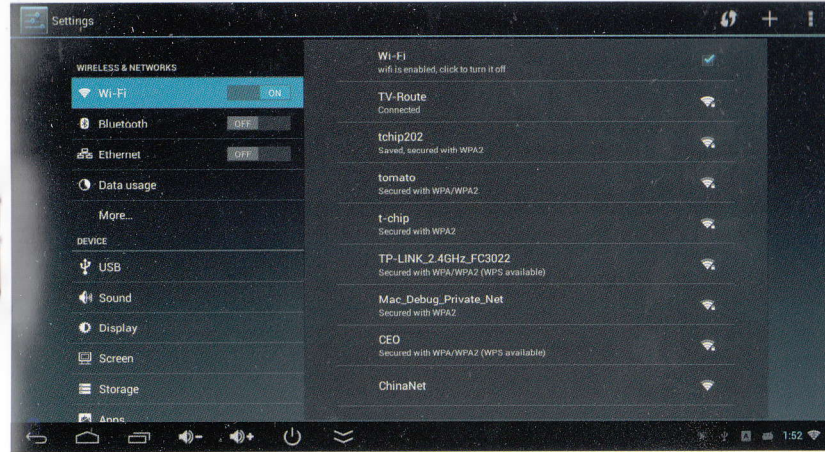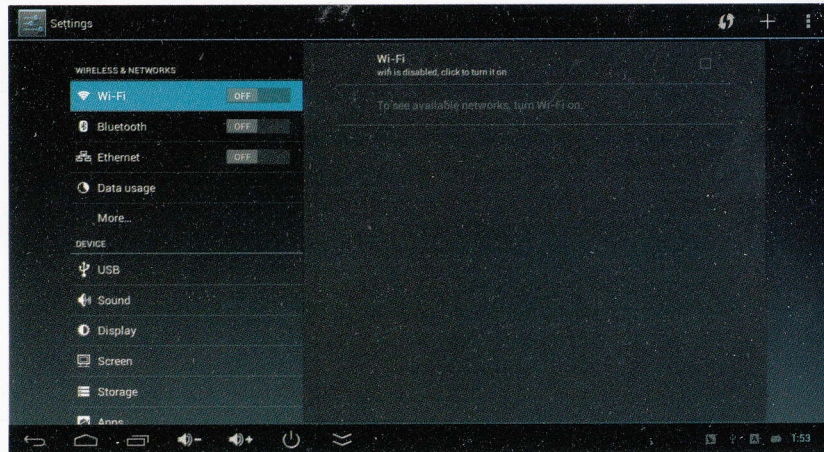

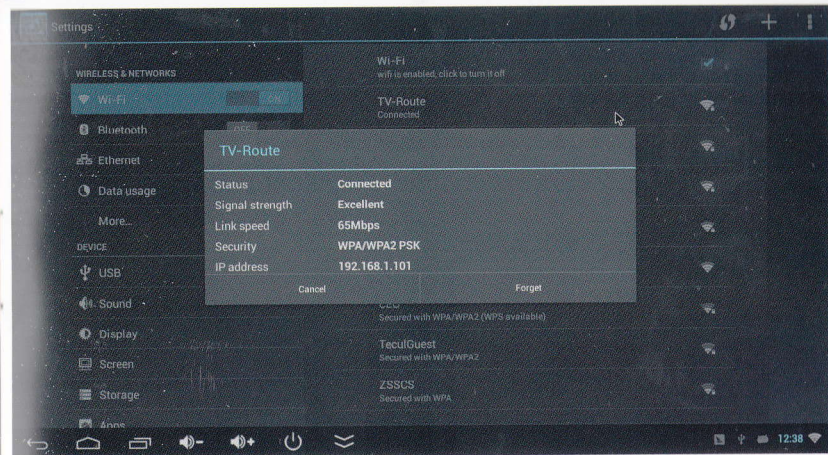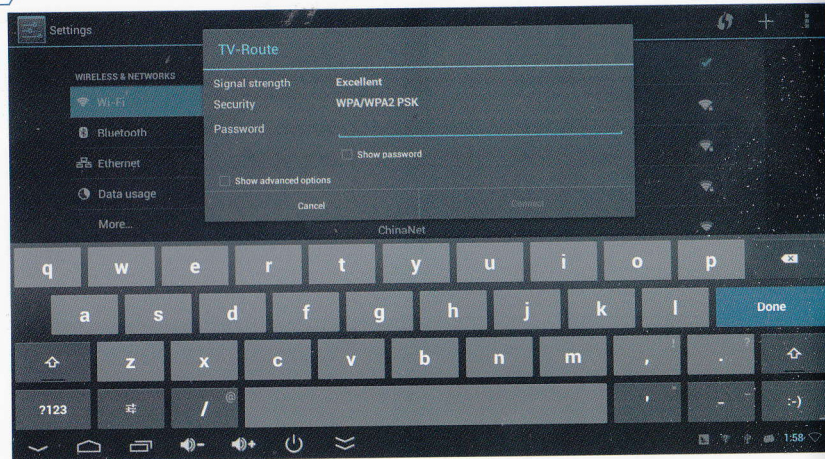



## Wired

## LAN

 
## Setup



1. Use a network cable connect the media player to your router
2. Turn on DHCP on your router to allow your player to get IP address automatically




Turn on player, go to Setup --> Ethernet (below)

## Sound

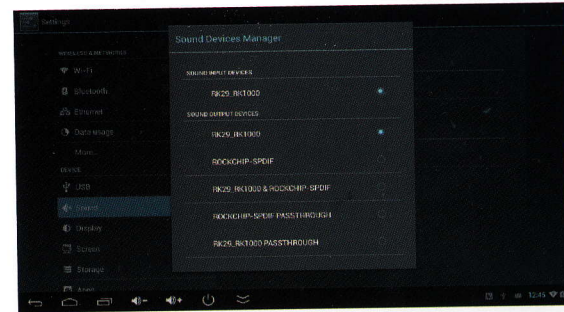

  
 
Click "UP"-"DOWN" button to choose the sound output



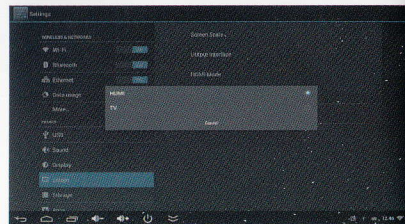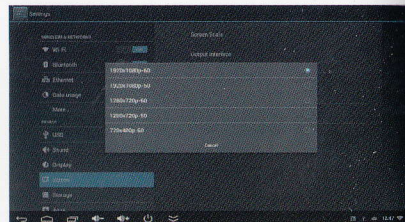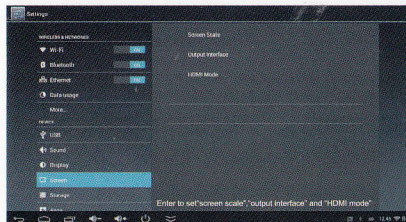

## Advanced Setup

  It refer more details about setup which is not used frequently.

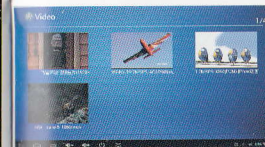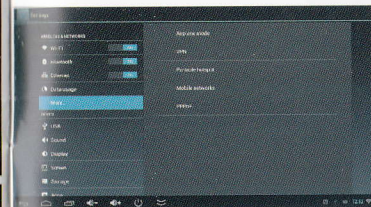


## Video


You can find Video APPs here

## APPs

You can download freely from Google store.

  
And if want a certain APP to "desktop", pls choose that APP and click "menu" button.

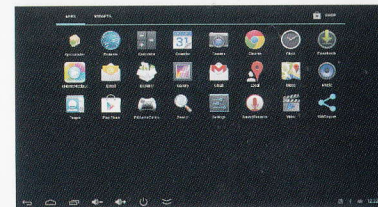

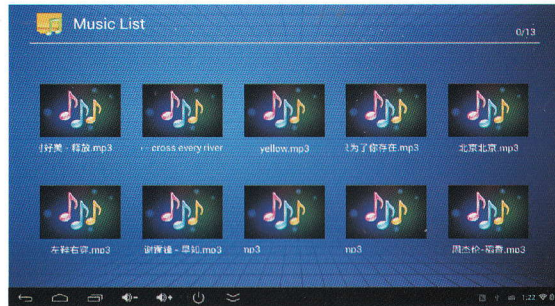

**Folders** Review the folders in external USB or SD card.

### Browser

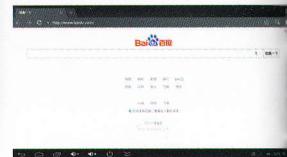 

Go through website, news, etc.

### Catalog Contents

Precautions before use	2
Product introduction	4
Connection	6
Menu:	8
-Main Menu	8
Settings:	8
-WIFI	8
-Wired LAN Setup	13
-Sound	14
-Screen	15
-Advanced Setup	16
Use Features:	16
-APPs	16
-Video	16
-Folders	16
-Browser	17