 


LED Touch Screen Watches Instructions

01 Touching area:

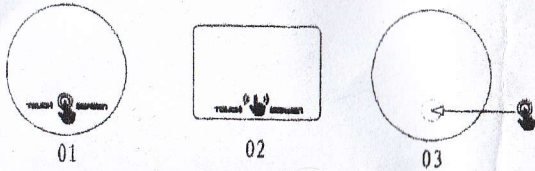

The series of products have three kinds of touch instructions:
The areas of the finger touching 01 and 02 are touching area.
03 is multicolor glass, the circle is the touching area.


02 Display Model:

Display in turn →




Continual press the watch glass to start the time display (avoiding waste electricity by mistaken light)
Firstly the animation displaying, then by the time
Touch again, switch to the date displaying, then third times touch, it is the minute displaying, the fourth times touch, it gets back to the time display status.
It will close display after 5 second if without operation.

03 Setting Process:

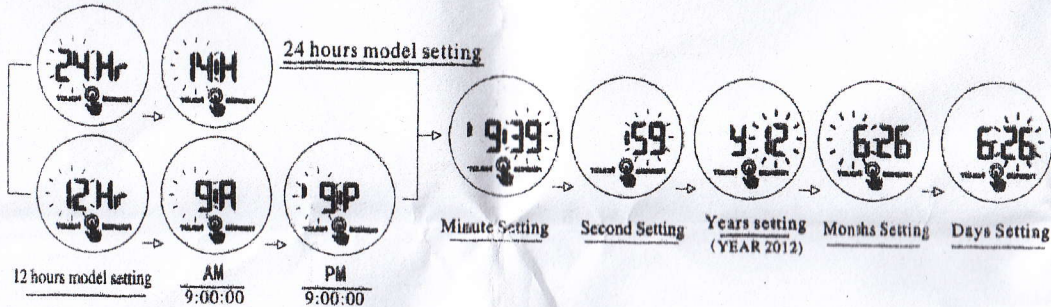


04 Time setting:

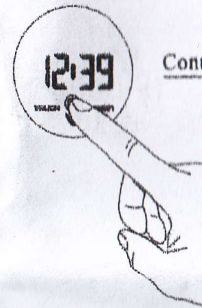

Continual pressing the touch area two seconds enter into the time setting when the time displaying.

- 01: Setting starts from 12/24 hours model setting, touch once can switch it.
- 02: After 12/24 hours model setting, continual press 2 second, then enter into hours setting, it will be have AM and PM if chose 12hours model. Touch once means adding one hour.
- 03: Finish the hours setting, continual press 2 second, then enter into minute setting, touch once means adding one minute.
- 04: Finish the minute setting, continual press 2 second, then enter into second setting, touch once means reducing one second.
- 05: Finish the second setting, continual press 2 second, then enter into years setting, touch once means adding one year.
- 06: Finish the years setting, continual press 2 second, then enter into months setting, touch once means adding one month.
- 07: Finish the months setting, continual press 2 second, then enter into days setting, touch once means adding one day.
- 08: Finish the days setting, continual press 2 second, it will display the time what you want, then will close display after 5 second if without operation.

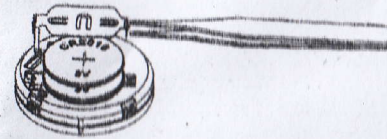


05 Battery Changing :

- This movement has one CR2032 battery.
- 01: If find the watch showing that fuzzy LED word or keep lighting all the time, or no response when you touching and can't be setting time, please to change the battery in time. Please keep the movement in watch case when you changing battery, then cover the watch back after reset watch.
 - 02: Open the watch back, finding tweezers or similar tools, take out the battery buckle, replace the old batteries with new batteries, then close the battery buckle. (No excessing too much)
 - 03: In order to avoid disturbing and destroying from outside, please packing the watches within one to two minutes, and the battery can be changed in the watch repair store.
 - 04: Electric product's battery life has a close relationship with Using rate.
 - 05: Welcome to our website: <http://www.gointe.cn> if you have any question.

06 Program reset:

Reset activation key →

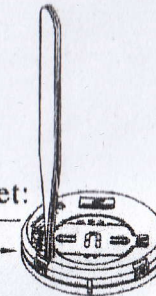

If watches appears stoppage or need to change the battery, please finding the tweezers or similar tools to touch the reset button, then cover the watch back (Remark: please keep the watch in watch back when resetting the watch, the time will be showing 12o'clock after reset successfully).