 


Triple-proof Phone Getting Started Manual

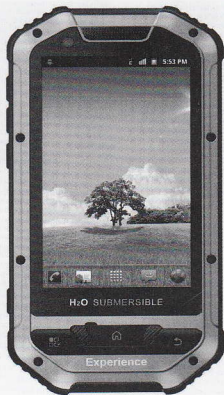

Insert the SIM Card *and* T-Flash card :

1. **Remove the battery cover:** Loosen the screws on the back side -- to rotate both the screws anti-clockwise until open the back cover as shown in Jig-1



Jig-1

2. **Take off the battery:** Remove the battery by lifting it up from the bottom part as shown in Jig-2

 


Jig-2

Started to use your phone:

Power on: Press and hold the power key button for 3 seconds

Power off: Press and hold the power key button for 3 seconds, select 'switch off' in the menu option.

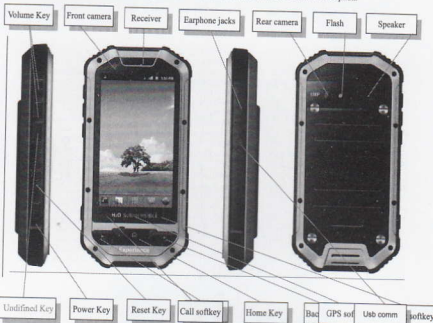

Menu Key: Select to show the available menu in current screen.

Home Key: Return to home screen. To view recent application, press and hold the home key.

Back Key: Return to previous screen.

Volume Key: Adjust the volume of the ringtone

3. **Put the Sim Card in the holder:** Put the SIM card into the slot touching the SIM contacts of the phone as shown in Jig-3



Jig-3

4. **Insert T-Flash card:** Open T-Flash card holder and insert T-Flash card into the slot, then close T-Flash card holder as shown in Jig-4



Jig-4

5. **Insert the battery to the phone:** Insert the battery with the label side up. Align the tabs and metal contacts at the top of the battery with the tabs and contacts on the back of the phone. Slide into place and press down as shown in Jig-5



Jig-5

6. **Insert the battery cover:** Insert the back cover and rotate four screws clockwise to lock the back cover as shown in Jig-6



Jig-6

- ⚠ **Attation:** Please power off the phone before plug in or pull out the SIM card.

T-Flash card:

Please setup T-flash card before using your phone, otherwise the applications cannot be installed and some functions are not available, for example, camera, recorder, etc.

1. Use the T-Flash card in the phone as USB storage.

Connect the phone with computer by using USB cable. The computer will pop up the windows to let you install the phone USB driver.

→ If you only wish to use the T-Flash card in the phone as a USB storage, you can ignore those windows and click **Cancel** always. Slide **Message Board** as shown in the screen below. And then click **USB connected**→**Turn on USB storage** to use the T-Flash as USB storage.



→ You must setup the phone USB driver in your computer if you wish to use the PC Suite to synchronize phonebook, Message, Calendar and others with your computer. The phone USB driver can be downloaded from SD-card.

2. Remove the T-Flash card safely

Please enter Settings -> SD card & phone storage -> Unmount SD card to remove the T-Flash card safely.

Using of touch screen:

- **Single Click:** To select an icon. For example, click dial to open the keypad which will be displayed on the screen.
- **Double Click:** To zoom-in or zoom-out. For example, to zoom-in or out of a photo, click twice when viewing a photo or browsing on the internet.

→ **Hold:** Click and hold the screen, icon or input box to get more operation options.

 
- 1) When clicking on a contact from the contact list for a long time, an operation menu will appear according to the contact list.
- 2) To rearrange/move an icon to the home screen, click and hold an icon within the menu list.
- 3) Long-Time Click the blanks of home screen to add home screen shortcut.

→ **Drag the screen:** You can drag the screen to view more applications which is not displayed in one screen.

Home screen:

→ You can use all the functions by touch screen. Click the icons to open the applications. Check all the applications so it is functioning properly.

In total, there are 5 home screens in the phone, when you slide to the left or to the right this will move the screen from one to another. To create shortcuts and widgets, tap and hold at blank area on any of the screens. You can return to the home screen by pressing the Home key in any screen you are on.

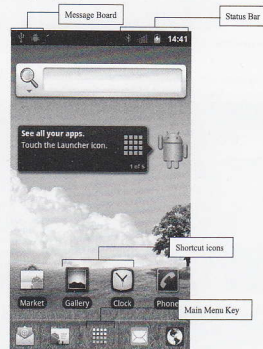

◆ Create shortcuts and widgets

Press on the blank of the home screen, and hold till a menu is displayed. Select create shortcuts or widgets.



◆ Delete the shortcuts and widgets

To delete an object, tap and hold the object, then drag it towards the bottom of the screen. When the object turns red let go of it and the selected object will be deleted.



◆ Lock the screen

Lock the phone in order to avoid useless operation and to save the battery by press the power key.

The phone will automatically lock when it is not being used for some time.

◆ Unlock the phone

Press either the power key, menu key, home screen key or back key to enter the unlock interface, and then slide



◆ Silent mode

Slide  to set the phone to silent mode. In silent mode, slide  to activate sounds.



◆ Message board

Slide **Message board** bar in any screen to open message board where you are able to check for unread notifications



◆ Manage applications

Install applications: You can install .apk application among File Manager and set it up step by step

Uninstall application: Enter Settings->Applications->Manage applications, then will be able manage and remove installed applications.

◆ Recently used applications

Press and hold the home key, the screen will display a window which shows your recently used applications. Click the icon to open the application.



Extend the battery life:

Some functions may use up more power, which eventually shorten the battery life. You could:

- Close all the wireless connection when not in use i.e. bluetooth, Wi-Fi or GPS
- Reduce the brightness and shorten the screen timeout to save battery, or press power key to shut down the screen when the phone is not in use.
- Close any automatically synchronized applications such as Email, calendar, contacts and other.
- Some applications which are downloaded could also shorten the battery life.