

Quick Start Guide

TONAINE T11

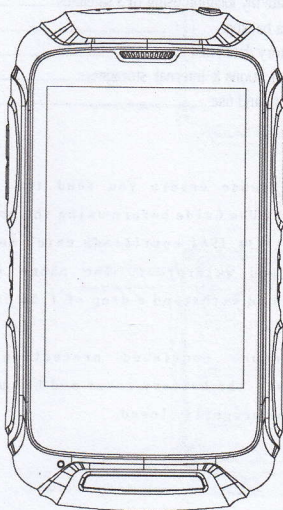 


Table of contents

1	Your mobile	3
2	Text input	7
3	Phone call	15
4	People	17
5	Messaging.....	18
6	Email.....	19
7	Getting connected	20
8	Locate my location using GPS satellites	23
9	Data backup	23
10	Factory data reset	24
11	Applications & Internal storage.....	24
12	Safety and use	25

 
 
Please ensure you read the Important Product Use Guide before using the product.

 
The T11 is IP67 certified, which means it is dust and waterproof. The phone is rugged enough to withstand a drop of 1.5m onto a hard surface.

To ensure continued protection against damage, the battery cover and USB port cover must be properly closed.

1 Your mobile

1.1 Keys and connectors

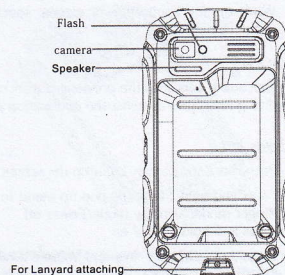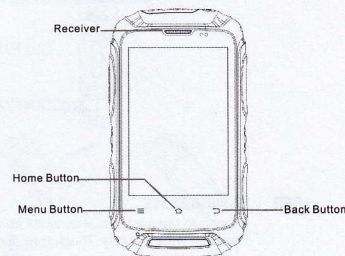

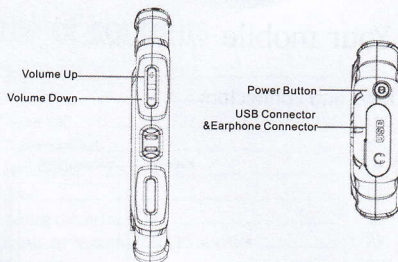

Recent apps key

Touch to open a list of thumbnail images of apps you've worked with recently. Touch it to open an app. Swipe it left or right to remove a thumbnail from the list.

Touch and hold it to open menu list.



Home key

While on any application or screen, touch to return to the Home screen.



Back key

Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.



Power key

Press: Lock the screen/Light up the screen

Press and hold: Show the pop-up menu to select from Ringing mode/Airplane mode/Power off

Press and hold: Power on

Press and hold Power key and Volume down key to capture a screenshot.



 
Volume Keys

- .. Under call mode, adjust the earpiece or headset volume.
- . In Music/Video/Streaming mode, adjust the media volume.
- . In general mode, adjust the ring tone volume.
- . Mute the ringtone of an incoming call.

1.2 Getting started


1.2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card

 You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.

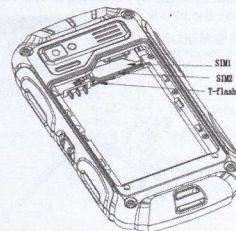

SIM1 and SIM2 are overlapping sequence. To install, place the SIM1 card with chip facing downwards and the SIM2 card with chip facing upwards. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Installing or removing the battery

Please power off your phone before removing the battery.



- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Installing and removing the microSD card

 


Insert the external microSD card into the slot with the gold contact facing down. To remove the external microSD card, gently press and slide it out.



Before removing the microSD card, you should ensure the phone is off, to protect it from corruption or damage. In addition, regularly removing or inserting the SD card may cause the phone to restart.

Charging the battery

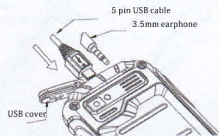

Connect the battery charger to your phone, then the charging icon will show on the right of status bar.



The charging status bar will not float if your battery is extensively consumed. To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the Power key until the phone powers on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you should set following options: language, date & time, Google account, etc.

 
If you power on your phone with no SIM card inserted, you will see a screen giving you the option to connect to a Wi-Fi network to sign into your Google account and to use some features.

1.2.3 Power off your phone

Hold down the Power key from the Home screen until the Phone options appear, select Power off, and touch OK to confirm.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the Home key to switch to Home screen.

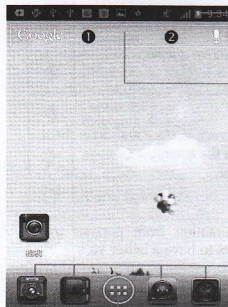

Status bar
Status/Notification indicators
Touch and drag down to open the notification panel.

Search bar
Touch 1 to enter text search screen.
Touch 2 to enter voice search screen.

Touch an icon to open an application, folder, etc.

Favorite tray applications
Touch to enter the application.
Touch and hold to move or change applications.
Application tab
Touch to open a application list.

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen.

1.3.1 Using the touchscreen

Touch

To access an application, touch it with your finger.

Touch and Hold

Touch and hold the home screen to access the available options for setting the wallpaper. Touch and hold an application/folder/widget to active Move mode. You can access the available options by touching and holding image, message, file, etc.

Drag

Place your finger on any item to drag it to another location.

Slide/Swipe

Slide the screen to scroll up and down the applications, images, web pages at your convenience.

Flick

Similar to swiping, but flicking makes it move quicker.


Pinch/Spread

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.






 
 

 

 

 

 













Rotate

Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better view.

1.3.2 Status bar

From status bar, you can view both phone status (on the right side) and notification information (on the left side). When the status bar is full,  icon will appear.

Status icons


	GPRS connected		Receiving location data from GPS
	GPRS in use		Roaming
	EDGE connected		No SIM card inserted
	EDGE in use		Vibrate mode
	3G connected		Ringer is silenced
	3G in use		Phone microphone is mute
	HSPA (3G+) connected		Battery is very low
	HSPA (3G+) in use		Battery is low
	Connected to a Wi-Fi network		Battery is partially drained
	Bluetooth is on		Battery is full
	Connected to a Bluetooth device		Battery is charging
	Airplane mode		Headset connected
	Alarm is set		No signal (gray)
	GPS is on		Signal strength (blue)

Notification icons

	New text or multimedia message		Missed call
	Problem with SMS or MMS delivery		Call on hold
	New Google Talk message		Call forwarding is on
	New voicemail		Uploading data
	Upcoming event		Downloading data
	Data is synchronizing		Download finished
	Song is playing		Select input method
	Screenshot error		An open Wi-Fi network is available
	USB tethering is on		Phone is connected via USB cable
	Portable Wi-Fi hotspot is on		Radio is on
	Screenshot captured		System update available
	Carrier data use threshold approaching or exceeded		Connected to VPN
	Call in progress		Disconnected from VPN
	Call in progress using Bluetooth headset		

Notification panel

 Touch and drag down the Status bar to open the notification panel. Touch and drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

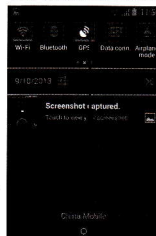

Quick settings bar

Touch to enable/disable functions or change modes.

Slide left and right to view more.

Touch one notification and slide it sideways to delete it.

Touch the icon to clear all event-based notifications (other ongoing notifications will remain).

Touch the Settings icon to access Settings.

1.3.3 Search bar

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, PIN or password etc.

1.3.5 Personalize your Home screen

Add

Touch the application tab , touch and hold an application or a widget to active the Move mode, and drag the item to any Home screen as you prefer.

Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the Favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of Remove icon, and release after the item turns red.

Create folders

To improve the organization of items (shortcuts or applications) on the Home screen and the Favorite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it, touch the folder's title bar to input the new name.

Wallpaper customization

Touch and hold an empty area or touch Settings\Display\Wallpaper to customize wallpaper.

1.3.6 Applications

To consult applications, you can touch the APPS key. Touch a thumbnail in the window to open the related application.




1.3.7 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference by pressing Volume up/down key.

1.4 Applications and widgets list


The list contains all pre-embedded and newly installed applications and widgets.

To access the list, touch  from the Home screen. To return to the Home screen, touch the Home key or the Back key.

 
2 Text input

2.1 Using Onscreen Keyboard

Onscreen Keyboard settings

Touch application tab from the home screen, select Settings\Language&input, touch the Settings icon  on the right of Android keyboard, a series of settings are available for your selection.

2.1.1 Android keyboard

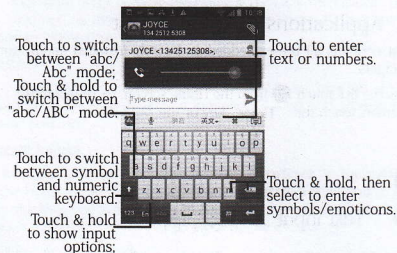

2.2 Text editing

You can edit the text you have entered.

Touch and hold or double-tap within the text you would like to edit.

Drag the tap to change the high-lighted selection.

 
Following options will show: Select all, Cut, Copy, Paste.

Touch the icon or touch the blank to go back without any action.

3 Phone call

3.1 Making a call

You can easily launch a call using Phone.Touch Application tab from the Home screen and select Phone

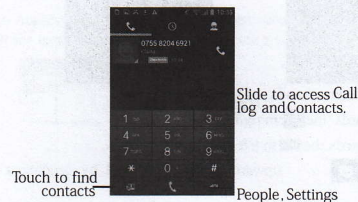

Enter the desired number from the keyboard directly or select a contact from Contacts or Call log, then touch to place the call.

 
The number you entered can be saved to Contacts by touching the Menu ⁽¹⁾ key and touching Add to Contacts.

If you make a mistake, you can delete the incorrect digits by touching .


 

To hang up a call, touch or the Power key.

⁽¹⁾ Menu key mentioned on the following chapters stands for

3.2 Answering or rejecting a call

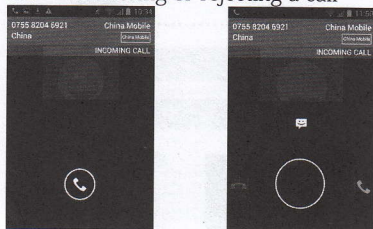


When you receive a call

- Slide towards the  in right hand to answer;
- Slide towards the  in left hand to reject;
- Slide the  upward to reject the call by sending a preset message.

To mute the incoming calls, press the Volume up/down key.

or touch Phone\Settings\Audio profiles\Turn over to Silent.


3.3 Consulting your call log

 
You can access your call log by touch  from the Dial screen to view call history in categories of Incoming calls, Outgoing calls, and Missed calls.

4 People

You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone.




4.1 Adding a contact

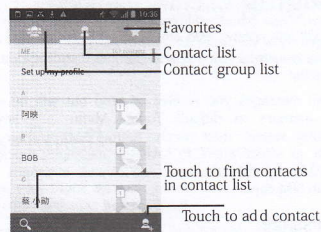Touch Application tab on the Home screen, select people App, then touch the icon  in the contact list to create a new contact.




4.2 Importing, exporting and sharing contacts

From Contacts screen, touch Menu key to open options menu, then you can import/export contacts between SIM1, SIM2, Phone, Phone storage, and SD Card.

To import/export a single contact, touch Menu key, then select Import/Export, follow the indication to choose source address and destination address, select the contact and touch . Touch  to choose all contacts then touch  can import/export all contacts.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.

Touch a contact you want to share, touch Menu key and Share from contact details screen, then select the application to perform this action.

Touch Menu key from contact list screen, select Share visible contacts, you can select multiple contacts and touch  to share these contacts' vCard.

4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

5 Messaging


You can create, edit and receive SMS and MMS with this phone.

To access this feature, touch Application tab from the Home screen, then select Messaging.



All messages you receive or send out will be saved in phone memory as default. Touch Menu key from Messaging screen, then touch Setting\SMS storage location to select where to save the messages; touch Setting\Manage SIM messages to consult messages stored in SIM card.

5.1 Write message



On message list screen, touch the new message icon  to write text/multimedia messages.



Touch to view the whole message thread.

Touch & hold to activate the delete mode. Touch message threads to choose deleted ones, and touch the trash bin to confirm.

Sending a text message

Enter the mobile phone number of the recipient on To bar or touch  to add recipients, touch Type to compose bar to enter the text of the message. When finished, touch  to send the text message. You have to choose a SIM card if two cards are inserted.



An SMS of more than 160 characters will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.

6 Email

Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts in your phone.

To access this function, touch Application tab from Home screen, then select Email.

An email wizard will guide you through the steps to set-up an email account.



Enter the email address and password of the account you want to set-up.

Touch Next. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch Manual setup to directly enter the incoming and outgoing settings for the email account you are setting up.

Enter the account name and display name in outgoing emails.

To add another email account, you can touch Menu key and Settings. Touch Add account on the right of the title to create.

To create and send emails


- Touch the icon  from Inboxscreen
- Enter recipient(s) email address(es) in To field.
- If necessary, touch Menu key and touch Add Cc/Bcc to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Touch Menu key, touch Attach file to add an attachment.
- Finally, touch  to send
- If you do not want to send the mail right away, you can touch Menu key and Save draft or touchBack key to save a copy.

7 Getting connected

To connect to the Internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

7.1 Connecting to the Internet

7.1.1 GPRS/EDGE/3G



The first time you turn on your phone with SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G. If the network is not connected, you can press and hold  on notification panel.

To check the network connection you are using, touch Application tab on the Home screen, then touch Settings\More... \Mobile networks\Access Point Names or Network operators.

7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on the phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Touch  on notification panel to get to Settings.
- Touch the switch  beside Wi-Fi to turn on/off Wi-Fi.

- Touch Wi-Fi, detailed information of all detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect to it. If the network you selected is secured, you are required to enter a password or other credentials (contact network operator for details). When finished, touch Connect

7.2 Browser



Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touchBrowser.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch .

7.3 Connecting to a computer

With the USB cable, you can transfer media files and other files between your microSD card/phone storage and computer.

Before using MTP or PTP you should firstly unmark USB debugging via Settings\Development\USB debugging .

To connect/disconnect your phone to/from the computer:

To connect:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- If you use MTP or PTP, your phone will be automatically connected.



Before using MTP, make sure that the driver (Windows Media Player 11 or above version) has been installed.

To locate data you have transferred or downloaded in your microSD card:


Touch Application tab from the Home screen and select File Manager.

All data you have downloaded is stored in File Manager, where you can view media files (videos, photos, music and others), rename files, install applications into your phone, etc.

7.4 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Portable Wi-Fi hotspot


- Touch  on notification panel to get to Settings.
- Touch More... \Tethering & portable hotspot
- Mark the checkbox of USB tethering or Portable Wi-Fi hotspot to activate this function.



These functions may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas. You can check data usage by touching Settings \ Data usage .

8 Locate my location using GPS satellites

To activate your phone's global positioning system (GPS) satellite receiver:

- Touch  on notification panel to get to Settings.
- Touch Location services \ GPS satellites
- Mark the checkbox

Find your location by opening Maps:




Use your phone's GPS satellite receiver to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your phone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location. Then you can start the navigation to find the target location.

9 Data backup

This phone enables you to back up your phone's settings and other application data to Google Servers, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account.

To activate this function:


- Touch  on notification panel to get to Settings.
- Touch Backup & reset \ Back up my data

- Mark the checkbox

Activated this function, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you deactivated this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

10 Factory data reset

To activate factory data reset:

- Touch  on notification panel to get to Settings.
- Touch Backup and reset\Factory data reset
- Mark the checkbox

Phone reset will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your cellphone, there is another way to perform a factory data reset by pressing **Volume up** key and the power key at same time until the screen lights up.

11 Applications & Internal storage

11.1 Applications

With this phone, some built-in Google applications and other third party applications are available for your convenience.

With the built-in applications, you can

- Communicate with friends
- Exchange messages or emails with friends
- Track your location, view traffic situations, search for locations and get navigation information to your destination
- Download more applications from Google Play Store and more.

For more information about these applications, please check user manual online: www.alcatelonetouch.com.

11.2 Internal storage

Available space

Touch Settings\Storage to display the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), permanent and temporary data.

All personal music, pictures, applications, and files will be saved in internal phone storage if external SD card is not inserted.



If a warning message comes up saying that phone memory is limited, you are required to free up space by deleting some unwanted applications, downloaded files, etc.

12 Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "Hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10degree to +55degree.

At over 55degree the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not use the phone if the glass made screen, is damaged, cracked or broken to avoid any injury.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TUNAI and its affiliates and are compatible with your phone model. TUNAI and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.