 


## PH20 TV QUICK START GUIDE

Thanks for choosing our Tablet PC. This unit is a high performance, multi-functional tablet pc, will bring you enjoy entertainment. For using this unit properly, please read this guide carefully. Thank you!

### 一 . Outlook & button description

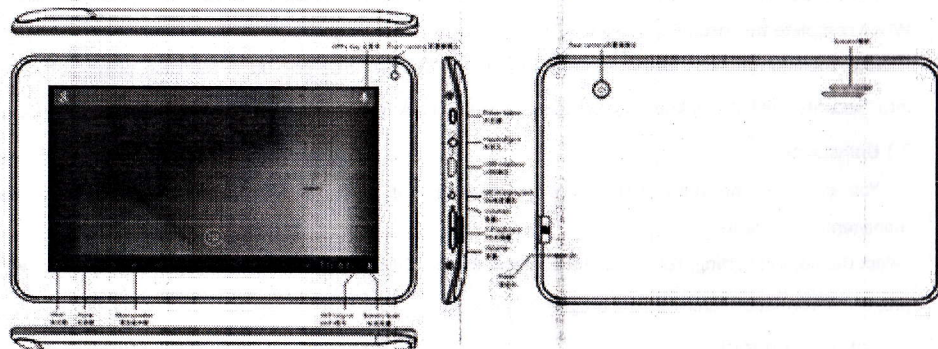

### 二 . Operating Instruction

#### 1 . Power on/off

**Power on:** Long press the power button 3S, the system will enter the boot process and displays the boot screen, about 50 seconds into the main screen interface. If do not operate, the system will be locked and into the standby status. For recovery, press the on/off key to start the system, then press the icon "🔒", slide to the icon "🔓" for unlock.

 
**Power off:** long press on/off key, appear the power off interface, press "ok" to power off.

#### 2 . WIFI connection

Press the icon "📶" on the desktop, into the WIFI interface, slide on/off icon to turn the WIFI on (the icon will change to the blue color) system will automatically scan and list all available WIFI network, choose the network to which you want to connect, enter the network, password if applicable. If there is no proper WIFI network, you may manually search for network in WIFI interface, press "SCAN" for network search.

#### 3 . File Manager

Click the icon "📁", enter "File Manager", and the default address is local disk. If users need to access the external TF card or USB disk, please select the folder under the corresponding path. As shown below:

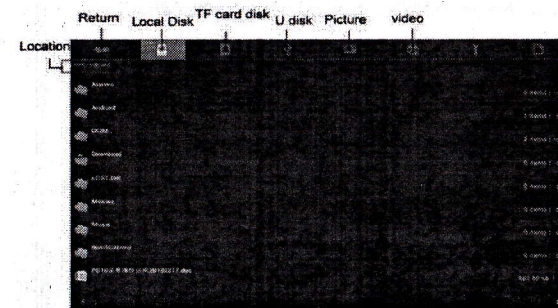

Note: USB disk need to be connected through the USB OTG cable !

#### 4 . Video

Support AVI, WMV, 3GP, MP5, RMVB and other video formats. There are several ways to play the video, one of which is to play in the system comes with "Super-HD player". Before playing, please copied the video file to the device memory, then open the "Super-HD player", and click to play video file, follow the prompts, then can play the video. User can also download a dedicated player installed.

 
#### 5 . Camera

Click the "camera" in the main menu, into the "camera" interface. Click the shoot button to shoot. You can also click the "camera" icon to switch to video mode.

#### 2-5. Wireless television receiver

This unit can support Wireless television receiver. User can choose your local TV format (ISDB-T) to watch TV.

Please make sure to extend the antenna. Press "📶", and press "🔍" to search the TV program.

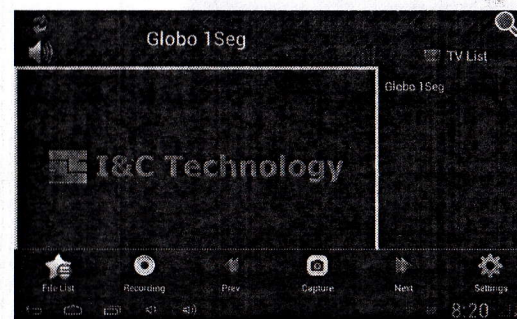

Note: If you can't get the program, click the play interface, then click the menu, and select area code (please select "📶" to choose your current location)

#### 6 . Connect to the computer



 
Use the USB connection equipment and PC, PC will recognize the two removable disk, Connection mode default is a synchronous mode, Not accessible at this moment, you can drag the status bar to pull up, appeared a notification interface; selection after loading, can access disk. The specific operation as follows:

Step 1: When the device is power on state, use the USB cable to connect with your computer.

Step 2: After a successful connection, drag the lower right corner of the "status bar" and slide up shows the notification bar. As shown below:



Step 3: In the notification bar, choose "USB connected" and click "Open the USB storage device", then click "OK" at this time loading is complete. As shown below:

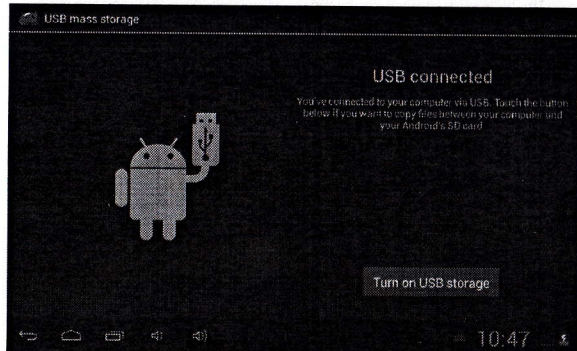

Note: Successfully connect the USB cable, the status bar have mount options!

## 7. Charging

Use the power adaptor to connect to the USB jack for charging. During the period of charging, when the unit is off, will appear the icon 'charging', when the unit is on, the battery icon will flicker.

## 8. Download, Installation & Uninstallation for Apps

### 1) Download

Download Android APP has many kinds of channels, if the downloaded directly using the tablet computer, Connect the WIFI, press "Market" for download the APK.

Also can use the computer to download the relevant websites, such as: <http://apk.hiapk.com/>.

### 2) Installation

Android APP installed in many different ways, such as through the USB installation, the third party application installation. Here we introduce to install the "file browser":

First, copy the APK to the file on the system, press the "File Manager", press the APK file for installation. When complete the installation, the icon will appear on the main desktop.

Note: the first time installation, the message "install blocked" may pop-up, in this case, press "setting", then into "security", tick the unknown sources, and then go back to "File manager" to continue for installation.

### 3) Uninstallation

You can use the third party software management tools or use the built-in Android application management software.

Select the apps in setting, You can see the installed Apps, Select the corresponding application, can view the program information, uninstall the program operation.

### 9. Software upgrade

Please visit the official website to download the software upgrade <http://www.link-create.com.cn/>

## 三. Frequently asked questions

### 1. The device cannot boot.

The device power is low or abnormal operation caused by not boot after shutdown. Please connect to power adaptor for some time and then try to boot again.

### 2. When the device crashes in the use process.

1) During the operation of environmental impact or improper operation caused the crash, or touch screen failure. You can long press the power button to force shutdown, and then boot. The device will function properly.

2) Installation of the software is not compatible with the device cause the device to instability, please uninstall the software or try to "restore factory settings".

### 3. WIFI connection cannot access the network.

1) The unit do not search WIFI signal, please press "SCAN", and make sure that have any wireless router opened within 10 meters.

2) when the device search the WIFI signal, but still cannot connected, please reboot the device or reboot the wireless router.

### 4. No sound from speaker

The volume setting is too low, please increase the volume or cancel the mute mode. Click the "settings" and choose "Sound", then click the "volume", you can adjust the volume

# Freelander™

## Warranty

### **STANDARD LIMITED WARRANTY**

Freelander LLC warrants that Freelander devices are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Tablet one year (360 days)

Battery six months (180days)

### **What is not covered?**

This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover:

- (1). defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress;
- (2). scratches, dents and cosmetic damage, unless caused by Freelander;
- (3). defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen;

- (4). defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by Freelanders;
- (5). defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by Freelanders;
- (6). defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source;
- (7). defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product;
- (8). Product used or purchased outside the United States.

**What are Freelanders' obligations?**

During the applicable warranty period, Freelanders will provide customers remote assistance, repair parts or help customers to return the products according to the detailed product problem. All these services will be free of charge.

**What must you do to obtain warranty service?**

To obtain warranty service under this limited warranty, customers should send an email to Freelanders Customer Service Center by [service@link-create.com.cn](mailto:service@link-create.com.cn). We will reply within 2 business days.