

Freelander

MID user manual

Contents

SAFE AND EFFICIENT OPERATION GUIDE	3
1. THE TABLET APPEARANCE & KEYS	4
SURFACE APPEARANCE & INTRODUCE	4
KEYS	5
2.MAIN INTERFACE OPERATION AND SETTINGS	6
MAIN INTERFACE FUNCTIONS	6
SETTINGS.....	9
3.MANAGING APPLICATIONS	21
4.MARKET	25
5.BROWSER	26
6.CAMERA	28
7. OPTIONAL CONNECTIONS	33
8.SPECIFICATIONS	35

 
Safe and efficient operation guide

For safety, effective use before using please read the following information.

- ◆ In the use of T-Flash card of files, Please do not pull out card, So as to avoid the storage card or device damage.
- ◆ When in use headphones, Please ensure that headphones volume in the acceptable range, In order to avoid damage of your hearing.
- ◆ Don't let your device and accessories to contact liquid or in damp environment.
- ◆ Don't let your device in the temperature too high or low environment.
- ◆ Don't let your device in the flame, lit cigars or cigarettes beside.
- ◆ Don't give device painted.
- ◆ Don't drop or throw device.
- ◆ Don't attempt to take apart the device, Don't unilaterally repair device and accessories.
- ◆ This device of charging voltage is 5.0 V. Please confirm before use.
- ◆ Don't use any non designated charger. Otherwise you will have the potential risk.
- ◆ Only use the cloth of small wet or antistatic to wipe device. Don't use the cloth of dry or Static Electricity to wipe device.
- ◆ Because of LCD etc unit belongs to the fragile parts, Note Keeping, Don't make Hit or powerful extrusion.
- ◆ Don't let your children play with device or accessories. Children are likely to cause damage to themselves or others, And maybe damaged device or accessories.
- ◆ Please don't optional unload system of application, So as to avoid the device or part of the function can't be used.
- ◆ The adapter don't contact water droplets, Far away the vase and filled with liquid items.

1. The tablet appearance & Keys

◆ Surface appearance & Introduction

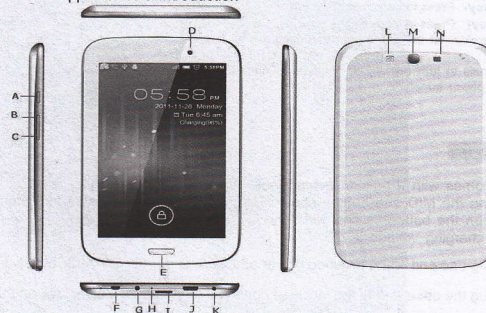

- A: Power
- B: Volume +
- C: Volume -
- D: Front camera
- E: Home button
- F: USB OTG
- G: Earphone jack
- H: Reset
- I: T-flash card slot
- J: Mini HDMI
- K: DC jack
- L: Flash LED
- M: Back camera
- N: MIC

KEYS

Power: Press to turn the MID on, or to turn the screen on/off.

Press and hold to access the power off menu.

Volume+ key: Press to decrease the volume

Volume- key: Press to increase the volume

(Press power+Vol- at the same time can capture the screen.)

Reset : Press to turn off MID. If equipment don't use for a long time or abnormality, please disconnect the power supply.

Battery charging

The MID comes with a built-in rechargeable lithium-polymer battery.

Before using the MID, the battery should be charged fully. The status indicator will light green when the battery is charged fully.

The MID charging voltage is 5.0 V.

 
1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the power jack on the MID.
3. Disconnect the power adapter when the MID is fully charged.

! The battery used in this device may present a fire or chemical burn if mistreated. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

2.Main Interface Operation and Settings

✧ Unlocking the screen

When the screen turns off, you will have to unlock the screen when you turn it back on.

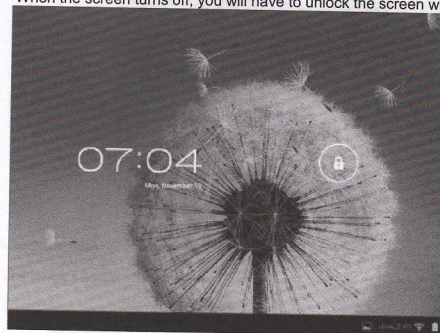


Click and hold the "Lock" icon to the right to unlock the screen.

Get into main interface after unlock the MID, shows the using in main interface below, includes shortcuts creation and deleting, interfaces switch, wallpapers switch, taskbar, settings, etc.

✧ Main Interface Functions


As the picture below, it shows main interfaces. There are 5 pages, click and drag to switch pages, users can let the pages personalized, for example: put all games shortcuts into one page, let it be the games page.

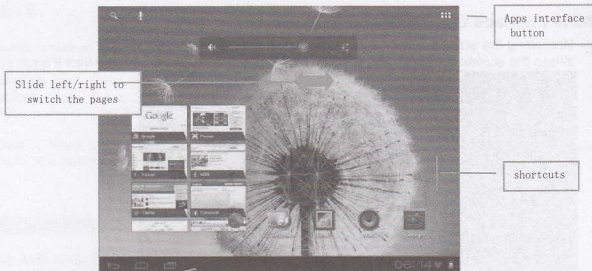 


notice & current tasks

Click Apps interface button to switch the main interface and Apps interface, the Apps interface shows all the installed applications.

 
Create shortcuts of the Apps which frequently used. Click and hold the icon of App, page turn to main interface, then drag this icon to the position you want.

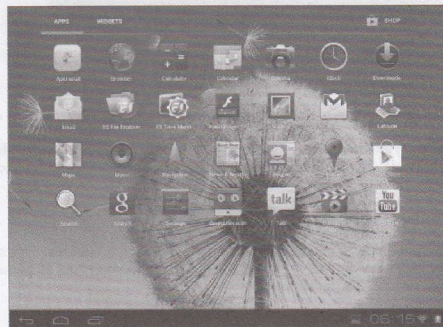

 Click and drag the shortcut into "Remove" area to delete it.

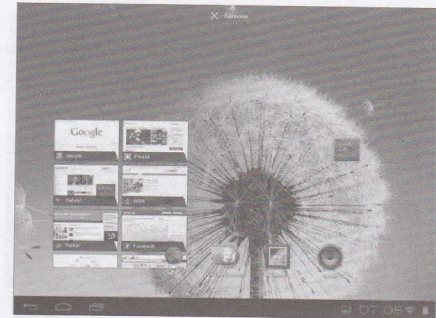


 Click lower right corner to show the taskbar interface, it shows current system time, battery status, Wi-Fi status, Apps, USB connection, etc.

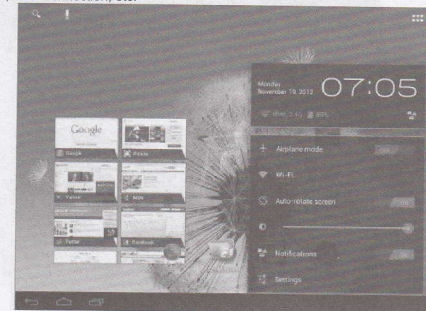

Settings

 
In settings, you can change the items you want: wireless internet connect, sound, brightness, language, applications management, etc.

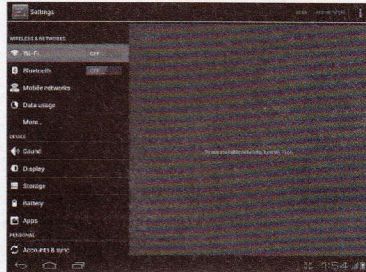


Wireless & networks

Wi-Fi: Find this function

 
1. Click "settings" -> Wi-Fi -> Turn on Wi-Fi"

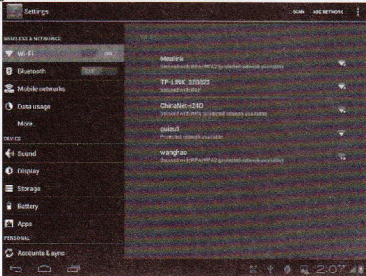

 2. Slide the button to "ON", MID will scan all the available networks.
Notice Press "Menu" button -> Advanced, can check the Mac/IP address, etc.
3. Click the network you want to connect.
4. Input password if it needs, then click "connect"

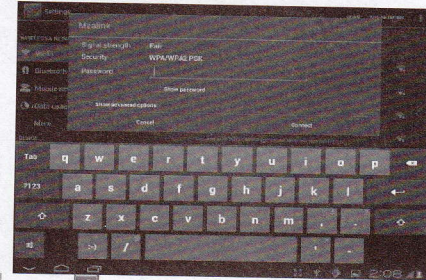

 Bluetooth: "settings" -> wireless & network -> Bluetooth"

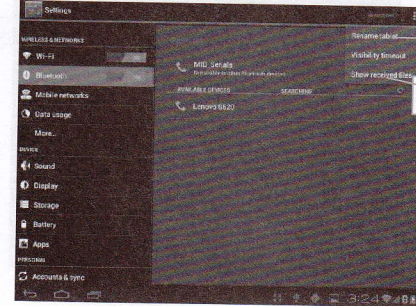

Click this item to input the name you want

 
 
Click this item to let this device can be found by other

Connect new devices:

1. **Notice:** Bluetooth devices have specific function, please refer to their instructions.
2. Click "settings" -> wireless & network -> Bluetooth settings"
3. Please click Bluetooth, and slide the button to "ON".
4. MID will automatically scan the devices around, and then click the device you want to connect.
5. Input password (for example: 0000) to connect.


Mobile network

Click "settings" -> Mobile network -> Mobile network", modify the settings of the 3G function if needing.

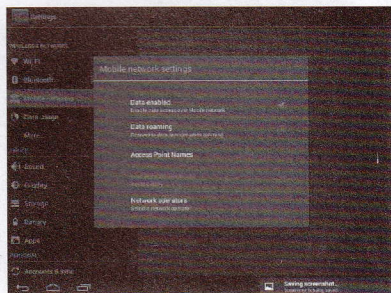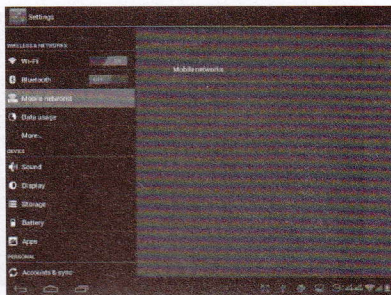

Data usage

 
Click "settings" → "Data usage", this function shows the flow of 3G network.

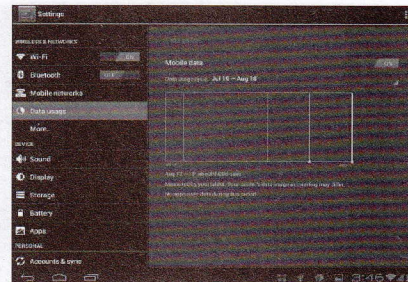

More

Click "settings" → "More", this interface has 2 functions to choose:

 1. Airplane mode
2. VPN (Use Virtual Private Network after set password)

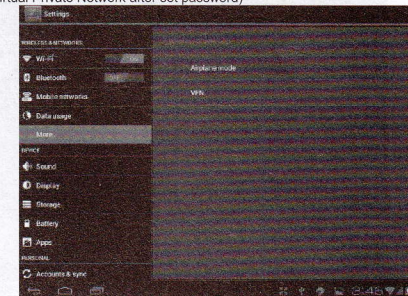


Sound

Click "settings" → "Sound"

 This interface let user adjust the volume relative items, for example, silent mode, volume, etc.




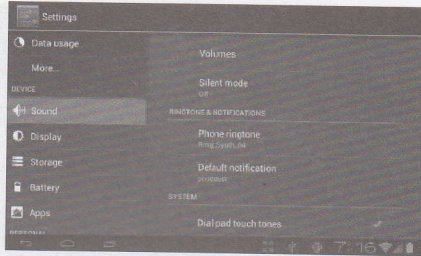

Display

Click "settings" -> "Display"

 
This interface let user adjust brightness, wallpaper, sleep settings, etc.

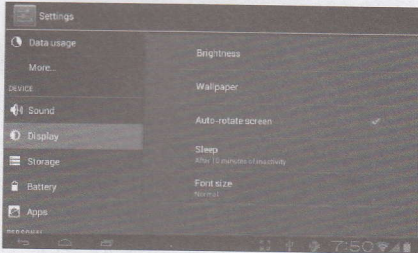

Storage

Click "settings" -> "Storage"

 
This interface shows the information of MID storage like internal/external SD card.

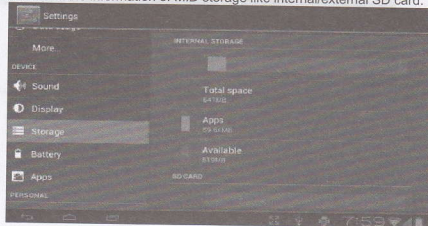

Battery

Click "settings" -> "Battery"

 
This interface shows the information of battery status and charging status.

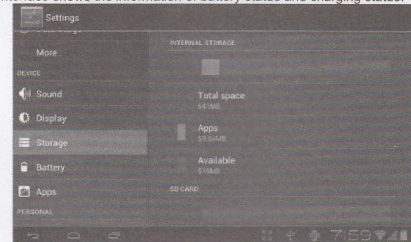

Apps

Click "settings" -> "Apps"

 
This interface shows all the Apps. information.

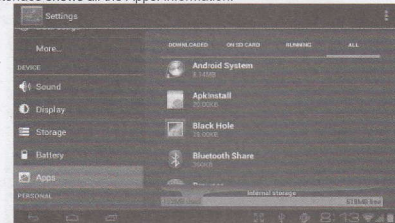


Accounts & sync

Click "settings" -> "Accounts & sync"

 Click "Add Account" to add user account into MID.

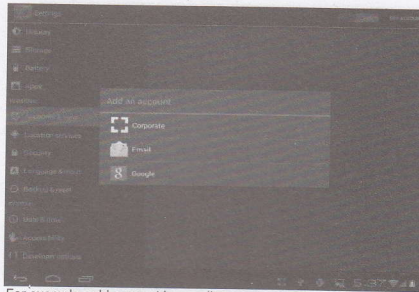


For example, add account by email:

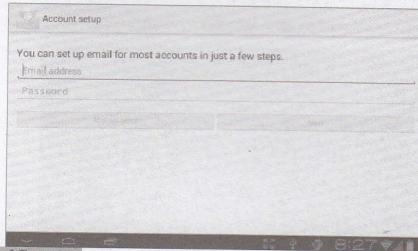 

Location & Services

Click "settings" → "Location & services"

 
Turn on "Google's location service", can get the location in google maps by using the MID IP address.

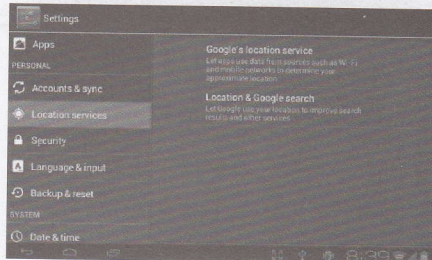

Security

Click "settings" → "Security"

 
This function let user set passwords of some situations.

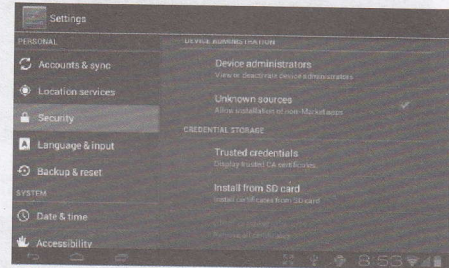

Language & Input

Click "settings" → "Language & Input"

 
This function let user choose language and keyboard.

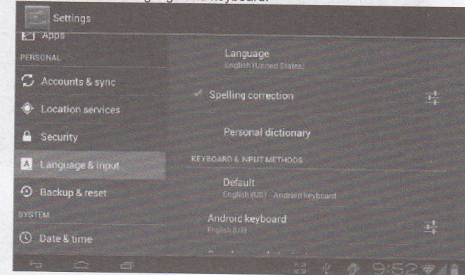

Backup & Reset

Click "settings" → "Backup & Reset"

 This function let user backup the data and reset the data of MID.

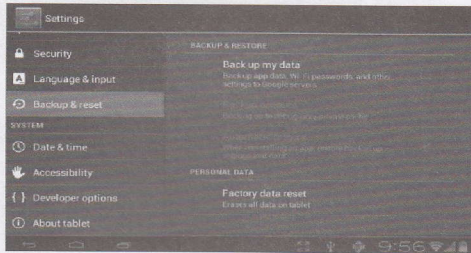


Date & time



Click "settings" -> "Date & Time"

In this interface, can set date, time zone, time format, etc.

 "Automatic date & time" function can calibrate the time automatically when connect to the internet.

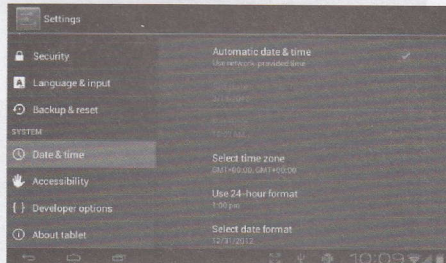


Accessibility



Click "settings" -> "Accessibility"

 In this function, user can adjust some system items like large text, auto-rotate screen, etc.

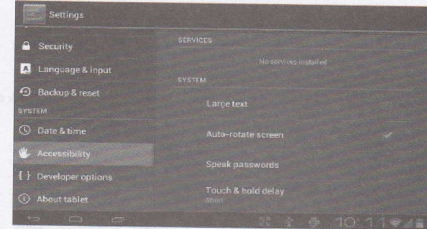


Developer options



Click "settings" -> "Developer options"

 This function let user choose USB debugging and stay awake mode, etc.

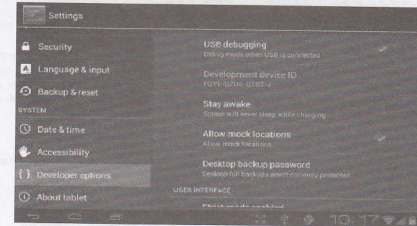


About tablet



Click "settings" -> "About tablet"

 
In this interface, shows status of battery and network, firmware version, system version, etc.

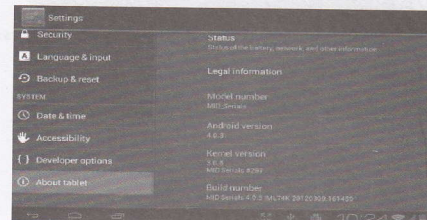


3.Managing Applications


The applications on MID is .apk format like the .exe in PC. It includes native and user installing


3.1 Open native apps

Click higher right corner icon  to open the home screen to show all the apps on MID, click the apps icon to open it.

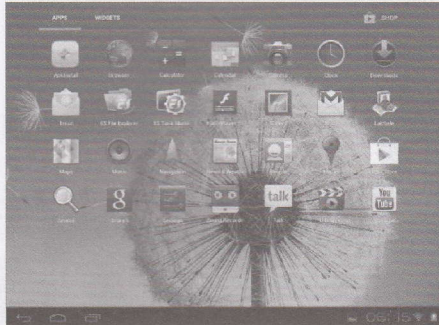 


3.2 Open/close background running apps

Click lower left corner icon  to show the background running apps. Click the apps can let it turn to current running.

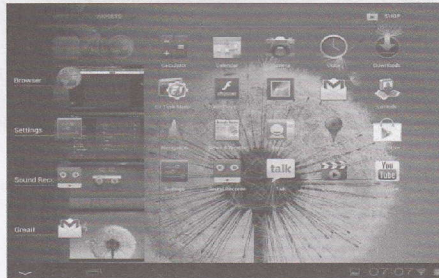 

Drag left/right to close the apps.

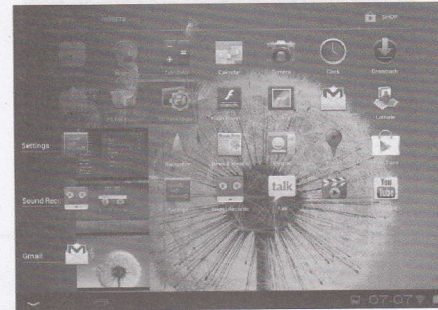 


3.3 Get the apps from market and install into MID

User can download and install apps from market. Go to the "MARKET" section for reference.


3.4 Copy the apps from PC

User can search and download .apk file by PC, and then connect the MID using USB cable. Turn on USB storage, copy the APK files into MID, then exit from PC.

 
Open the "ES file explorer" to view all the folders of MID, find the folder copy from PC.

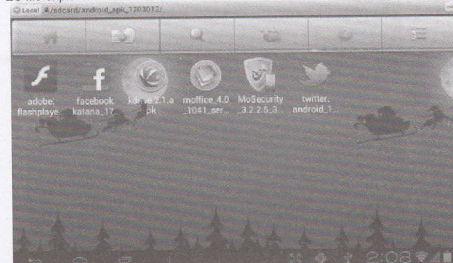

 Click the apps to popup the installing interface, for example, click twitter :

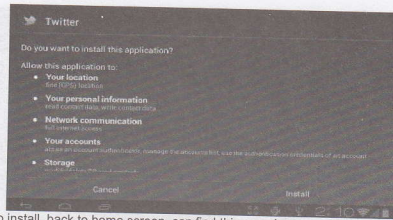


 Click "Install" to install, back to home screen, can find this apps icon.

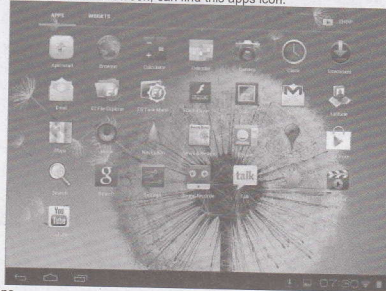


3.5 Uninstalling apps

 
Click settings→apps:

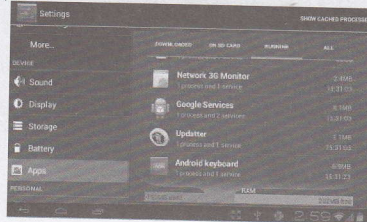


Click the apps:

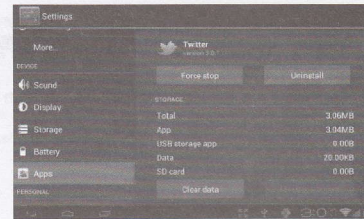 

Click "Uninstall"

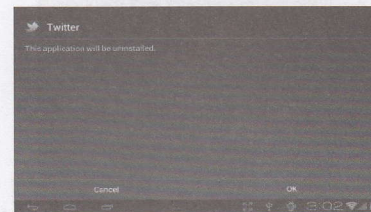 

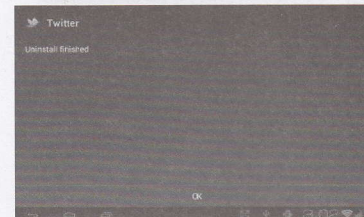 

Click "OK", and then finished the uninstalling.

 


4. Market

Market is owned by Google android, user can free download apps, themes, and games etc. Before use, please ensure that the network connection is normal.

Find this function

1. Click "Program interface"  -> 
2. Login market uses google account.
3. Search the apps you want.

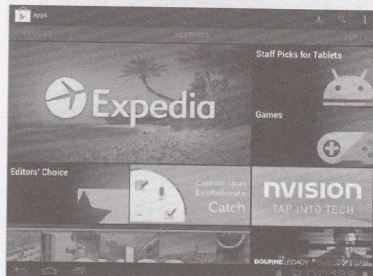




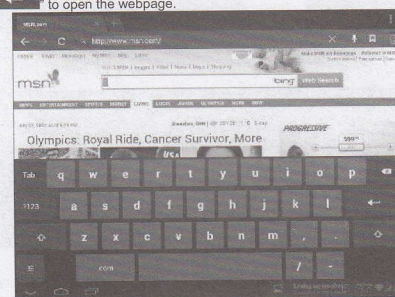 
4. There are some application classifications in main menu to choose to find the apps easily.


5. Browser

 
Before use the browser, please ensure the network connection is normal.




Find this function

1. Click "Program interface"  -> 
2. Click address bar will automatically popup the keyboard to let user input web address(URL).
3. Touch  to open the webpage.

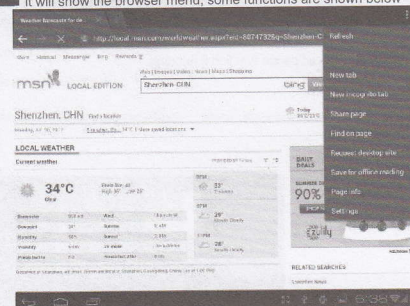

4. Press  it will show the browser menu, some functions are shown below





 
- Click the icon  on the top bar to add a new webpage.
- Click the icon  on the right corner of the cutdown webpage to close it.
- Click the icon  on the top bar to go to the bookmarks interface.



Use the bookmarks/history/saved pages function if needing.

6.Camera

Find this function Click "Program interface"  -> Camera 
(Some apps has the web camera function, for example skype)

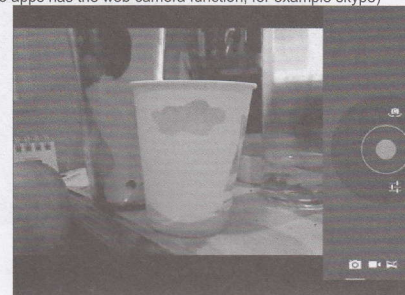

Take photo/video/save



Camera status: photo



Camera status: video



Camera status: Capture panorama

 


Switch to front/back camera




Settings: Click to adjust the camera effect: (some differences between photo/video mode)
Photo mode:


White balance:

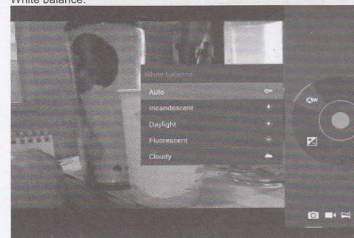


Exposure value:

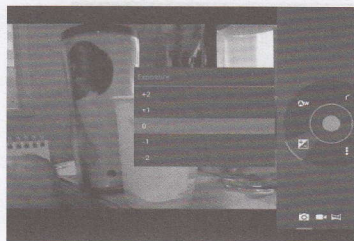 


Other settings:

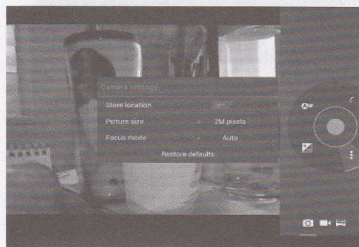 

Video mode:

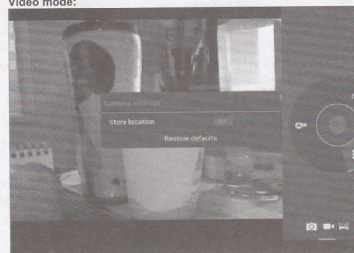 

Capture panorama mode:

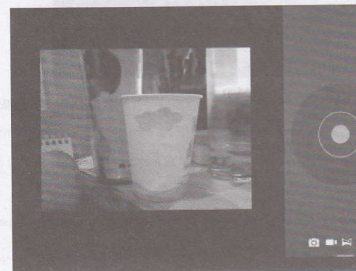 

7.OPTIONAL CONNECTIONS

7.1 Connecting to a computer

Connect the MID to computer to transfer files

7.1.1 Connect your MID to the computer

 
With the included USB cable:

※Plug the small end of cable into the USB2.0 Hi-speed connector of the MID

※Plug the large end of the cable into an available USB 2.0 Hi-speed port on the PC.

7.1.2 When your MID is connected, a USB icon will appear in the Notification bar.

Click the notification bar to show the USB options:

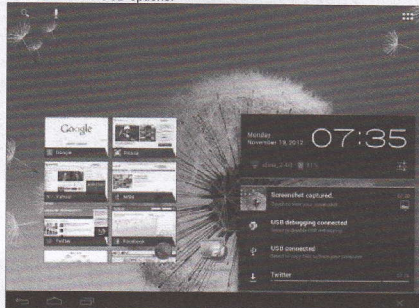

7.1.3 Mount the storage driver

※Touch USB connected(Internal)to mount the MID's built-in storage, then touch Mount when prompted to confirm. When mounted, you can copy files to/from your PC to MID.

※If a memory card is installed, touch USB connected(External)to mount the card, then touch Mount when prompted to confirm. When mounted, you can copy files to/from the PC to it.

Your MID will be recognized by the PC as a removable storage driver. Drag and drop files between MID and the PC.

7.2 Connecting to a TV

Connect to a TV to enjoy your MID from the comfort of your living room. An HDMI cable (Type A-to-Type C) is required to connect the MID to a TV.

7.2.1 Plug the small end of the HDMI cable into the mini HDMI connector of the MID.

7.2.2 Plug the large end of the HDMI cable into the HDMI port on the TV.

7.2.3 Turn on the TV, and set its display mode to the HDMI port that the MID is connect to.

The MID's display will be output to the TV screen.

7.3 Connecting Headphones

Connect a pair of headphones(or earphones) to the MID to enjoy media in private.

 
Lower the volume level of the MID before connecting headphones, and then slowly raise the volume to a comfortable listening level.

※The headphones must have a 3.5mm (1/8 in) plug.

※When headphones are connected, speaker output will be disabled automatically.

7.4 Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the MID.

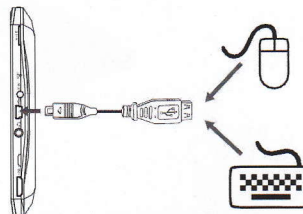

You may also use this connection to add a mouse to the MID.

The adapter supports one connection at a time.

To use a keyboard and mouse simultaneously you will need to add an external USB hub.

7.5 Connecting a Storage Device

Use the included USB full-size(Type A)adapter to connect a storage device to the MID(e.g. a USB flash memory drive)

8. Specifications

Processor	Samsung 4412
R M	2GB DDR3
Storage	16GB iNand Flash built-in microSD card slot(max.32GB supported)
Display	7" 16:9 TFT LCD(1280*800)
Wi-Fi Networking	IEEE 802.11 b/g/n
Video Output	Mini HDMI, type C(1080p and 720p supported)
Audio Output	3.5mm headphone
Touch Screen	Capacitance Touch Screen
Additional Features	Front facing camera(0.3MP) Back facing camera(2MP/5MP)
Operating System	Android 4.0
Power	Rechargeable Li-poly battery Power adapter (DC 5V)