 


神行者® | Freelanders

SHENZHEN LINK-CREATE TECHNOLOGY CO., LTD.


神行者® | Freelandr I30 Smart phone

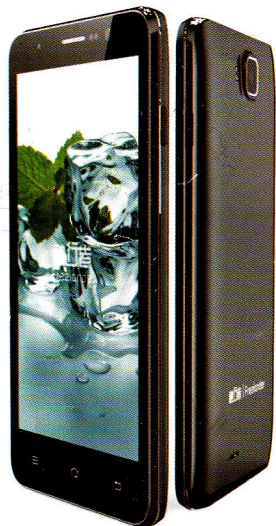

Please scan here for
more information.

5.0 Inch HD IPS screen
Android 4.2 Operation System
MTK quad-core processor
2.0 mega-pixel front camera and
8.0 mega-pixel rear camera
Dual SIM card
3G+Wi-Fi+FM+GPS+Bluetooth
Full Functions

 I. Appearance, Keys and Icons

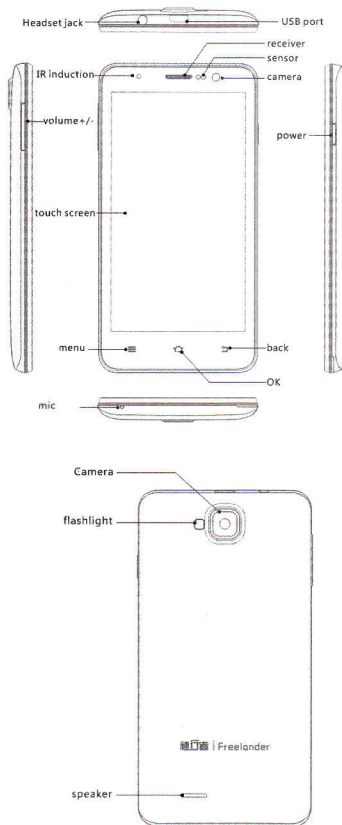


II. Specifications

Freelandr I30 Smart phone	
Processor	MT6589 Quad-core
Operating system	Android 4.2
Basic frequency	1.2GHz
Buffer memory	1GB RAM
Internal memory	4GB ROM
Resolution	1280*720
Display screen	5"High-definition HD IPS screen
Touch screen	Capacitive screen supporting 5 touch points
Camera	2.0 mega pixel (front)+8.0 mega pixel (rear), with flashlight
SIM card	Support dual SIM card
Radio frequency	2G:900,1800;WCDMA: 2100
Sensor	Gravitational, light, geomagnetism & gyroscope
GPS/FM/WIFI/BT	GPS,FM,WIFI(IEEE 802.11 n/b/g) , WIFI Direct,BT(2.1+EDR)
Audio format	Support MP3、WMA、WAV、OGG、AMR、etc.
Video format	Support MPEG4、WMV、3GP、MKV、RMVB、etc. 1080P high-definition video
Image format	Support BMP、JPG、PNG、GIF、etc.
System language	Simplified Chinese, English, etc.
Application	A great quantity of applications, such as QQ, Office, etc.
External memory card	TF card
Firmware upgrade	Support firmware upgrade and function extension
Battery capacity	2000MAH
USB port	Micro 5PIN
Headset jack	3.5mm standard headphone jack
Operating temperature	0℃~+50℃


III. How to Use Your Device?

1. Turn on Your Device

 
Step 1: Remove the back cover.

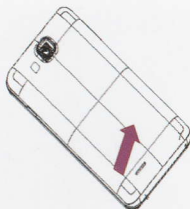

 
Step 2: Install SIM card and T-Flash card.

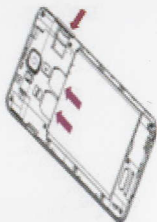

 Step 3: Install the battery.

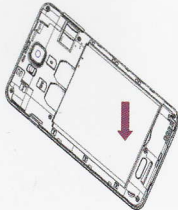

 Step 4: Replace the back cover.

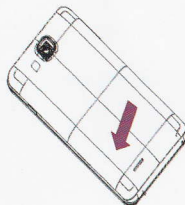


Step 5: Long press power button for 3~5 seconds to turn on your device.

2. How to Lock/Unlock the Screen?

2.1 Press power button to wake up or lock the screen.

 2.2 In locked status, slide  to  to unlock the screen.

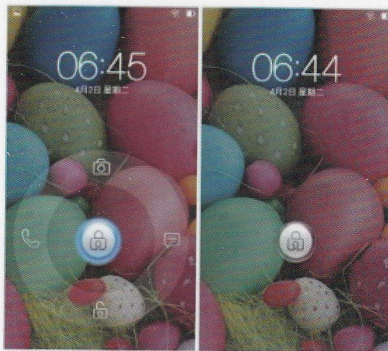

3. Home Screen

3.1 In order to add new icons to home screen, please long tap application icons or widgets and drag them to home screen.

 
3.2 In order to remove icons from home screen, please long tap the icons until your device vibrates, and then drag them to recycle bin.



4. Screen Keyboard

4.1 The screen keypad automatically appears when you click text or number input field.

4.2 You may tap back key so that the screen keyboard disappears.

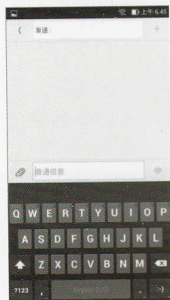

5. Make a Call



5.1 Tap  on the home screen to dial the number.

5.2 You may also tap "Contacts", "E-Mail", "SMS" or any phone number shown in your device to make a call.



6. Camera

6.1 Tap menu key to view all applications, and select camera

6.2 Click  to select photo mode. Click  to take photos.

6.3 Click  to select video mode. Click  to start video recording.



7. Viewing Photos

7.1 Click  to view photos and videos taken by your device.

7.2 You may set photos as wallpapers or contact photos, or share photos with your friends.



8 Browsing Web Pages

8.1 Select settings > network settings > wireless network, select available WLAN and enable mobile network for data access

 
8.2 Turn on the browser, click address field and enter the website address you want to visit.




9. Playing Music

9.1 Please firstly install T-Flash card into your device so as to play music files in it.

9.2 Select a music file and long tap it so that the menu pops up. Select play to enjoy the music.

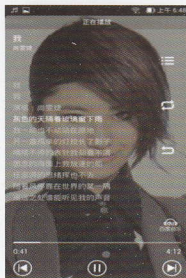

10. Playing Videos

10.1 Select a video you want to play and click  to watch the video.

 
10.2 During video playing, you may drag the playhead along the progress bar to skip to any point in a video.




IV. How to Connect to Wi-Fi Network?

Step 1. Select "settings" on the home screen.

Step 2. Click WLAN > Wi-Fi, and your device will start searching available Wi-Fi networks. Please refer to below photo.

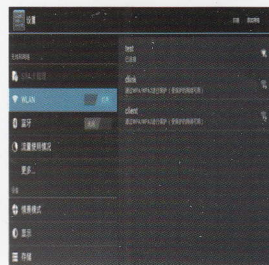

 Step 3. Select an available Wi-Fi network, enter password if it is required and then click "done". Please refer to below photo.

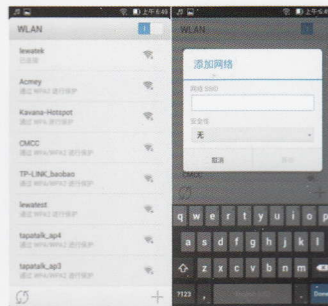

V. FAQ

1. The device fails to start up.

1.1 Check whether there is low battery level;

1.2 Check whether the device is powered off due to improper

operation.

In above-mentioned circumstances, please connect your device to power supply to charge the battery, and please wait a while to power on the device. In case it fails to start up again, please replace a new battery and try again.

2. The device suddenly crashes during operation.

2.1 If the device crashes or the touch screen is irresponsive due to improper operation, please long press power button to shut down the device. Turn on the device again for normal operation.

2.2 If the device fails to operate stably because of incompatible software, please uninstall the software or restore factory setting.

2.3 Please take out the battery to shut down the device and install the battery again to power on the device.

3. The device cannot get connected to network via Wi-Fi access.

3.1 Please click "search" to find Wi-Fi signals, and in case there is no Wi-Fi signal, please check whether there is any wireless router operating at a distance of no less than 10 meters.

3.2 In case Wi-Fi signal has been found but the device cannot get connected to network after entering account number, please reboot the device and try Wi-Fi connection again; If fails again, please restart your wireless router.

4. No sound.

Please check if the volume is set too low or muted. If so, please increase the volume or inactivate mute mode.

4.2 Click "setting" > "sound" > "volume", and slide along the volume bar to turn up the volume.

5. For any other questions, please contact our customer service center by sending e-mail to service@link-create.com.cn and you will get the reply within 48 hours (excluding public holidays).

Disclaimer

Our company has the final power of interpretation of this user manual. This user manual is for reference only, of which some information may be different from actual product.