

- Time will be work on after turning on the player.
- 5 USB Disconnection:
- a. Double click the icon of "delete hardware safely" (green arrow at the right corner)
  - b. Choose "stop" in the dialog frame of "delete hardware safely". the hardware will be deleted safely, and then choose "confirm", deleting safely. "The USB mass storage" can be removed from the system safely.
  - c. Choose the device you want to stop, and then choose "confirm", deleting safely. "The USB mass storage" can be removed from the system safely.
  - d. Close the dialog frame of "Delete hardware safely".
  - e. Disconnect player with PC.

**VI. Trouble-shooting**

Can not turn on	Check if the battery is short of power, Please charge the player
Can not download or upload files normally	<ol style="list-style-type: none"> <li>1. Check if the USB cable between the player and the PC is in good condition and connect it correctly</li> <li>2. Check if the installation of the driver is proper (under Windows 98).</li> <li>3. Check if the player has enough space to store Video files.</li> </ol>

## Camera Watch Manual

### I. Preface

Thank you for purchasing this product. Under the guidance of this manual, you may use this item and the subsidiary application procedure properly. Please read the manual carefully before using, so that you can operate it correctly and freely.

### II. Functions summary:

Video resolution: 640\*480, 30fps  
Video Format: AVI

Photo Format: JPG

USB Transfer: 1.1(Hs)

Memory: 312MB/1GB/2GB/4GB/8GB/16GB/32GB (Optional)  
Built-in Li-battery for continuous work

Supporting audio recording function

No need for driver installation if the operating system is Windows ME/2000/XP/Mac OS 9.2.2 or above (windows98 is excepted)  
PC camera: It can be used as standard PC camera, which is required to install attached driver.

### III. Low power and charge

 
1. This camera watch is built-in rechargeable Lithium battery. When the power of the battery nearly uses up, please charge the player by the USB cable connected with computer or by the charger. If connected properly, the camera watch will be on red light for a long time with blue light flashing, indicating it is charging. When

The blue light is at the constant light, the power has been sufficient.

At this moment, please stop charging.

2. If there is not enough power in recording video or taking photos, the blue light will be flashing, then the camera will power off automatically. The system will automatically save the file before power off in order to ensure the security of the document.

### IV. Appearance and Buttons

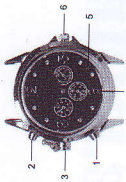

1. Play key: Turn on/off (long press), Record video (short press)
2. Photo key: Short press
3. USB port
4. Camera
5. LED light
6. Time adjustment
7. Combine Reset Key: Please press the Photo key and do not leave, then press the Play key.

### V. Operation

1. Turn on: In power off mode, long press the PLAY key about two

Seconds until the LED light turns to be red and blue. Then the red light is off and the blue light keeps on, which means the camera watch is in the state of standby.

2. Turn off: In standby or video recording mode, Long press PLAY key, then the red light twinkles quickly for three times to turn off. In the standby mode, it will be off automatically; if there is no operation for 3 minutes.

3. Take Video: In standby mode, short press Play key, then the blue light flashing three times to be off, it means beginning to record video. In recording video, short press any key, the blue light will flash three times, suggesting that is taking video. In blue light flashing, short press Play key it will save the current video file and into the standby mode. (Remark: The player will automatically turn off when lack of disk space)

4. Take Photo: In the standby mode, short press the Photo key, then a red light flash once, which means it has got a photo, and save the photo as JPG format

5. Reset Key: Please press the combine reset key to restart if the system crashed. (Press and hold the Photo key, then press the Play key)

### VI. Driver Installation:

1. U-Disk Driver

Only for Windows98, please install the subsidiary CD driver and then restart the computer to active. No need for driver installation for Windows ME / 2000/ XP/ Mac OS 9.2.2 or above.

### 2. Camera Driver Installation

Put the subsidiary CD into the disk, then install camera driver (WDY\_020\_PC-Camera Setup.exe) to your computer.

### VI. Computer connection

1. Check your computer for USB port (You may find the USB port at the back instead of the front for some computers, please contact suppliers if necessary)

2. Use the subsidiary extension USB cable to connect with PC USB port, you can find the symbol of "removable disk" if connected properly. The camera watch starts working as a removable disk after connection; you can view video, transmit, copy, paste and delete data freely (video & audio files etc.). Bestfiles, unmusical file also can be saved.

### 3. PC Camera Function:

When the camera watch is in power off mode, connects the watch with computer via USB line after pressing photo key, the red light stays on after right connection. If you have installed driver, then you will find "Standard Camera" device in "My Pc" and the watch can be used as a camera at the moment.

4. Revision of video date & time

Connect the camera with computer, open the subsidiary tool for date updating (Write time.exe), press "Start Updating" button, and the tool will update the system time automatically to the camera watch, and then disconnect with the PC. The refreshed